




## **30" DUAL-FUEL FREESTANDING RANGE**

### **MODELS:**

KFDC500JSC01 (Scorched Orange)


# BURNER BOX PARTS

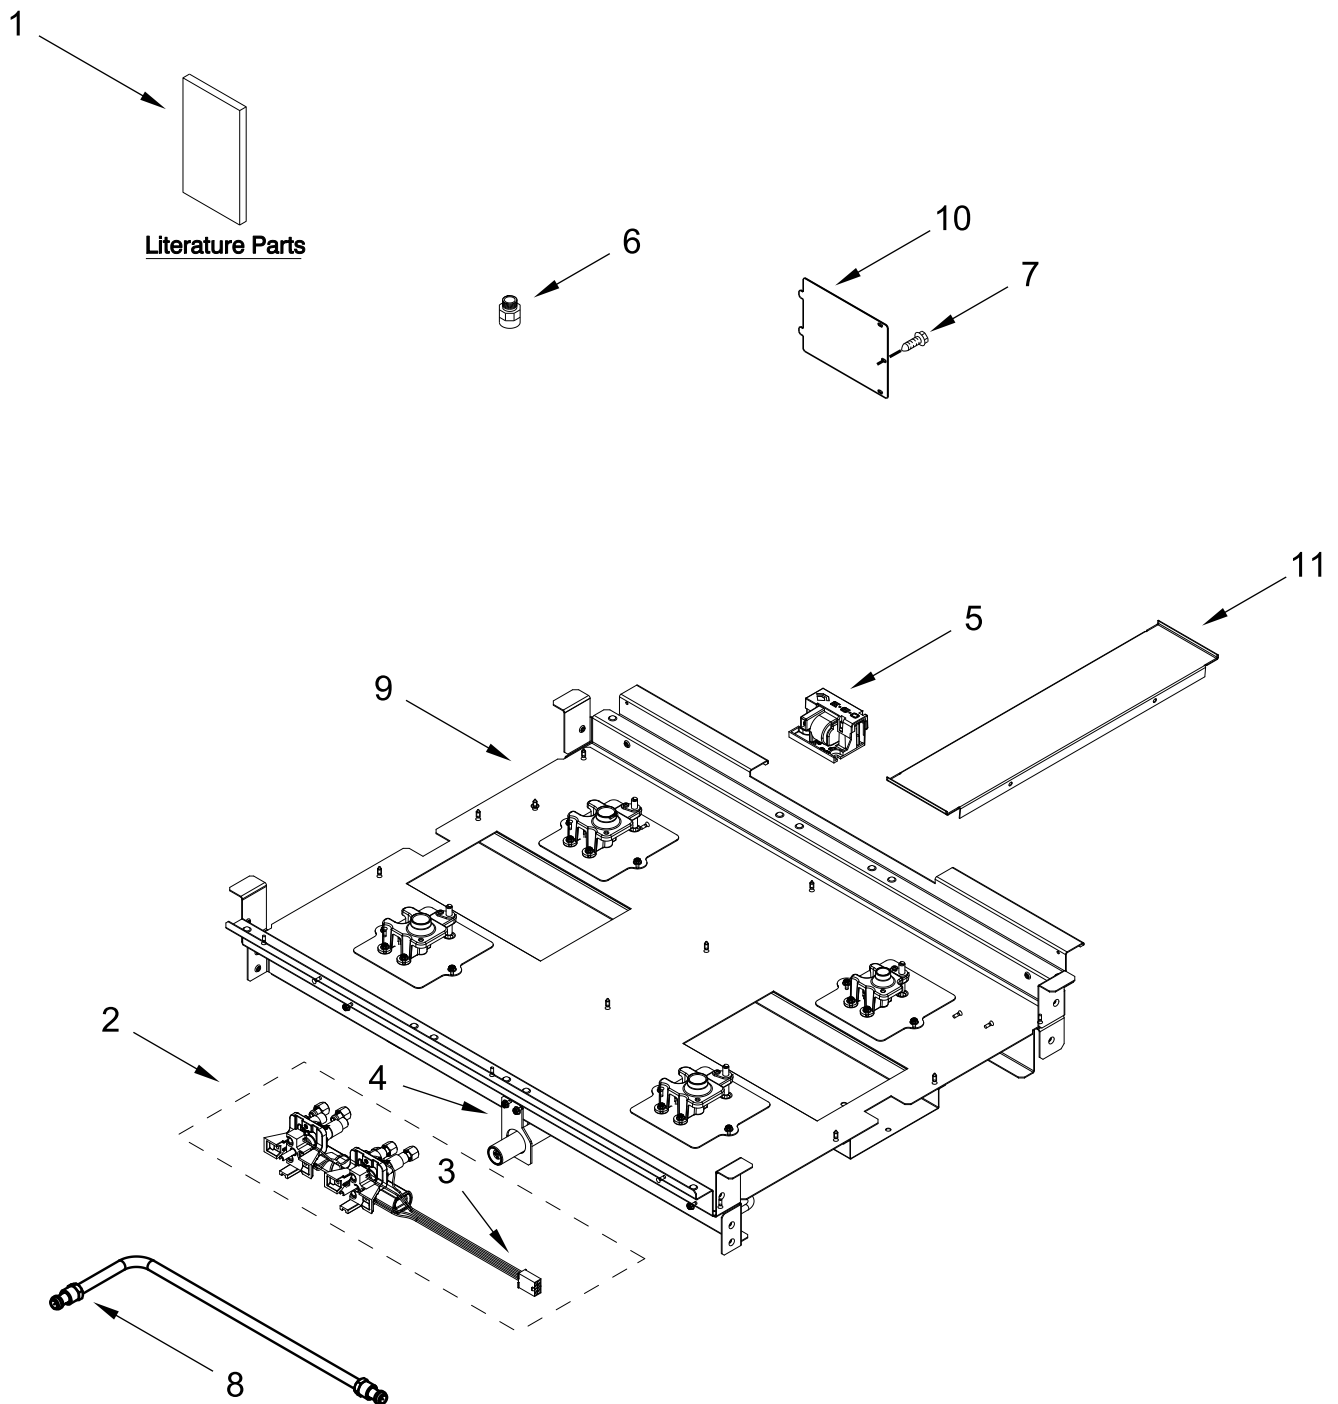

# BURNER BOX PARTS

| <u>Illus.</u><br><u>No.</u> | <u>Part No.</u> | <u>Description</u>              | <u>Illus.</u><br><u>No.</u> | <u>Part No.</u> | <u>Description</u>                   | <u>Illus.</u><br><u>No.</u> | <u>Part No.</u> | <u>Description</u>                 |
|-----------------------------|-----------------|---------------------------------|-----------------------------|-----------------|--------------------------------------|-----------------------------|-----------------|------------------------------------|
| 1                           |                 | Literature Parts                | 2                           | W10892994       | Assembly, Valve<br>Manifold          | 10                          | W10115843       | Cover, Ignition                    |
|                             | W11114331       | Guide, Use And Care             |                             |                 | (Left Front, Left Rear)              | 11                          | W11121361       | Filler, Cooktop                    |
|                             | W11508847       | Instructions,<br>Installation   |                             | W10892997       | Assembly, Valve<br>Manifold          |                             |                 | FOLLOWING PARTS<br>NOT ILLUSTRATED |
|                             | W11184759       | Guide, Internet<br>Connectivity |                             |                 | (Right Front, Right<br>Rear)         |                             | W11200301       | Harness, Main (30")                |
|                             | W11202391       | Diagram, Wiring<br>(Cooktop)    |                             |                 |                                      |                             | W11200328       | Harness, Cooktop                   |
|                             | W11202385       | Diagram, Wiring<br>(Oven)       | 3                           | W10903728       | Switch, Harness                      |                             | W10780278       | Harness, Door Lock                 |
|                             | W11202289       | Sheet, Tech                     | 4                           | W11121194       | Bracket, Manifold                    |                             | W11200325       | Harness,<br>Communication          |
|                             | W11114332       | Guide, Quick Start              | 5                           | W11121317       | Module, Spark                        |                             | W11242785       | Harness, WIFI                      |
|                             |                 |                                 | 6                           | 4453116         | Adapter, Male                        |                             | 313438          | Clip, Harness                      |
|                             |                 |                                 | 7                           | 7101P426-60     | Screw                                |                             | W11212216       | Cord, Power                        |
|                             |                 |                                 | 8                           | W10892281       | Tube, Manifold Supply<br><br>(Left)  |                             | 9759877         | Retainer, Strain Relief            |
|                             |                 |                                 |                             | W10892292       | Tube, Manifold Supply<br><br>(Right) |                             | W10253333       | Bracket, Anti-Tip                  |
|                             |                 |                                 | 9                           |                 | Box, Burner (Not<br>Serviced)        |                             | 7101P485-60     | Screw, Anti-Tip Kit                |
|                             |                 |                                 |                             |                 |                                      |                             | W11238042       | Kit, LP Conversion                 |


# COOKTOP, BURNER AND GRATE PARTS

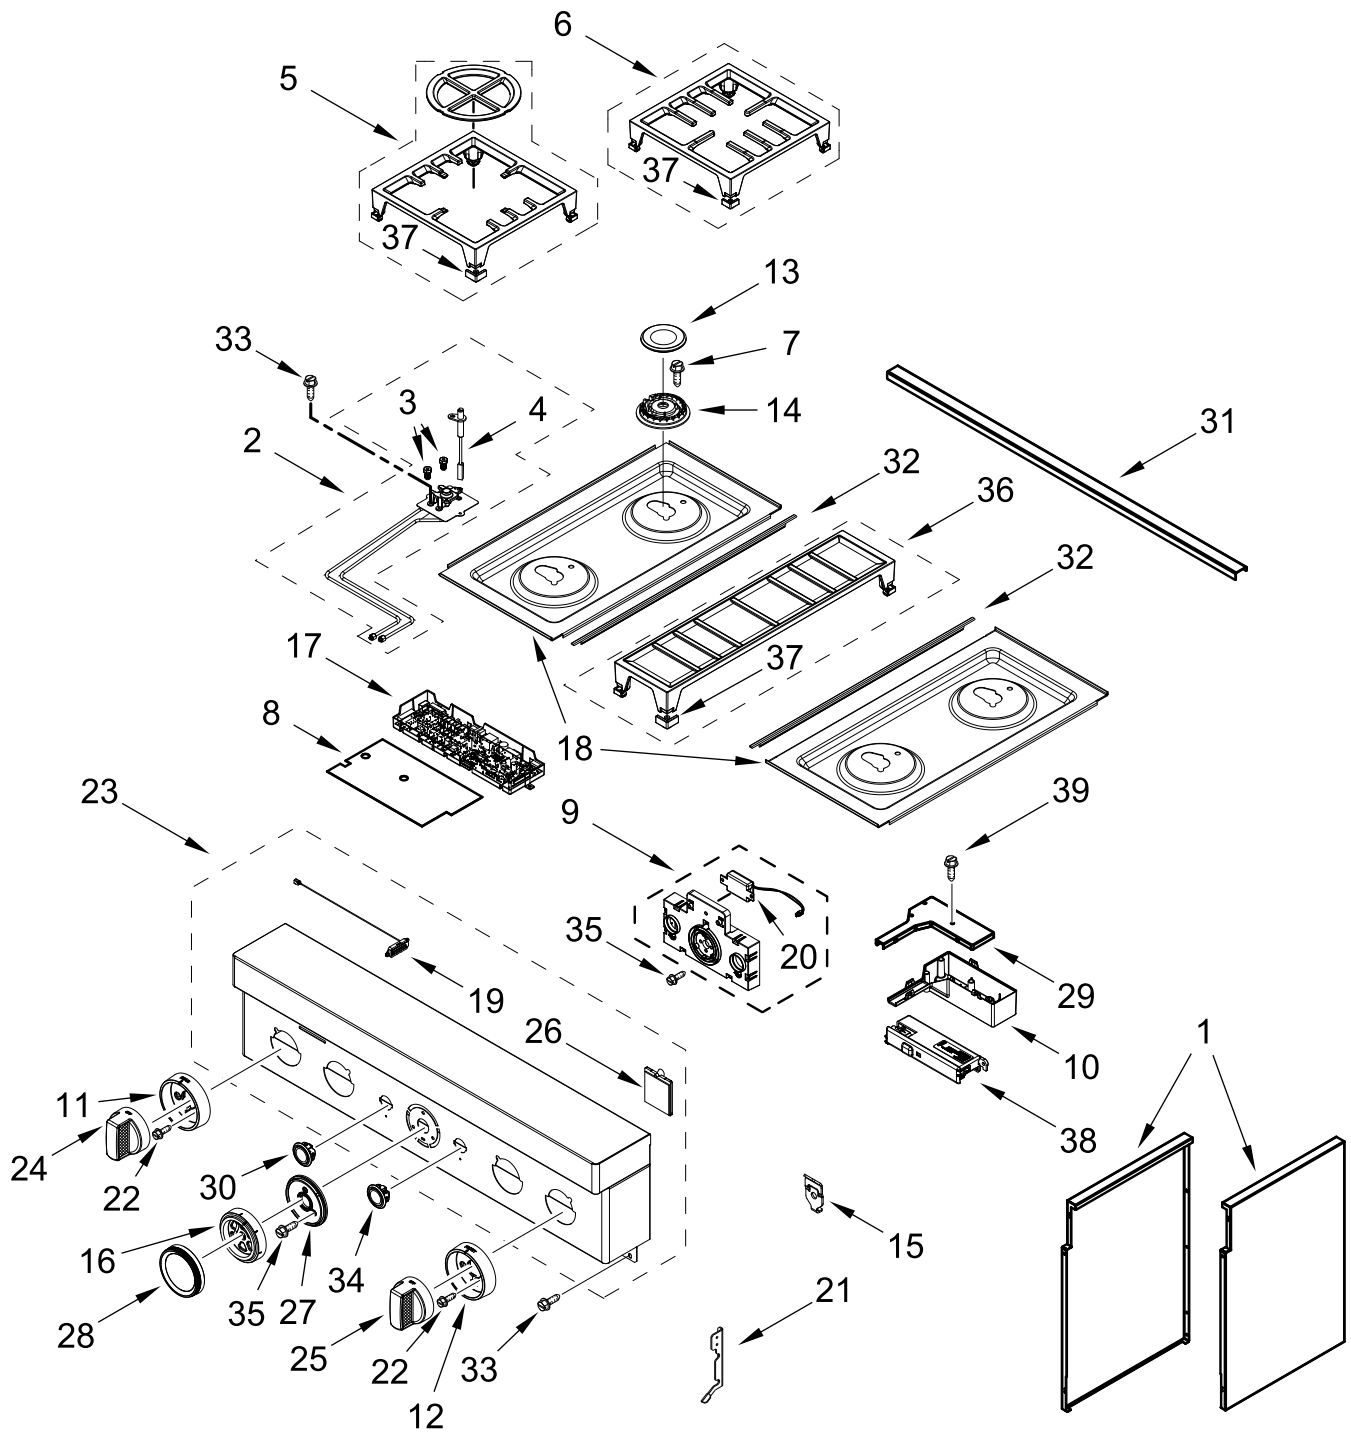

# COOKTOP, BURNER AND GRATE PARTS

| <u>Illus.</u><br><u>No.</u> | <u>Part No.</u> | <u>Description</u>                               | <u>Illus.</u><br><u>No.</u> | <u>Part No.</u> | <u>Description</u>                               | <u>Illus.</u><br><u>No.</u> | <u>Part No.</u> | <u>Description</u>               |
|-----------------------------|-----------------|--------------------------------------------------|-----------------------------|-----------------|--------------------------------------------------|-----------------------------|-----------------|----------------------------------|
| 1                           | W11106881       | Panel, Cabinet Side (Left)                       | 5                           | W11291183       | Burner, Grate (With Wok Ring)                    | 19                          | W11130078       | Antenna, WIFI                    |
|                             | W11106880       | Panel, Cabinet Side (Right)                      | 6                           | W11291179       | Burner, Grate                                    | 20                          | W10568405       | Assembly, Speaker                |
| 2                           | W10892774       | Assembly, Orifice Holder (Left Front)            | 7                           | W11323261       | Screw (8-18 X 1")                                | 21                          | W10130760       | Bracket, Moving Console (Left)   |
|                             | W10892484       | Assembly, Orifice Holder (Left Rear)             |                             | W11323309       | Screw (8-18 X 1/2")                              |                             | W10130759       | Bracket, Moving Console (Right)  |
|                             | W10892479       | Assembly, Orifice Holder (Right Front)           | 8                           | W11281269       | Barrier, Appliance Manager                       | 22                          | W11328357       | Screw                            |
|                             | W10892735       | Assembly, Orifice Holder (Right Rear)            | 9                           | W11436334       | Interface, User                                  | 23                          | W10877949       | Panel, Console                   |
| 3                           | W10892422       | Orifice, Main (17.4K) (Left Front, Right Front)  | 10                          | W11205795       | Cover, WIFI Outer                                | 24                          |                 | Knob, Single                     |
|                             | W10892419       | Orifice, Main (15K) (Left Rear)                  | 11                          | W10883433       | Bezel (Rear Burners)                             |                             | W10912166       | Stainless Knob, Dual             |
|                             | W10892435       | Orifice, Simmer (2.6K) (Left Front, Right Front) | 12                          | W10881642       | Bezel (Front Burners)                            | 25                          | W10883172       | Stainless                        |
|                             | W10892438       | Orifice, Simmer (5K) (Right Rear)                | 13                          |                 | Cap, Burner                                      | 26                          | W10896366       | Assembly, Light Pipe             |
| 4                           | W11238757       | Igniter (Left Front, Right Front)                |                             | W11121389       | Black (Set Of 4)                                 | 27                          |                 | Bezel, Oven                      |
|                             | W10892340       | Igniter (Left Rear)                              | 14                          | W10891746       | Spreader, Flame (High) (Left Front, Right Front) | 28                          | W11500871       | Stainless Knob, Oven Temperature |
|                             | W11114379       | Igniter (Right Rear)                             |                             | W10891974       | Spreader, Flame (Low) (Left Rear)                |                             | W11500868       | Stainless                        |
|                             |                 |                                                  |                             | W10891978       | Spreader, Flame (AUX) (Right Rear)               | 29                          | W11205794       | Cover, WIFI Inner                |
|                             |                 |                                                  | 15                          | W11036559       | Spring Clip, Range                               | 30                          | W11241511       | Button Assembly, Oven Light      |
|                             |                 |                                                  | 16                          |                 | Knob, Oven Mode                                  | 31                          | W11156414       | Trim, Island                     |
|                             |                 |                                                  |                             | W11500863       | Stainless                                        | 32                          |                 | Trim, T-Strip                    |
|                             |                 |                                                  | 17                          | W11100279       | Manager, Appliance (Powermax)                    |                             | W10271524       | Black                            |
|                             |                 |                                                  | 18                          |                 | Panel, Cooktop                                   | 33                          | 7101P426-60     | Screw                            |
|                             |                 |                                                  |                             | W11038235       | Black (Left)                                     | 34                          | W11241510       | Button Assembly, Oven Start      |
|                             |                 |                                                  |                             | W11038245       | Black (Right)                                    | 35                          | 3400814         | Screw                            |
|                             |                 |                                                  |                             |                 |                                                  | 36                          | W11291178       | Kit, Grate Filler                |
|                             |                 |                                                  |                             |                 |                                                  | 37                          | W11042504       | Bumper, Grate                    |
|                             |                 |                                                  |                             |                 |                                                  | 38                          | W11110768       | Assembly, WIFI Module            |
|                             |                 |                                                  |                             |                 |                                                  | 39                          | 7101P624-60     | Screw                            |


# CHASSIS PARTS

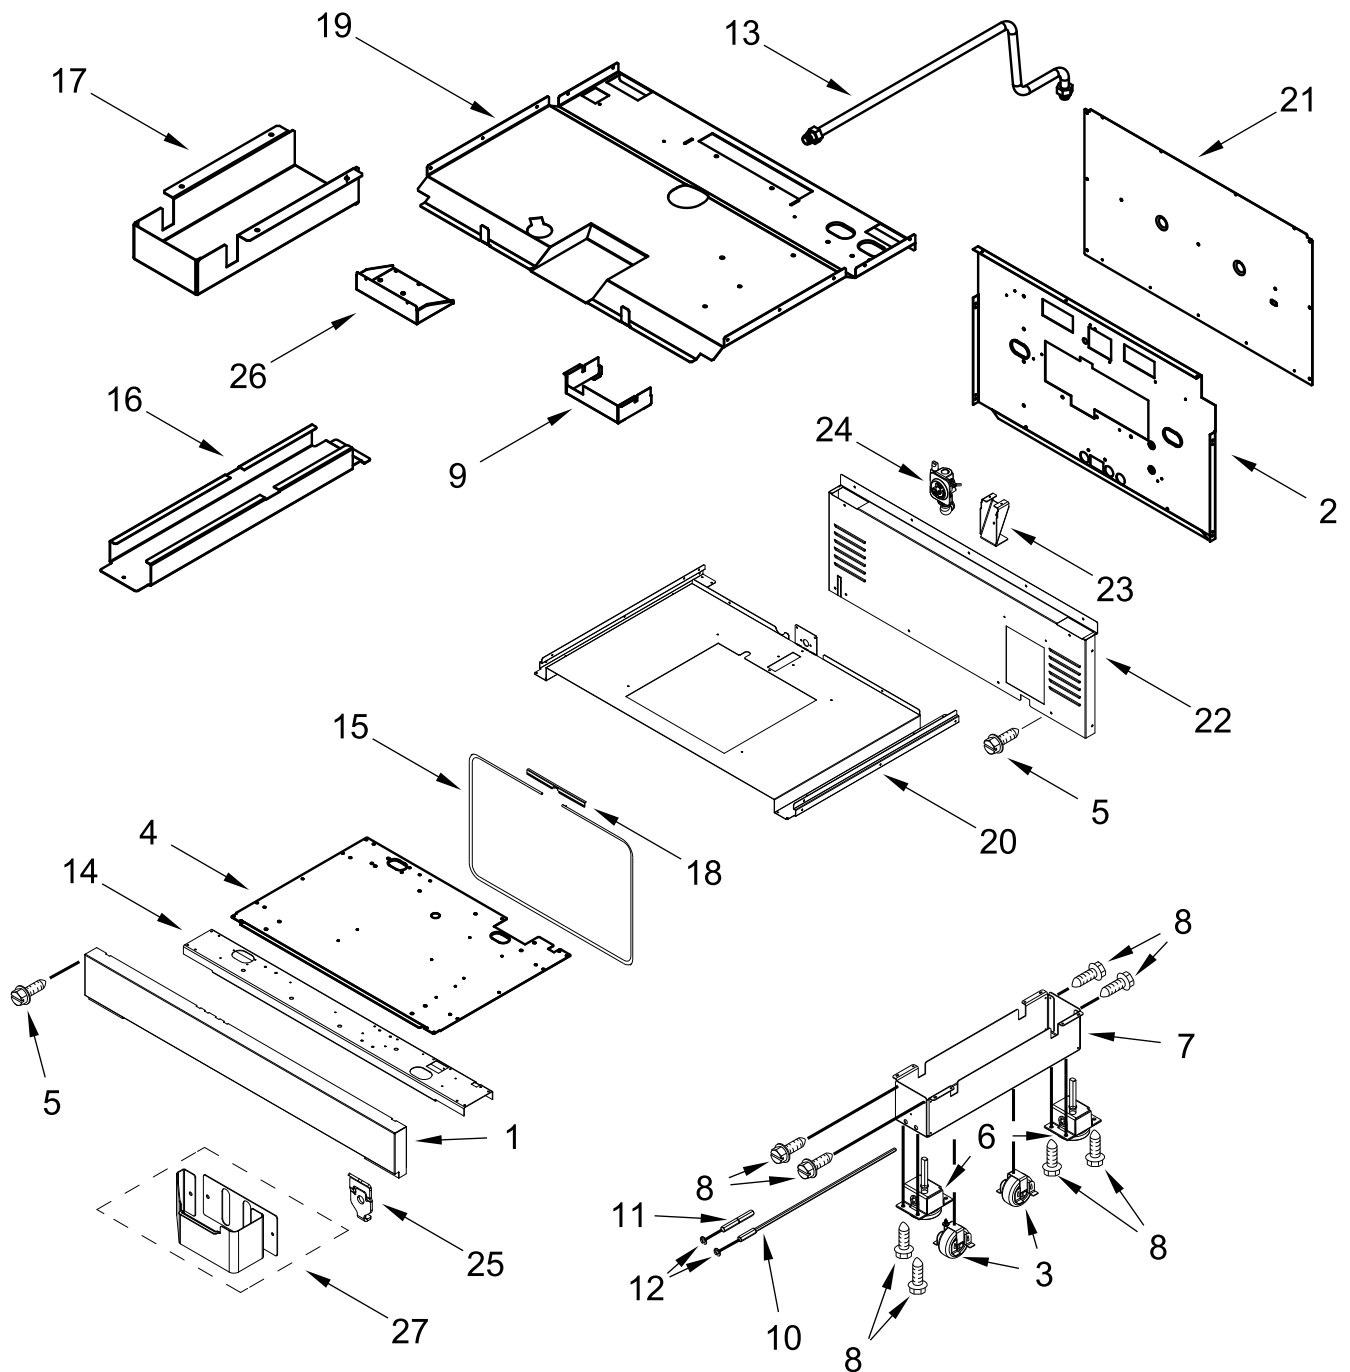

# CHASSIS PARTS

| <u>Illus.</u><br><u>No.</u> | <u>Part No.</u> | <u>Description</u>         | <u>Illus.</u><br><u>No.</u> | <u>Part No.</u> | <u>Description</u>         | <u>Illus.</u><br><u>No.</u> | <u>Part No.</u> | <u>Description</u>          |
|-----------------------------|-----------------|----------------------------|-----------------------------|-----------------|----------------------------|-----------------------------|-----------------|-----------------------------|
| 1                           | W11394779       | Kickplate                  | 12                          | 489504          | E-Ring                     | 22                          | W11034134       | Panel, Back Bottom          |
| 2                           | W11324989       | Back, Chassis              | 13                          | W11106963       | Tube, Pressure Regulator   | 23                          | W11096823       | Bracket, Pressure Regulator |
| 3                           | W10138054       | Assembly, Roller           | 14                          | W11087491       | Support, Channel           | 24                          | W10449140       | Regulator, Pressure         |
| 4                           | W11109583       | Duct, Bottom (30")         | 15                          | W11115328       | Gasket, Oven (30")         | 25                          | W11036559       | Spring Clip, Range          |
| 5                           | 7101P426-60     | Screw                      | 16                          | W11050145       | Duct-Chassis, Rear         | 26                          | W11106341       | Drawer, Appliance Manager   |
| 6                           | 9760860         | Leveler                    | 17                          | W11368831       | Channel, Wire              | 27                          | W11199181       | Cover, Foot (Left)          |
| 7                           | W10908710       | Base, Leveling Leg         | 18                          | W11362015       | Retainer, Gasket (9" Long) |                             | W11199178       | Cover, Foot (Right)         |
| 8                           | 4449743         | Screw                      | 19                          | W11324986       | Top, Chassis               |                             |                 |                             |
| 9                           | W11369237       | Cabinet, Appliance Manager | 20                          | W11040802       | Chassis, Bottom            |                             |                 |                             |
| 10                          | W10115869       | Shaft, Long                | 21                          | W11103334       | Panel, Back Top            |                             |                 |                             |
| 11                          | W10115793       | Shaft, Short               |                             |                 |                            |                             |                 |                             |


# OVEN PARTS

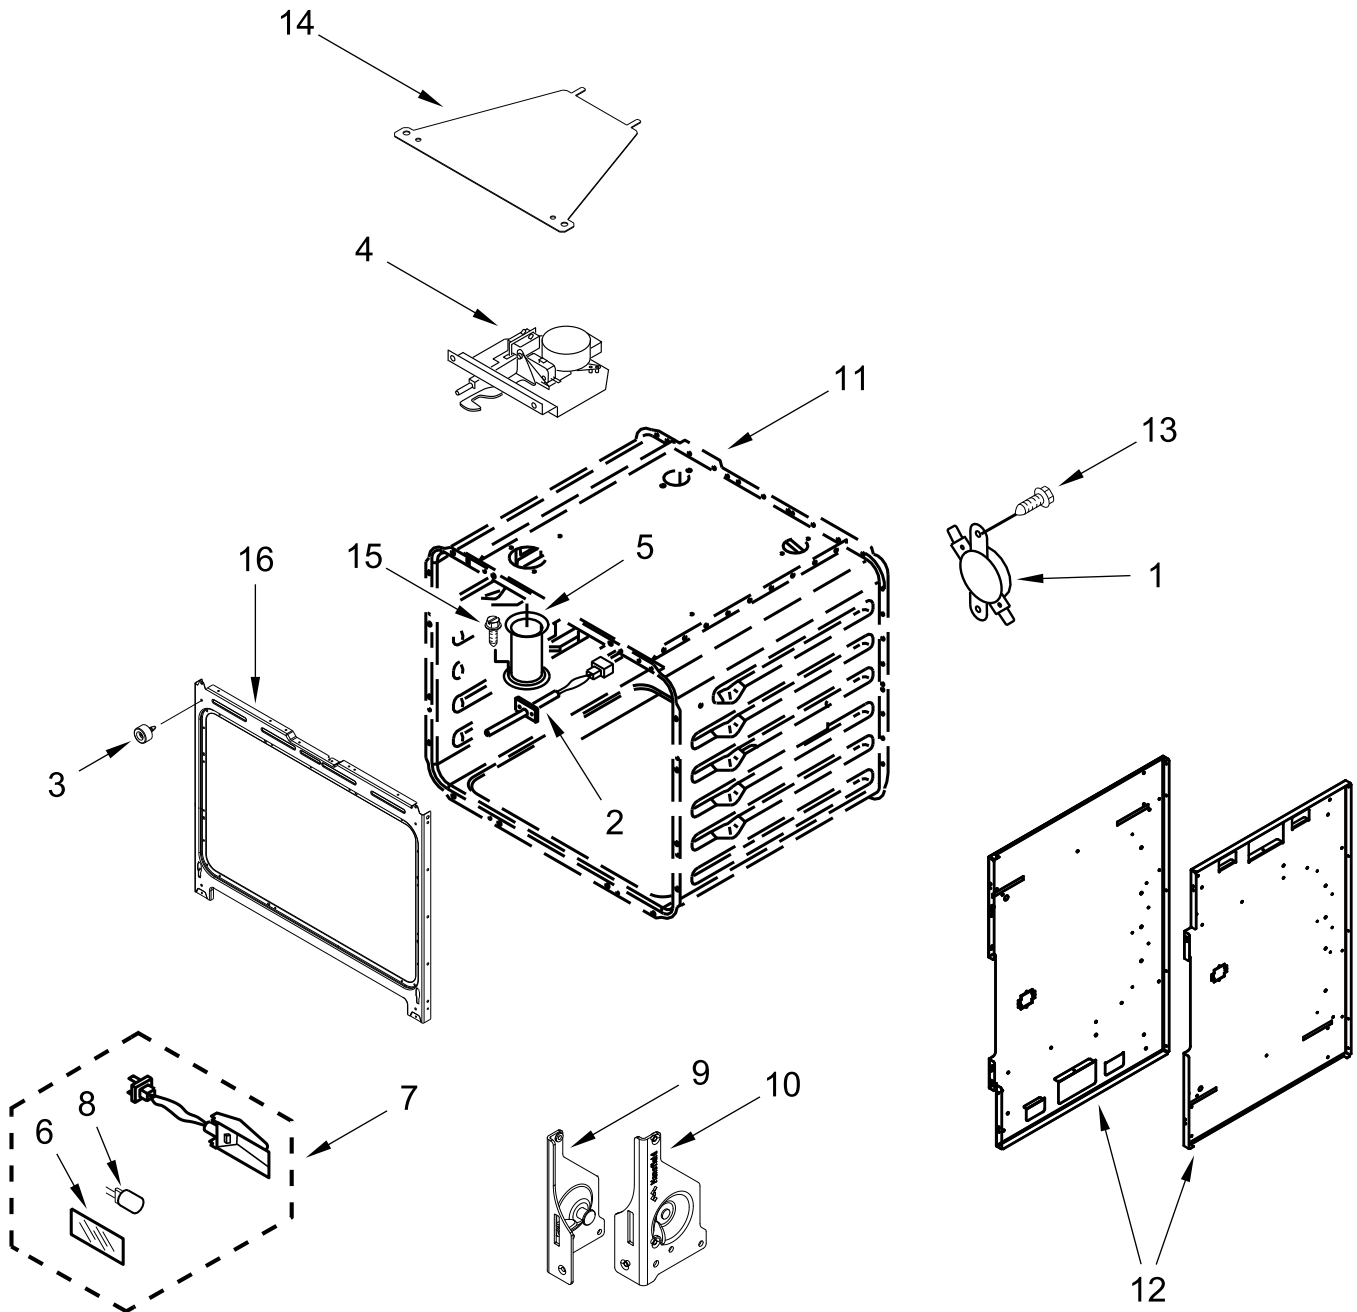

# OVEN PARTS

| <u>Illus.</u><br><u>No.</u> | <u>Part No.</u> | <u>Description</u>     | <u>Illus.</u><br><u>No.</u> | <u>Part No.</u> | <u>Description</u>         | <u>Illus.</u><br><u>No.</u> | <u>Part No.</u> | <u>Description</u>              |
|-----------------------------|-----------------|------------------------|-----------------------------|-----------------|----------------------------|-----------------------------|-----------------|---------------------------------|
| 1                           | 4449751         | Thermostat (TOD)       | 10                          | W11096293       | Receiver, Hinge (Right)    | 15                          | 3196176         | Screw                           |
| 2                           | W10622170       | Probe, Sensor          |                             |                 |                            | 16                          | W11192755       | Frame, Front                    |
| 3                           | W10351278       | Bumper & Screw         | 11                          |                 | Liner, Oven (Not Serviced) |                             |                 | FOLLOWING PARTS NOT ILLUSTRATED |
| 4                           | W10830016       | Latch, Motorized       |                             |                 |                            |                             |                 |                                 |
| 5                           | W11290663       | Tube, Vent             | 12                          | W11102297       | Chassis, Side (Left)       |                             | W10282810       | Insulation, Wrap, 30"           |
| 6                           | W10169756       | Lens, Light            |                             | W11102296       | Chassis, Side (Right)      |                             | W10282818       | Insulation, Back, 30"           |
| 7                           | W11223932       | Assembly, Oven Light   |                             |                 |                            |                             | 3400968         | Nut                             |
| 8                           | W10169757       | Bulb, Light            | 13                          | 7101P426-60     | Screw                      |                             |                 |                                 |
| 9                           | W11096294       | Receiver, Hinge (Left) | 14                          | W10160858       | Cover, Latch               |                             |                 |                                 |


# VENTING PARTS

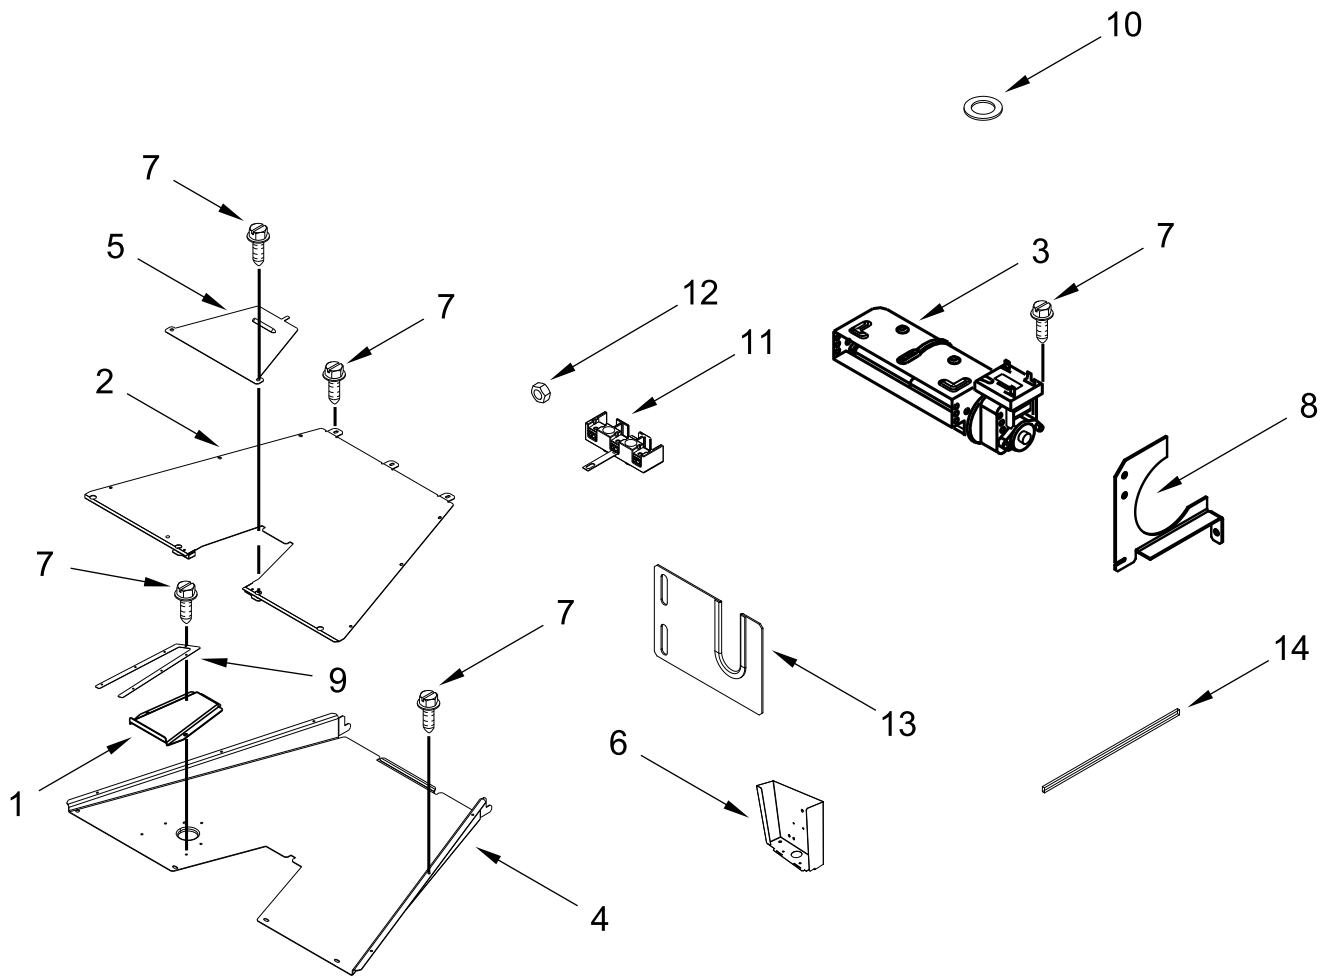

# VENTING PARTS

| <u>Illus.</u><br><u>No.</u> | <u>Part No.</u> | <u>Description</u>         | <u>Illus.</u><br><u>No.</u> | <u>Part No.</u> | <u>Description</u>     | <u>Illus.</u><br><u>No.</u> | <u>Part No.</u> | <u>Description</u> |
|-----------------------------|-----------------|----------------------------|-----------------------------|-----------------|------------------------|-----------------------------|-----------------|--------------------|
| 1                           | W10818234       | Slope, Exhaust Vent (30")  | 6                           | W11353392       | Box, Terminal          | 13                          | W11106956       | Cover, Channel     |
| 2                           | W11105223       | Vent, Cooling Top (30")    | 7                           | 7101P426-60     | Screw                  | 14                          | W10919715       | Gasket             |
| 3                           | W11200129       | Blower                     | 8                           | W11047754       | Bracket, Blower Mount  |                             |                 |                    |
| 4                           | W11105222       | Vent, Cooling Bottom (30") | 9                           | W10270397       | Seal, Vent Slope (30") |                             |                 |                    |
| 5                           | W11109518       | Plate, Cooling Latch       | 10                          | W10270396       | Seal, Chimney          |                             |                 |                    |
|                             |                 |                            | 11                          | 9761958         | Block, Terminal        |                             |                 |                    |
|                             |                 |                            | 12                          | 112432          | Nut, Hex               |                             |                 |                    |


# OVEN DOOR PARTS

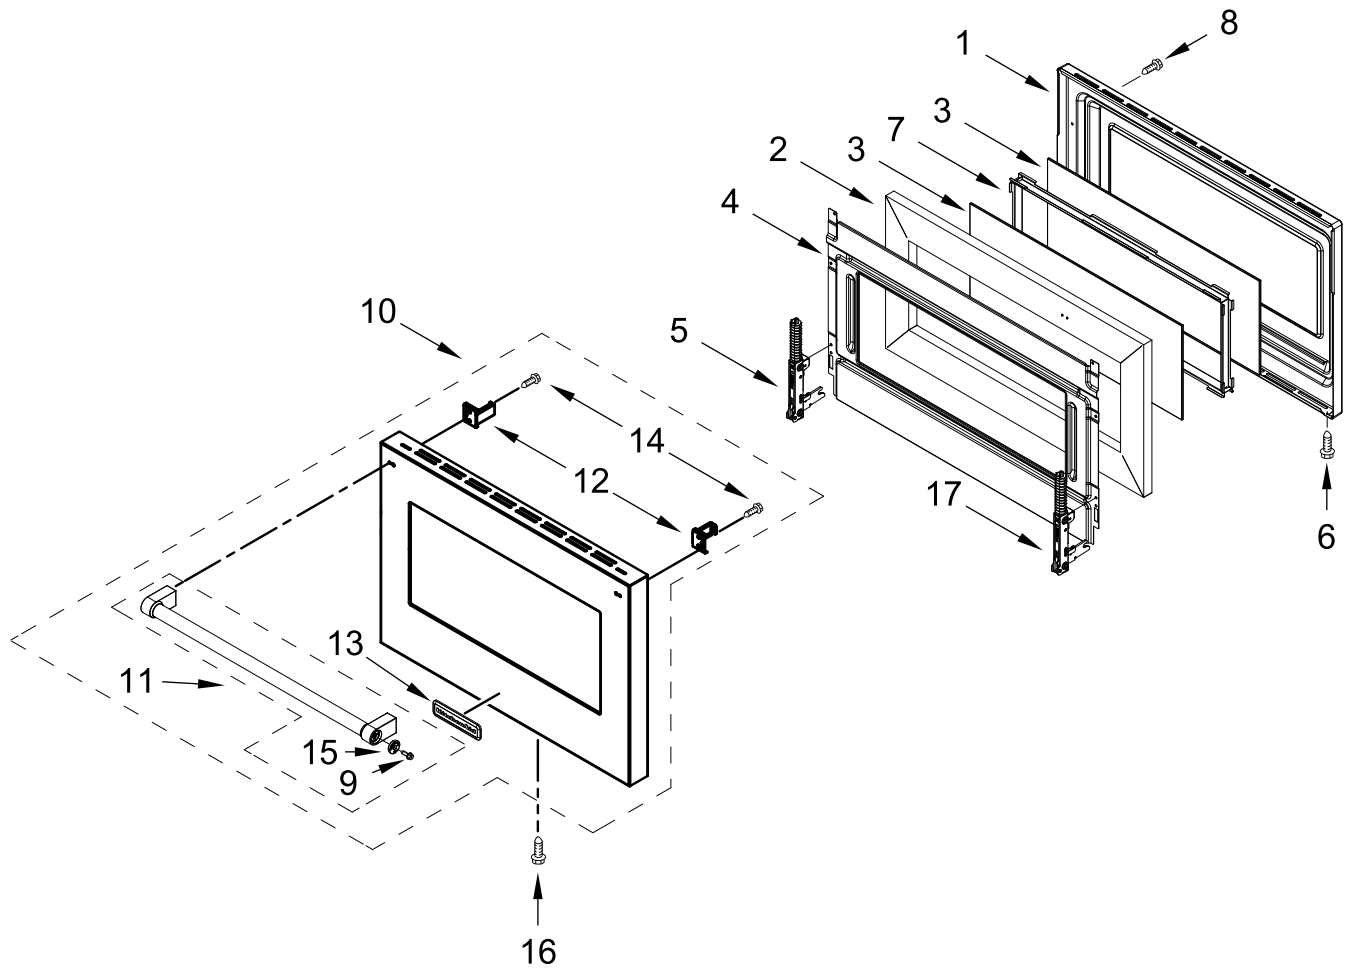

# OVEN DOOR PARTS

| <u>Illus.</u><br><u>No.</u> | <u>Part No.</u> | <u>Description</u>     | <u>Illus.</u><br><u>No.</u> | <u>Part No.</u> | <u>Description</u>                        | <u>Illus.</u><br><u>No.</u> | <u>Part No.</u> | <u>Description</u>  |
|-----------------------------|-----------------|------------------------|-----------------------------|-----------------|-------------------------------------------|-----------------------------|-----------------|---------------------|
| 1                           | W11036771       | Liner, Door            | 7                           | W10272594       | Frame, Glass                              | 13                          | W10518672       | Badge               |
| 2                           | W11413190       | Insulation, Door (30") | 8                           | W10898280       | Screw                                     | 14                          | W10276043       | Screw               |
| 3                           | W11184409       | Glass, Inner           | 9                           | W10656499       | Screw                                     | 15                          | W11361074       | Medallion, Handle   |
| 4                           | W11194821       | Retainer, Glass        | 10                          | W11389287       | Assembly, Outer Door<br>(Includes Handle) | 16                          | W10162096       | Screw               |
| 5                           | W11390105       | Hinge, Door (Left)     | 11                          | W11362706       | Handle Assembly                           | 17                          | W11390124       | Hinge, Dual (Right) |
| 6                           | W10607120       | Screw                  | 12                          | W11197830       | Bracket, Handle                           |                             |                 |                     |

# INTERNAL OVEN PARTS

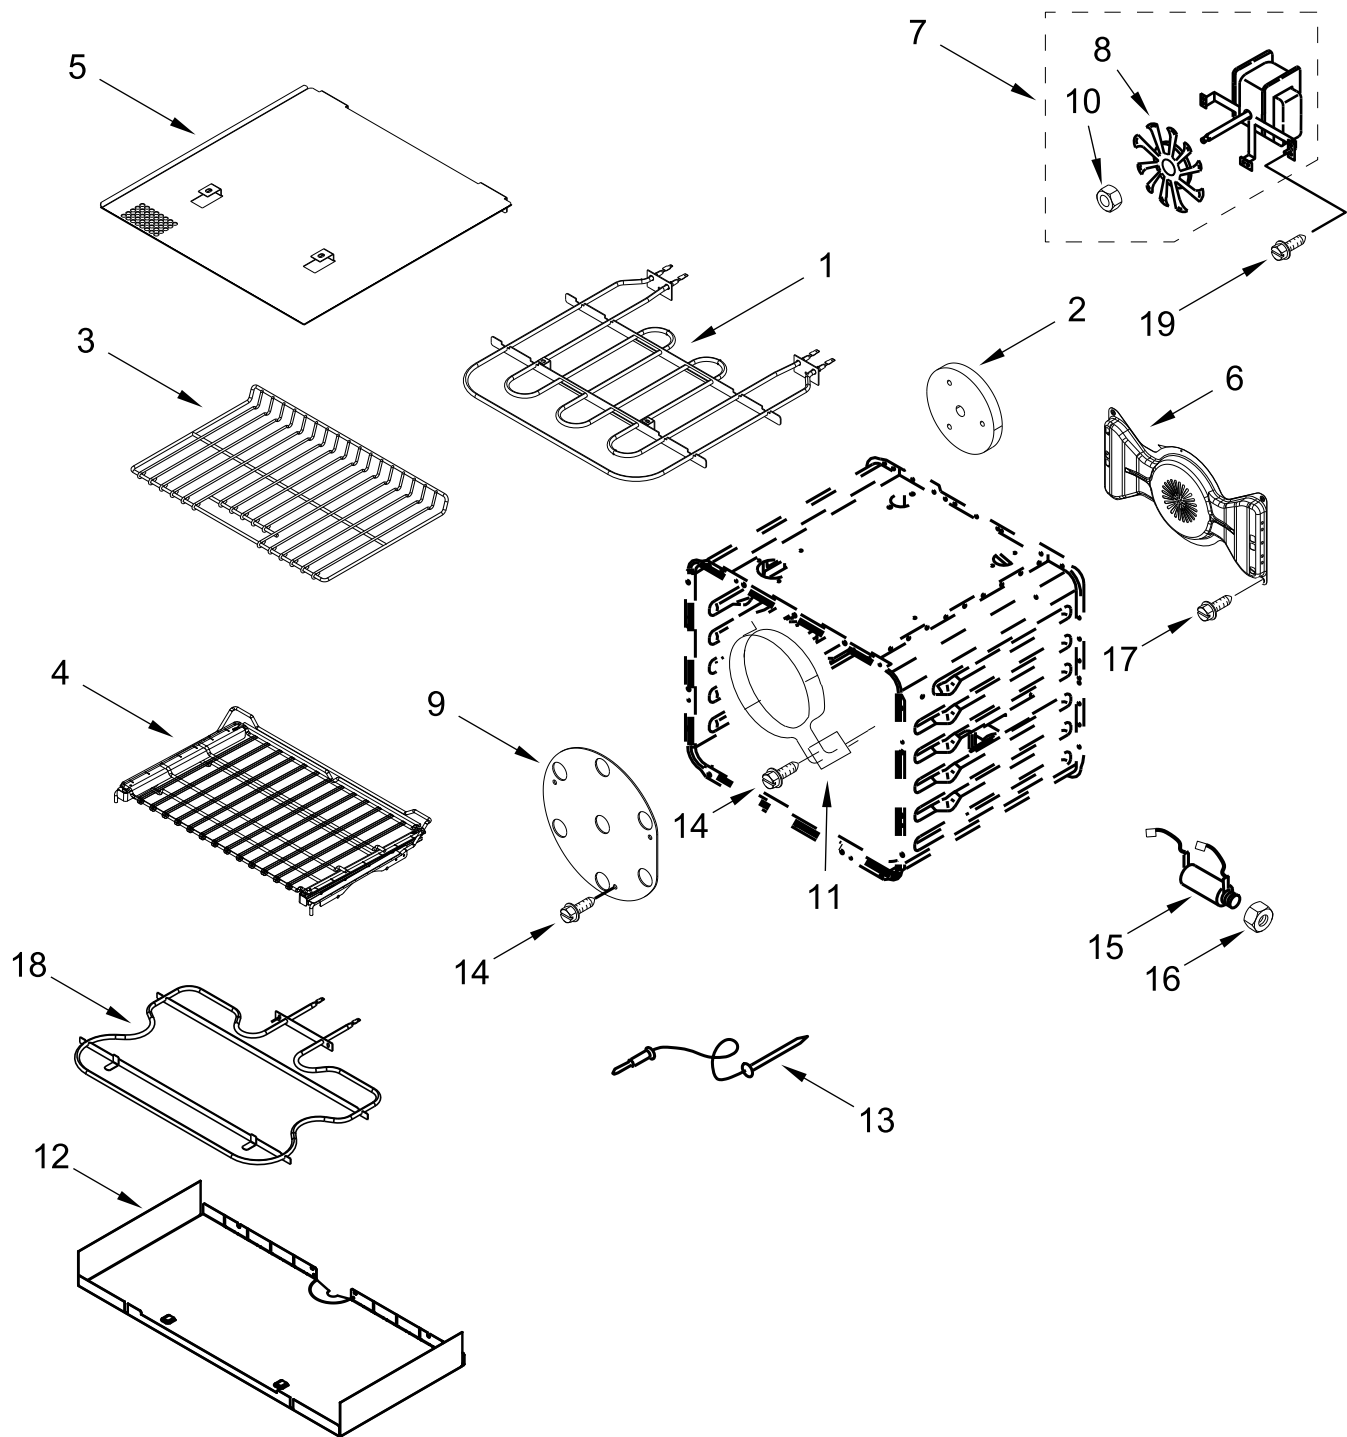

# INTERNAL OVEN PARTS

| <u>Illus.</u><br><u>No.</u> | <u>Part No.</u> | <u>Description</u>           | <u>Illus.</u><br><u>No.</u> | <u>Part No.</u> | <u>Description</u>        | <u>Illus.</u><br><u>No.</u> | <u>Part No.</u> | <u>Description</u>   |
|-----------------------------|-----------------|------------------------------|-----------------------------|-----------------|---------------------------|-----------------------------|-----------------|----------------------|
| 1                           | W10115994       | Element, Broil               | 9                           | W10261523       | Plate, Fan                | 17                          | W10739592       | Screw                |
| 2                           | W10282821       | Insulation, Convection Cover | 10                          | W10631504       | Nut, Acorn (LH)           | 18                          | W10115995       | Element, Hidden Bake |
| 3                           | W10570887       | Rack, Oven                   | 11                          | 9762242         | Element, Convection Steam | 19                          | W10720084       | Screw                |
| 4                           | W11496977       | Rack, Sliding Oven           | 12                          | W11109421       | Tray, Hidden Bake         |                             |                 |                      |
| 5                           | W10160856       | Shield, Element Broil        | 13                          | 9755542         | Probe, Temperature        |                             |                 |                      |
| 6                           | W11212180       | Baffle, Convection           | 14                          | 4449154         | Screw                     |                             |                 |                      |
| 7                           | W10722667       | Fan, Convection              | 15                          | 9755543         | Jack, Meat Probe          |                             |                 |                      |
| 8                           | W10631503       | Blade, Fan                   | 16                          | W11033111       | Nut, Locking              |                             |                 |                      |

# OPTIONAL PARTS (NOT INCLUDED)

**Illus.**  
**No.**

**Part No.**

**Description**

|  |             |                                     |
|--|-------------|-------------------------------------|
|  |             | ACCESSORIES                         |
|  | 4396920     | Stainless Steel<br>Cleaner & Polish |
|  | 31464       | Cleaner, Cooktop                    |
|  | W10216179   | Ring, Wok                           |
|  | W10123240   | Rack, Broiler Pan &<br>Roasting     |
|  | 8284755     | Backsplash<br>(Adjustable)          |
|  | JXA9001CDP  | Stainless Steel<br>Wallsplash       |
|  |             | Backsplash                          |
|  | W10285447   | 30" With Shelves                    |
|  | W10285449   | 48" With Shelves                    |
|  | W10115773   | Backguard 9"(22.9cm)                |
|  | W11238043   | Kit, High Altitude                  |
|  |             | Medallion, Handle                   |
|  | W11368841SI | Sl. Silver                          |
|  | W11368841BO | Black ANO                           |
|  | W11368841RE | Red ANO                             |
|  | W11368841MP | Marscapone (Cream)                  |
|  | W11368841NE | New Gold                            |
|  | W11368841CF | Copper                              |
|  | W11368841BN | Bronze                              |
|  | W11368841DD | Dark Blue                           |