




30" ELECTRIC FREESTANDING SELF CLEAN RANGE

MODELS:

ACR4303MFB7 (Black)
ACR4303MFW7 (White)


COOKTOP PARTS

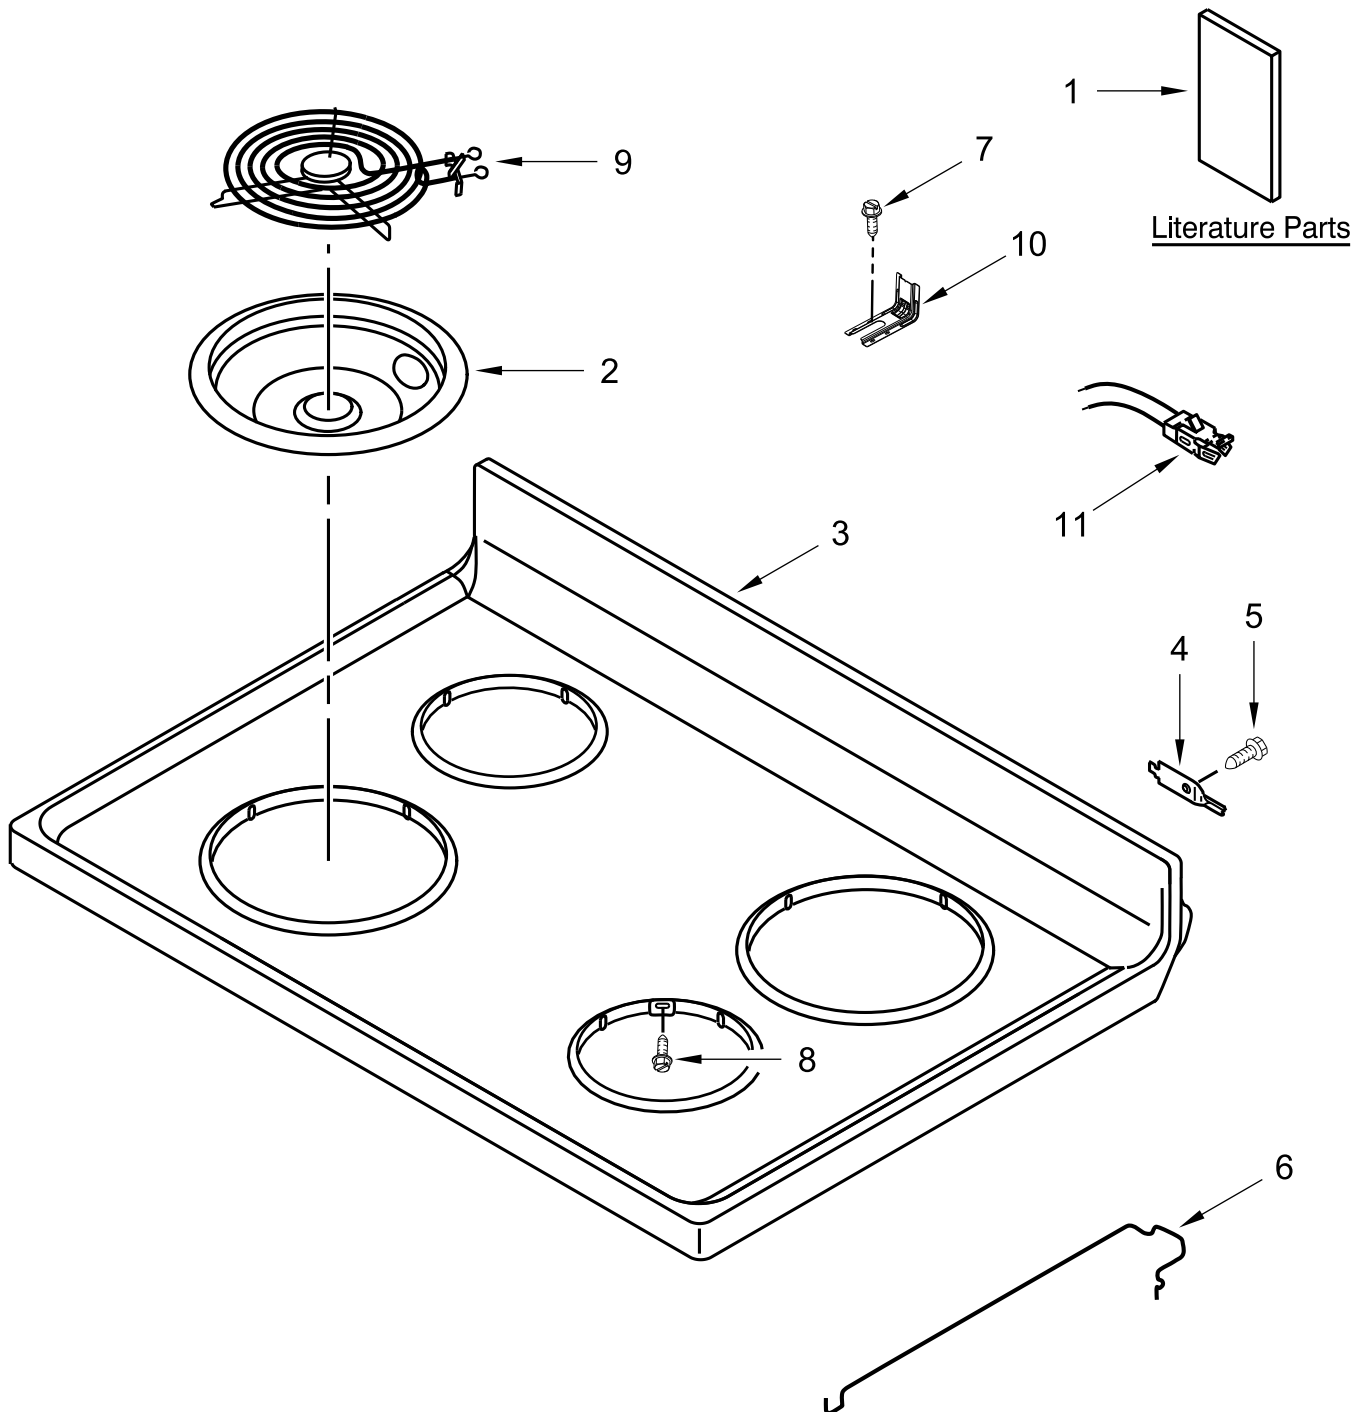

COOKTOP PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	5	3196178	Screw	11	814399	Receptacle, Element
	W11509598	User Instructions	6	3195812	Rod, Support			
	W11481066	Quick Start Guide	7	7101P485-60	Screw, Anti-Tip Kit			FOLLOWING PARTS NOT ILLUSTRATED
	W11401726	Tech Sheet	8	3196154	Screw	W11452635		Harness, Main
2	W10196406	Bowl, Drip (6") (Right Front and Left Rear)	9	W11364019	Element, Coil Heating (2400W) (Left Front and Right Rear)	W11134595		Harness, Cooktop
	W10196405	Bowl, Drip (8") (Left Front and Right Rear)		W11364018	Element, Coil Heating (1500W) (Right Front and Left Rear)	W10281322		Kit, Bare Wire Adapter Block
3		Cooktop						
	3186233	Black	10	W11379945	Bracket, Anti-Tip			
	3186231	White						
4	3195060	Hinge, Cooktop						


CONTROL PANEL PARTS

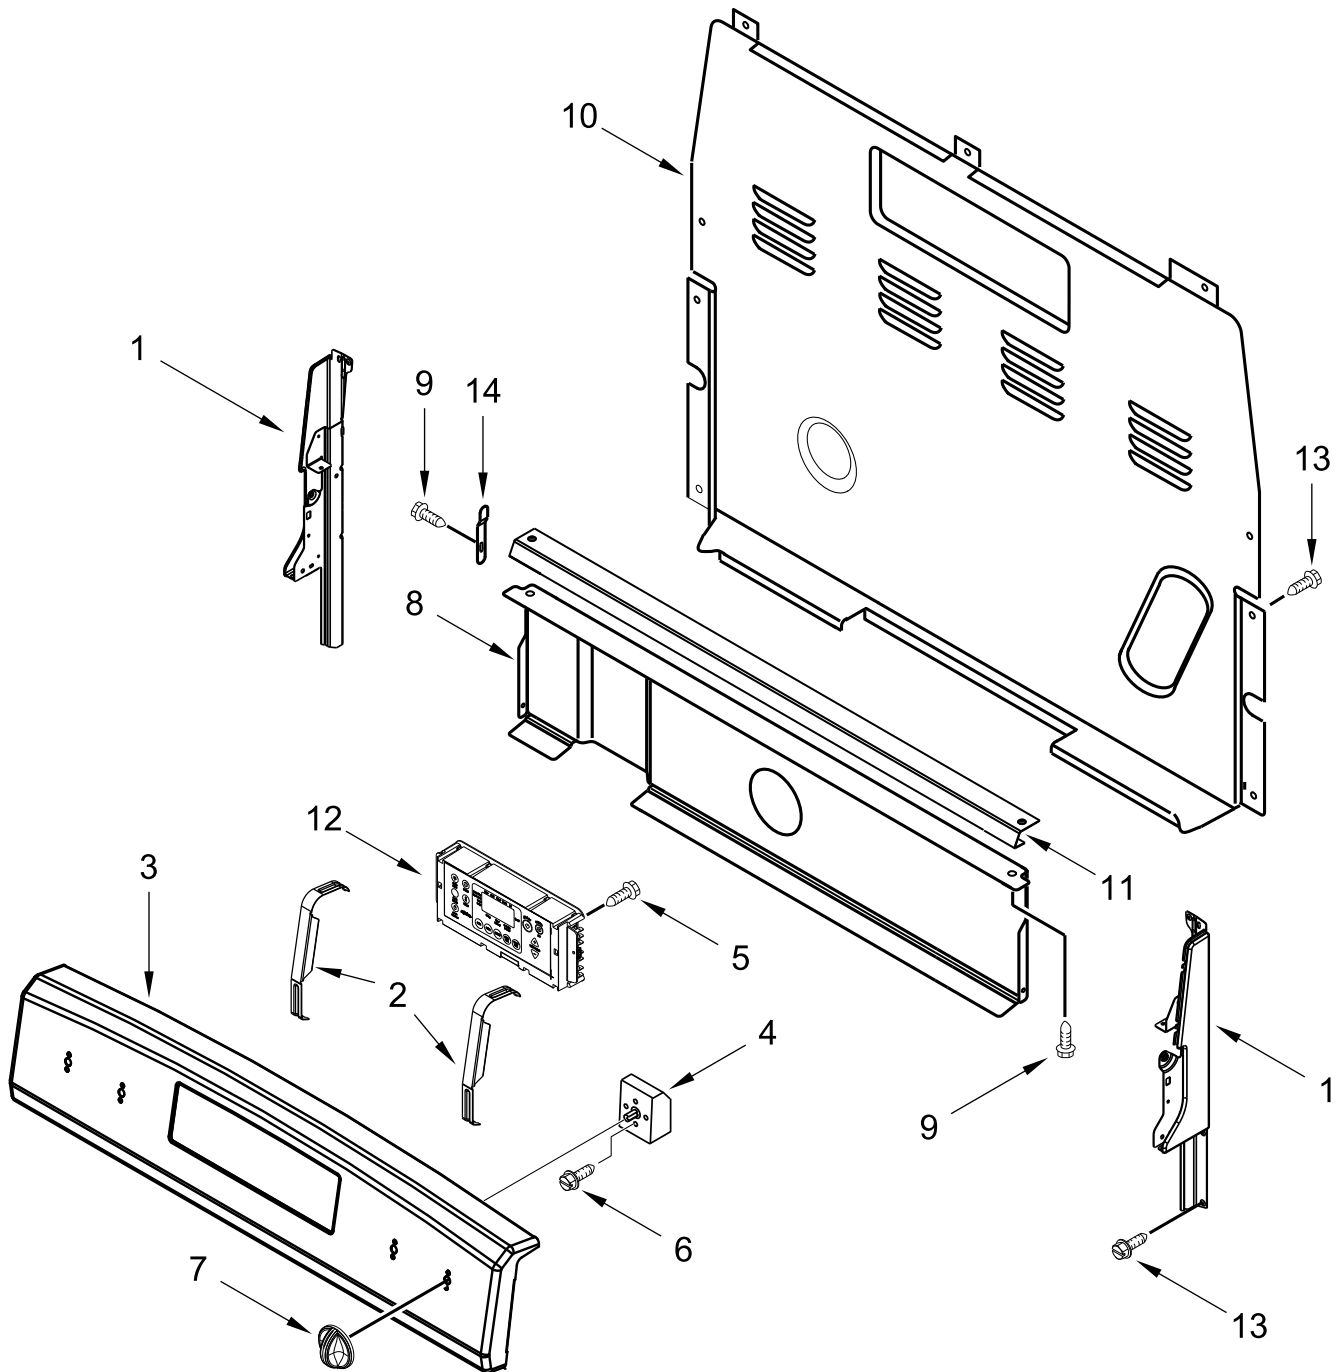

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Endcap	4	3148952	Switch, Infinite (Yellow)	9	3196165	Screw
	W11130372	Black (Left)			(Right Front and Left Rear)	10	8272473	Cover, Upper Rear
	W11130379	Black (Right)				11	W10525121	Bracket, Console Mounting
	W11130371	White (Left)				12		Control, Electronic (LCX)
	W11130378	White (Right)		3148954	Switch, Infinite (Orange)			
2	W10695491	Bracket, Control			(Left Front and Right Rear)		W11511568	Black
3		Panel, Control					W11511570	White
	W11157010	Black	5	3196169	Screw	13	3196178	Screw
	W11157009	White	6	3400882	Screw	14	3196200	Clip, Spring
			7		Knob, Infinite			
				W10844801	Black			
				W10844800	White			
			8	W10134247	Shield, Heat			


CHASSIS PARTS

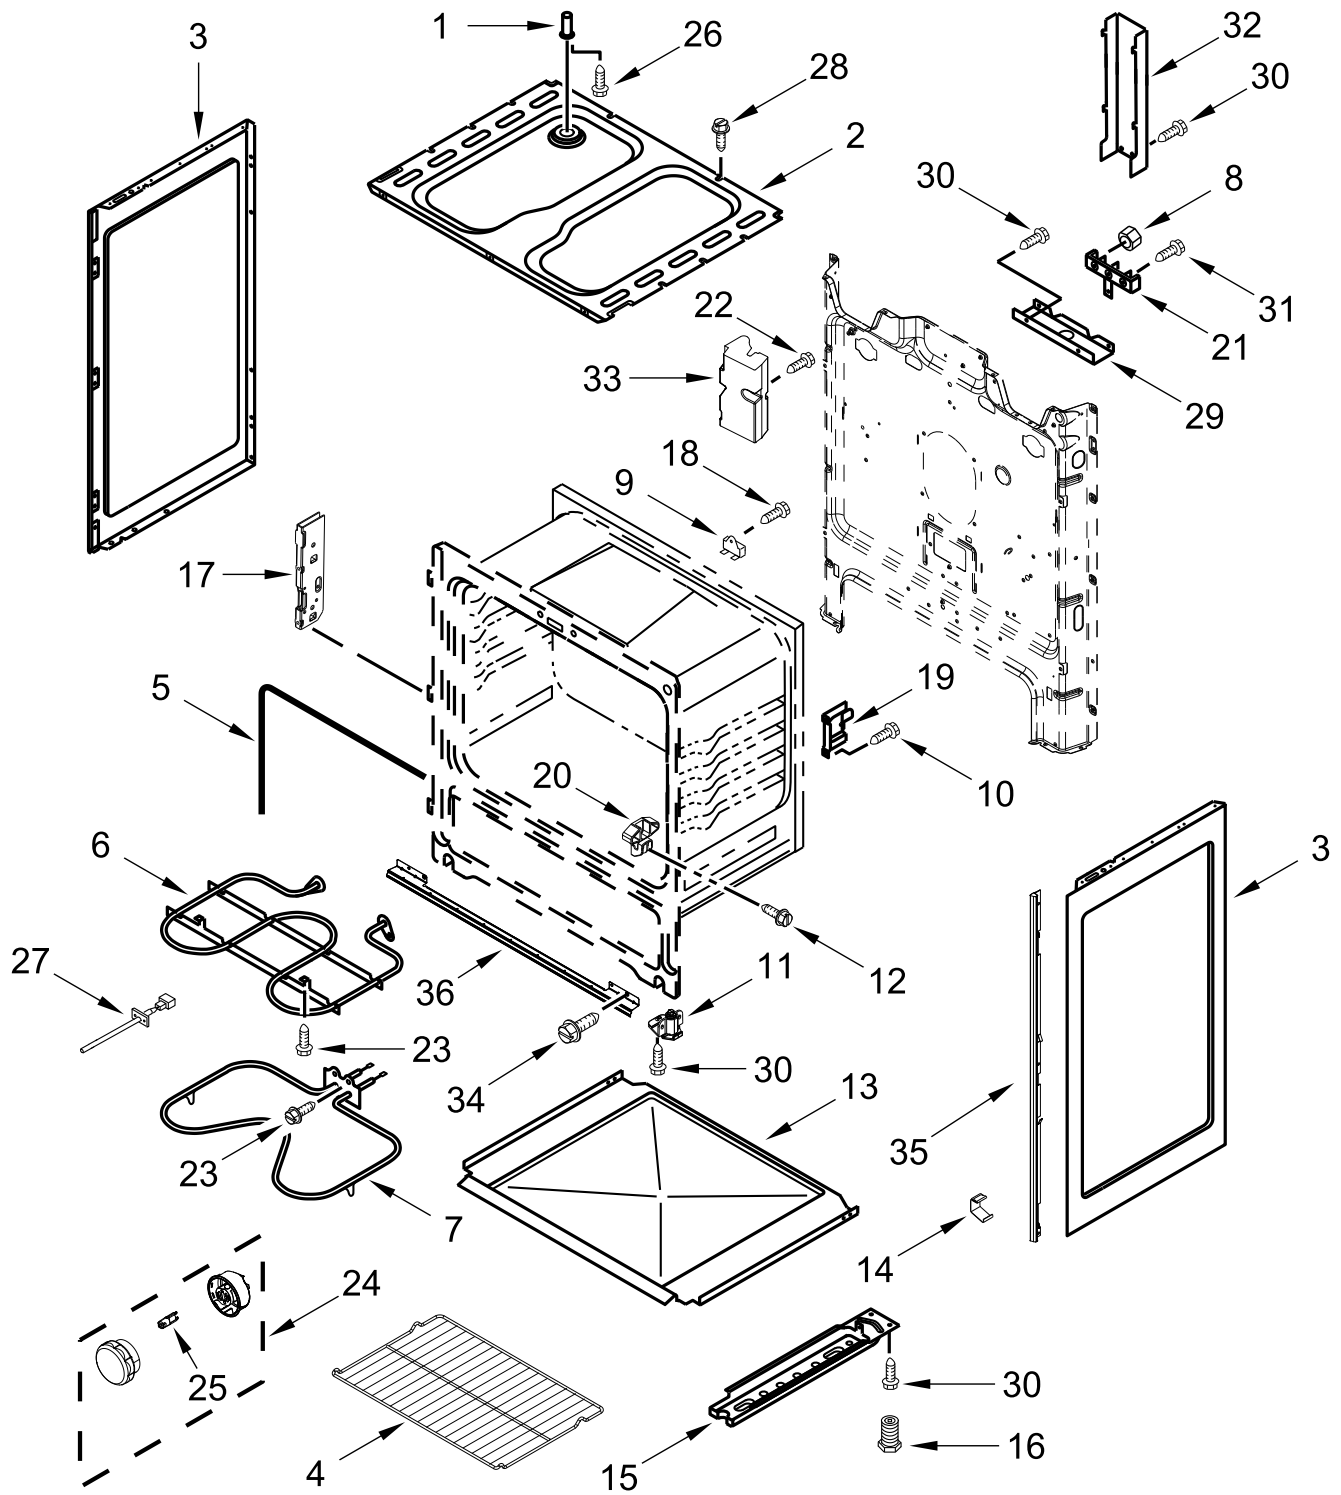

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11222267	Tube, Vent	15	W10390008	Base Rail Assembly (Left)	28	3196165	Screw
2	W10209613	Box, Burner				29	3186034	Bracket, Service
3		Panel, Side		W10390007	Base Rail Assembly (Right)	30	3196178	Screw
	W10162245	Black				31	3400016	Screw
	W10575396	White	16	W10058460	Foot, Leveling	32	W10326122	Cover, Terminal Block
4	W11173792	Rack, Oven	17	W10289077	Receiver, Hinge	33	W10910404	Counterweight
5	W10129032	Seal, Door	18	3196172	Screw	34	3196560	Screw
6	W10308476	Element, Broil	19	W10404688	Clip, Oven Support	35	W11510560	Barrier Rail, Rubber (Left & Right)
7	W11022836	Element, Bake	20	W10674705	Glide, Drawer Front	36	W11464547	Bracket, Front Frame
8	3400029	Nut	21	W10245259	Block, Terminal			
9	3196548	Fuse, Thermal	22	W11034869	Screw			FOLLOWING PARTS NOT ILLUSTRATED
10	3196169	Screw	23	3196174	Screw			
11	W10341186	Front Foot Assembly	24	W11544377	Light Assembly		8273263	Insulation, Wrap
12	W10067840	Screw	25	W10571723	Bulb, Halogen 40 Watts		8272611	Insulation, Back
13	8054068	Retainer, Insulation						
14	W10137382	Clip, Panel	26	3196567	Screw			
			27	W10181986	Sensor, Oven			


DOOR PARTS

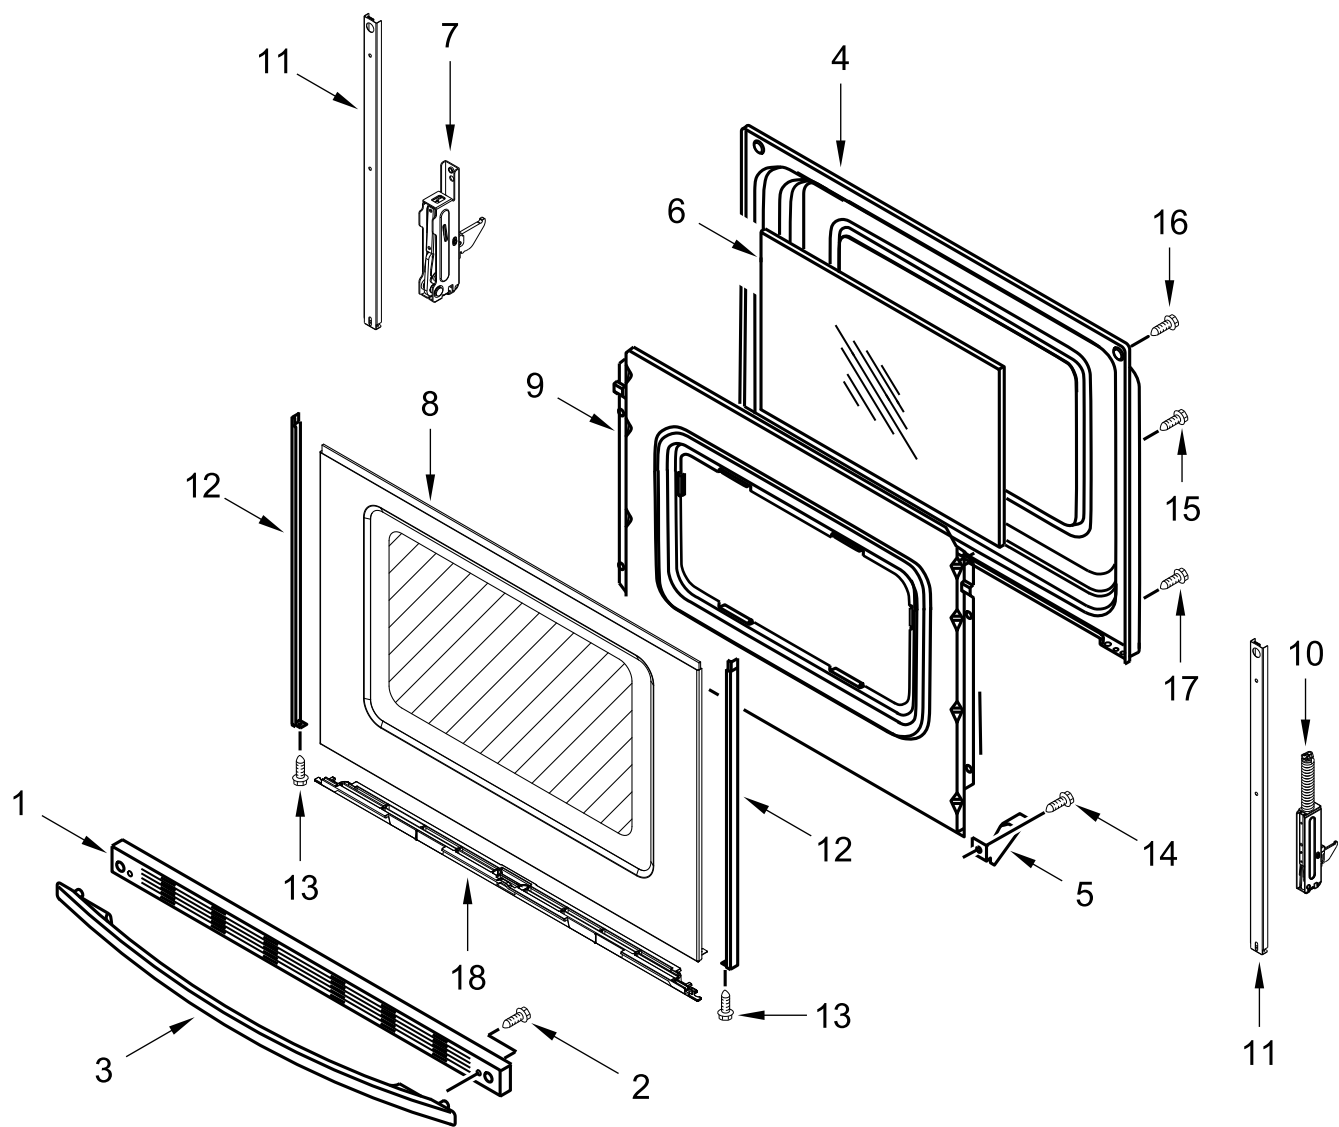

DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Trim, Top	9	9761505	Retainer, Insulation	18		Trim, Lower Door
	W10310922	Black	10	W10299225	Hinge, Active		W11444043	Black
	W10310920	White	11	W11379944	Strap, Door		W11444042	White
2	W10168559	Screw	12		Trim, Side			
3		Handle, Door		W10746436	Black (Left)			
	W10323589	Black		W10746435	Black (Right)			
	W10323588	White		8523172	White (Left)			
4	9761344	Liner, Door		8523166	White (Right)			
5	W10137382	Clip, Panel	13	W10327235	Screw			
6	W11367326	Glass, Inner	14	3196165	Screw			
7	W10299227	Hinge, Door (Passive)	15	W10031790	Screw			
8		Glass Assembly, Outer Door	16	W10200660	Screw			
			17	W10031780	Screw			
	W10831686	Black						
	W10851723	White						

DRAWER PARTS

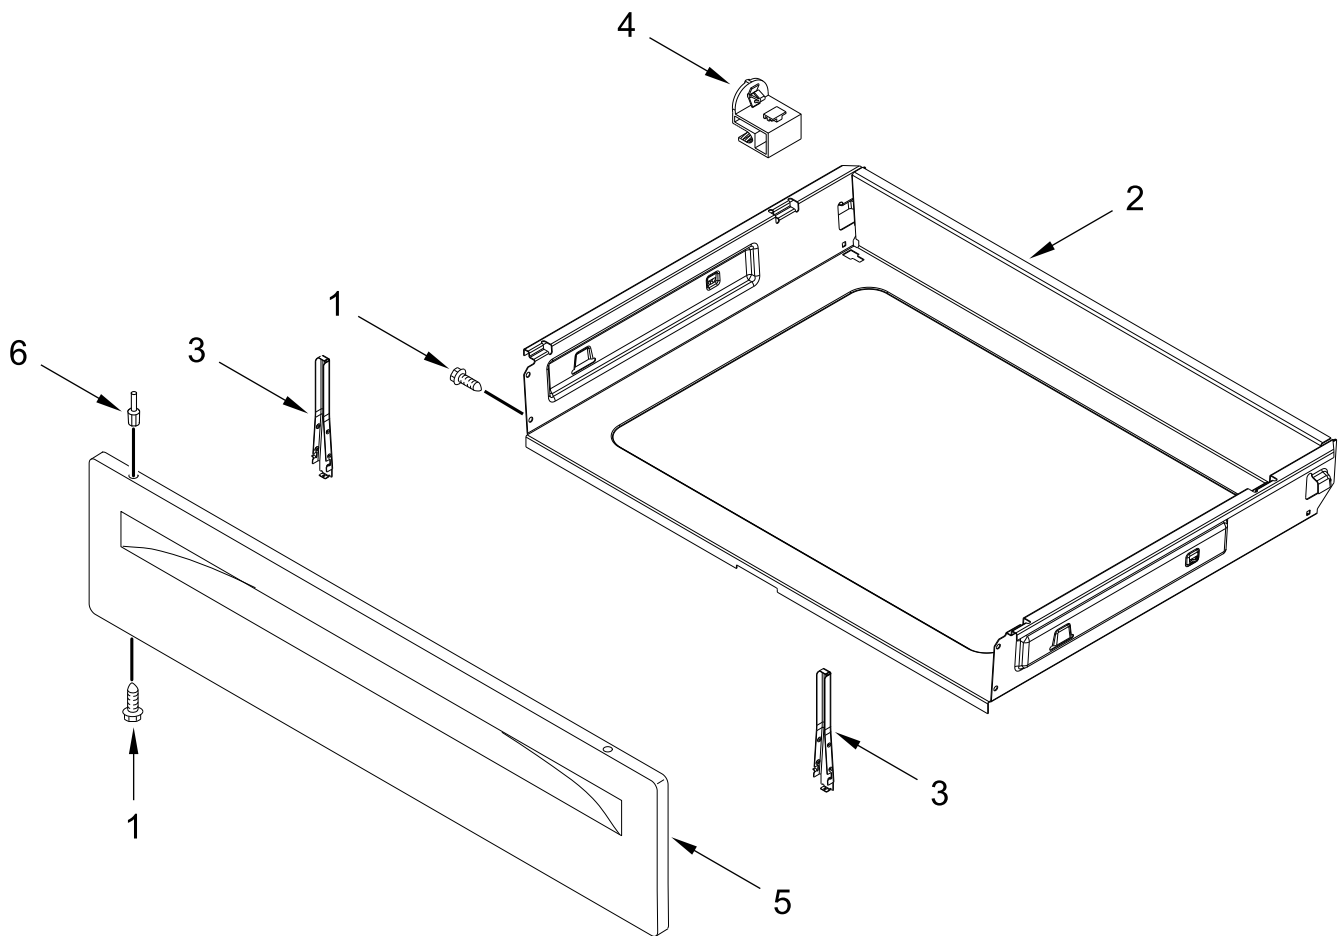

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	3196165	Screw	5		Panel, Front	6		Rivet, Push
2	W10688022	Drawer, Storage		W11123900	Black		3196813	Black
3	W10462912	Bracket, Mounting Drawer		W11123901	White		3196814	White
4	W10674708	Glide, Drawer Rear						

OPTIONAL PARTS (NOT INCLUDED)

REFINISHING MATERIAL

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	511873	White Porcelain (2 oz.)

PAINT, BULK (1 QT.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

INSULATION

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2" x 24" x 120")
	240132	Insulation (2-1/2" x 22" x 120")

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	206922	Primer (White)

ACCESSORY PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	3184478	Cleaner, Glass
	4396923	Broiler Pan and Grid