


KitchenAid®

Dishwasher

MODELS:

KDTE324PP40 (Panel Ready)


DOOR AND PANEL PARTS

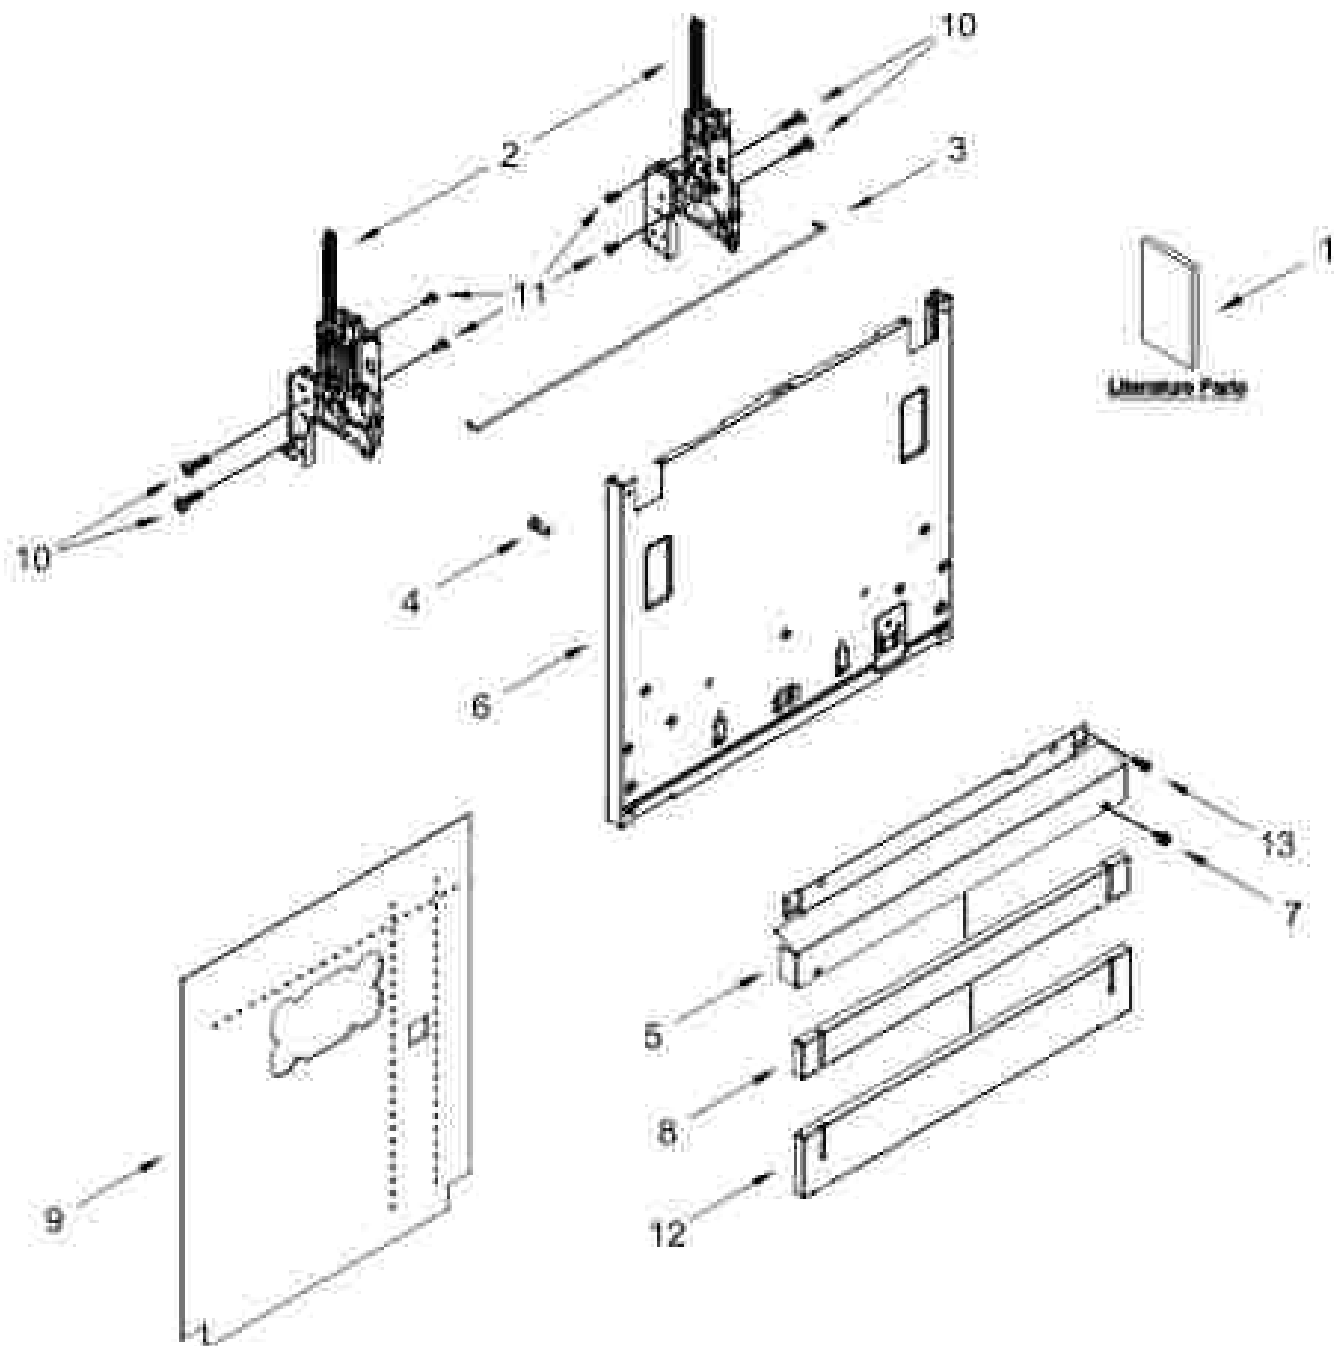

DOOR AND PANEL PARTS

<u>Qty.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Qty.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Qty.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts:	4	W10665778	Bushing, Door	3	W11554803	Insulation, Inner Door
	W11688939	Owners Manual	5	W11625197	Panel, Main Access (Black)	10	W10942001	Screw
	W11615334	Energy Guide				11	W10941903	Screw
	W11625945	Tech Sheet	5	W11624403	Panel, Outer Door (Includes 4)	12	W11625135	Panel, 4" Adjustable (Black)
2		Arm, Hinge	1	352363	Screw (Black)	13	W10942003	Screw
	W11631332	Left Hand	5	W11625133	Panel, 2" Adjustable (Black)			
	W11631331	Right Hand						
3	W11126133	Cross Brace, Door						


CONTROL PANEL AND INNER DOOR PARTS

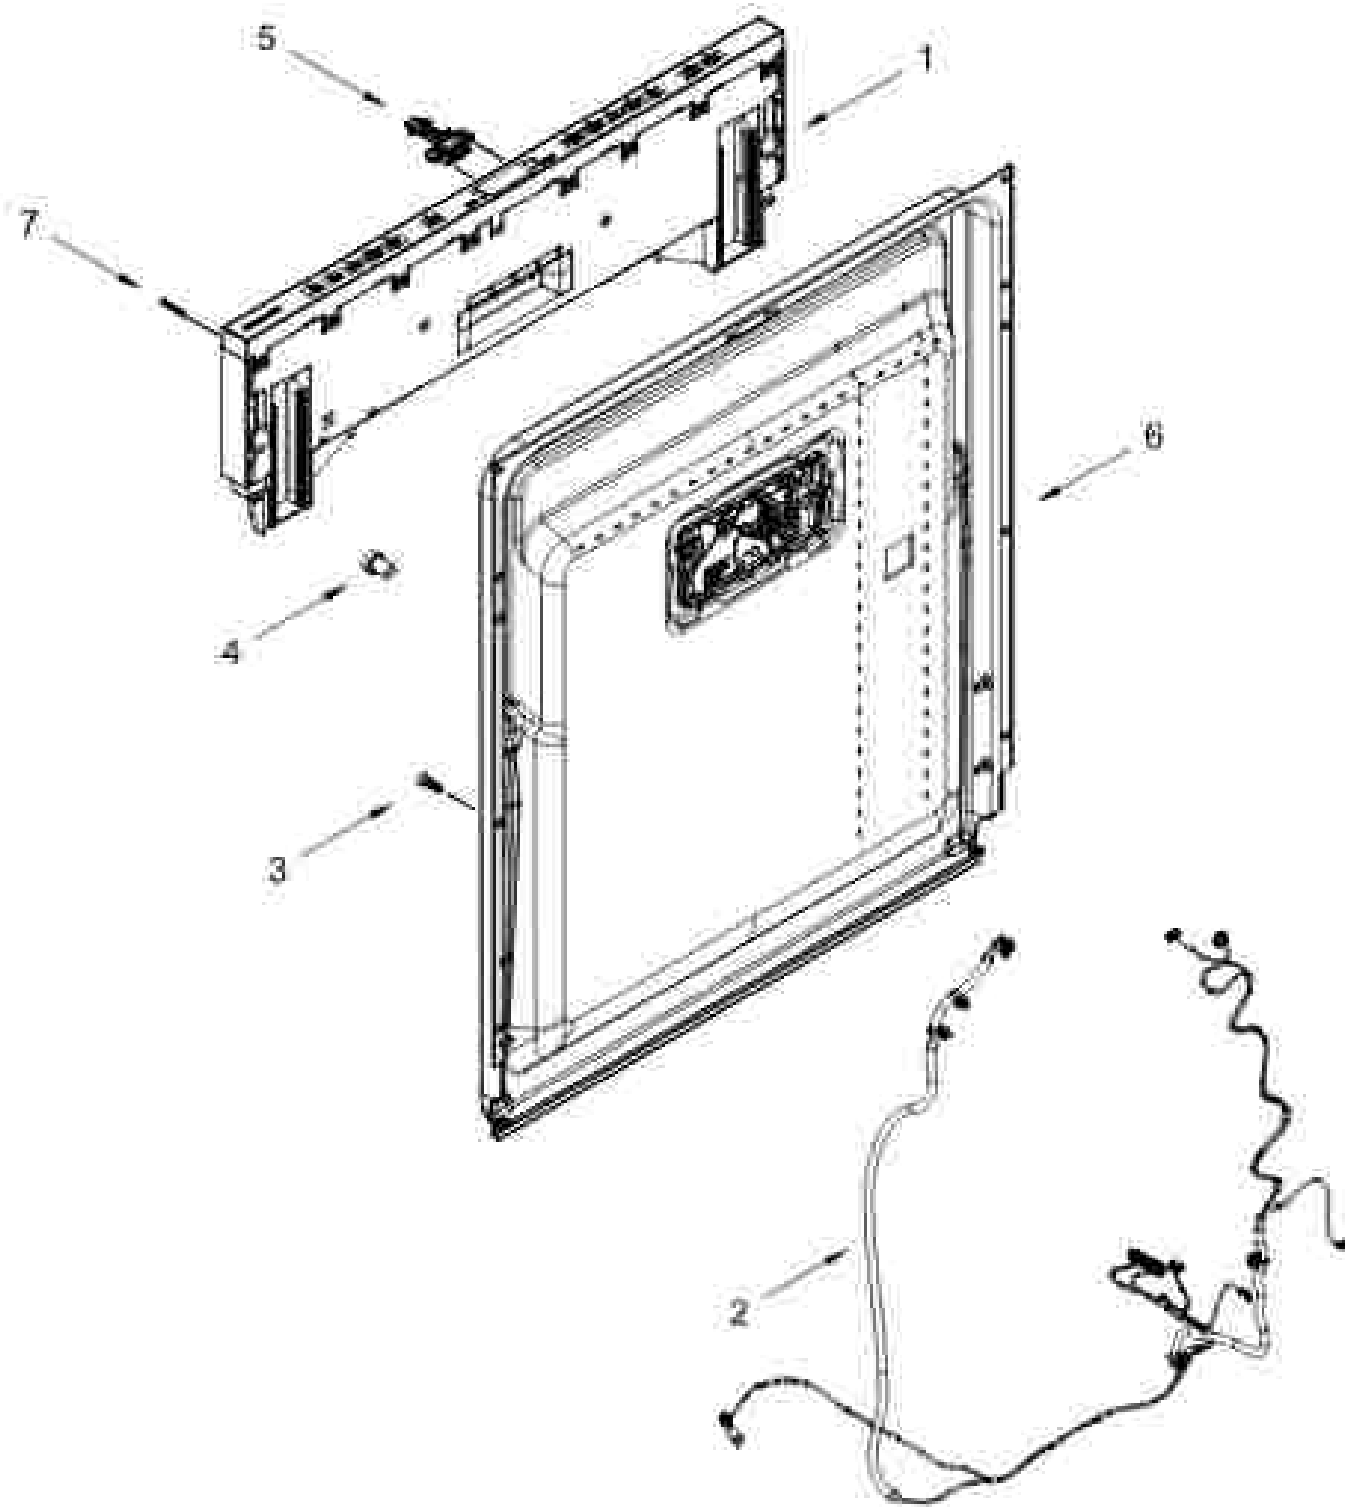

CONTROL PANEL AND INNER DOOR PARTS

Item No.	Part No.	Description	Item No.	Part No.	Description	Item No.	Part No.	Description
1		Console Assembly Includes Insert	3	W12541360	Screw	6	W12534843	Inner Door Assembly Includes Boot Dispenser
	W11355042	Block	4	W10344831	Bushing, Bored/Blind			
2	W11526334	Strap Harness, Inner Door	5	W11091934	Latch Assembly Includes Switch	7	W11331253	Screw


TUB AND FRAME PARTS

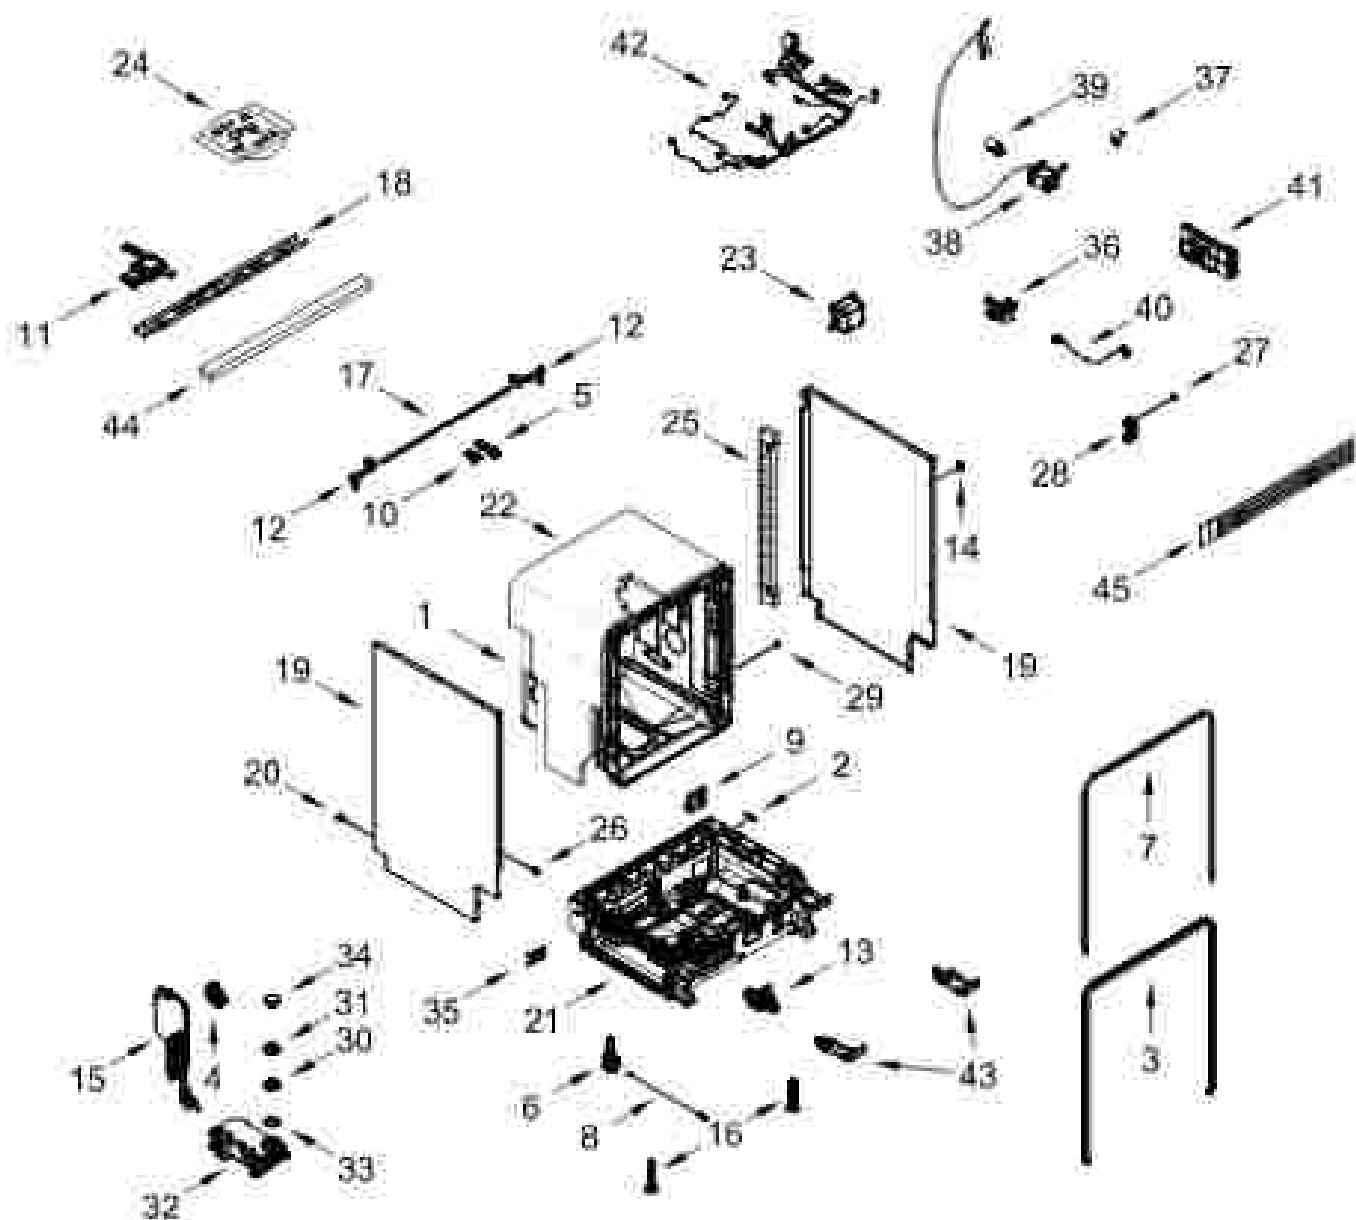

TUB AND FRAME PARTS

Item No.	Part No.	Description	Item No.	Part No.	Description	Item No.	Part No.	Description
1		Tub (Not Serviced)	16	WH1325130	Leg, Leveling (Front)	32	WH1542832	Softener, Water
2	WH1671752	Pad, Tub Support	17	WH1317038	Cover, Top	33	WH1244032	Seat, Softener
3	WH1553330	Gasket, Tub	18	WH1306174	Crossover, Front Frame	34	WH1509488	Funnel, Salt
4	WH1306321	Nut, Air Snee	19	WH1333608	Side Panel (Left)	35	WH1688081	Plate, In/Out Hoses
5	WH1314775	Strike, Latch		WH1333632	Side Panel (Right)	36	WH1542561	Jumper, RFI to Control
6	WH1315238	Assembly, Leveling Leg (Rear)	20	WH1326458	Screw	37	WH10543112	Spring, Grounding
7	WH1554331	Retainer, Tub Gasket	21	WH1550387	Assembly, Bleed	38	WH1578102	Power Cord Assembly
8	WH1326471	Rod, Foot Adjustment (Rear)	22	WH1554808	Shield, Tub Sound	39	WH1413732	Filter, RFI
9	WH1553833	Holder, Damp	23	WH1543587	Assembly, Junction Box	40	WH1546878	Jumper Harness, Service Port
10	WH1317043	Cover, Door Opening	24	WH1596040	Miscellaneous Parts Bag	41	WH1596407	Control, Electronic
11	WH1550750	Assembly, Door Opening	25	WH1525908	Spacer, Side Panel	42	WH1509215	Wiring Harness, Main
12	WH1315552	Cover, Tub-Daniel (Left)	26	WH1306347	Screw	43	WH1554708	Channel, Overflow (Left)
	WH1315558	Cover, Tub-Daniel (Right)	27	WH1341302	Screw		WH1554738	Channel, Overflow (Right)
13	WH1502936	Foot-Switch	28	WH1555505	Button, Tub	44	WH1576242	Edam, Crossover
14	WH1321322	Plug, Tub	29	WH1227921	Nut, Softner	45	WH1572775	Kit, Side Control Installation
15	WH1552132	Air Bleed	31	WH1227934	Cap, Salt			

PUMP, WASHARM AND MOTOR PARTS

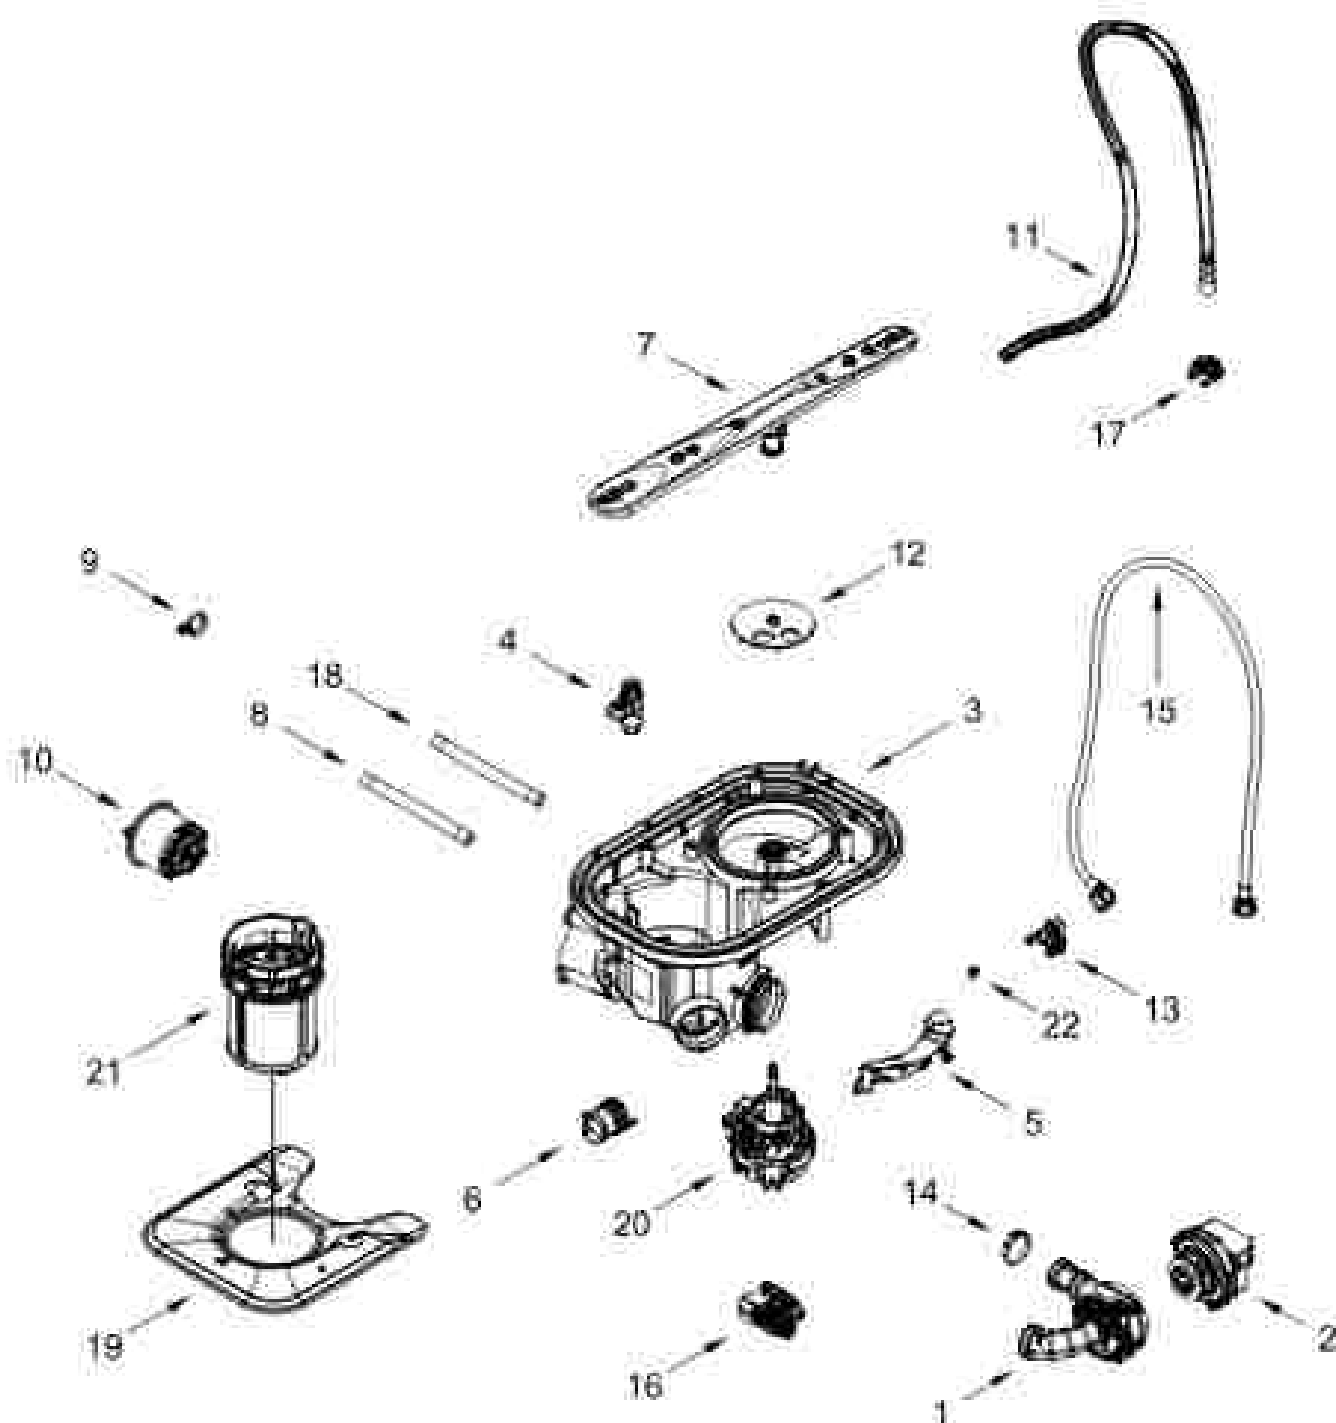


PUMP, WASHARM AND MOTOR PARTS

<u>Item</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11530727	Header, Pump
2	W11530728	Motor, Pump
3	W11530888	Bump (includes Seal)
4	W11530923	Drain Vent Assembly
5	W11530957	Diffuser, Inlet
6	W11530934	Check Valve, Drain
7	W11529053	Wash Arm Assembly
8	W11530952	Hose, Pump Inlet

<u>Item</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
9	W10098891	Clamp, Hose
10	W11531981	Motor, Drain
11	W11530398	Hose, Drain
12	W11179589	Disc, Converter
13	W11545525	Pin Valve Assembly
14	W11122891	Clamp, Hose
15	W11497593	Hose, Inlet
16	W11126174	Indicator, Optical Wash

<u>Item</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
17	W15325917	Clp, Hose
18	W11003954	Hose, Inlet
19	W11442133	Gate
20	W11543524	Discharge Valve Motor
21	W11555642	Filter
22	W11015323	Clamp, Hose


UPPER WASH AND RINSE PARTS

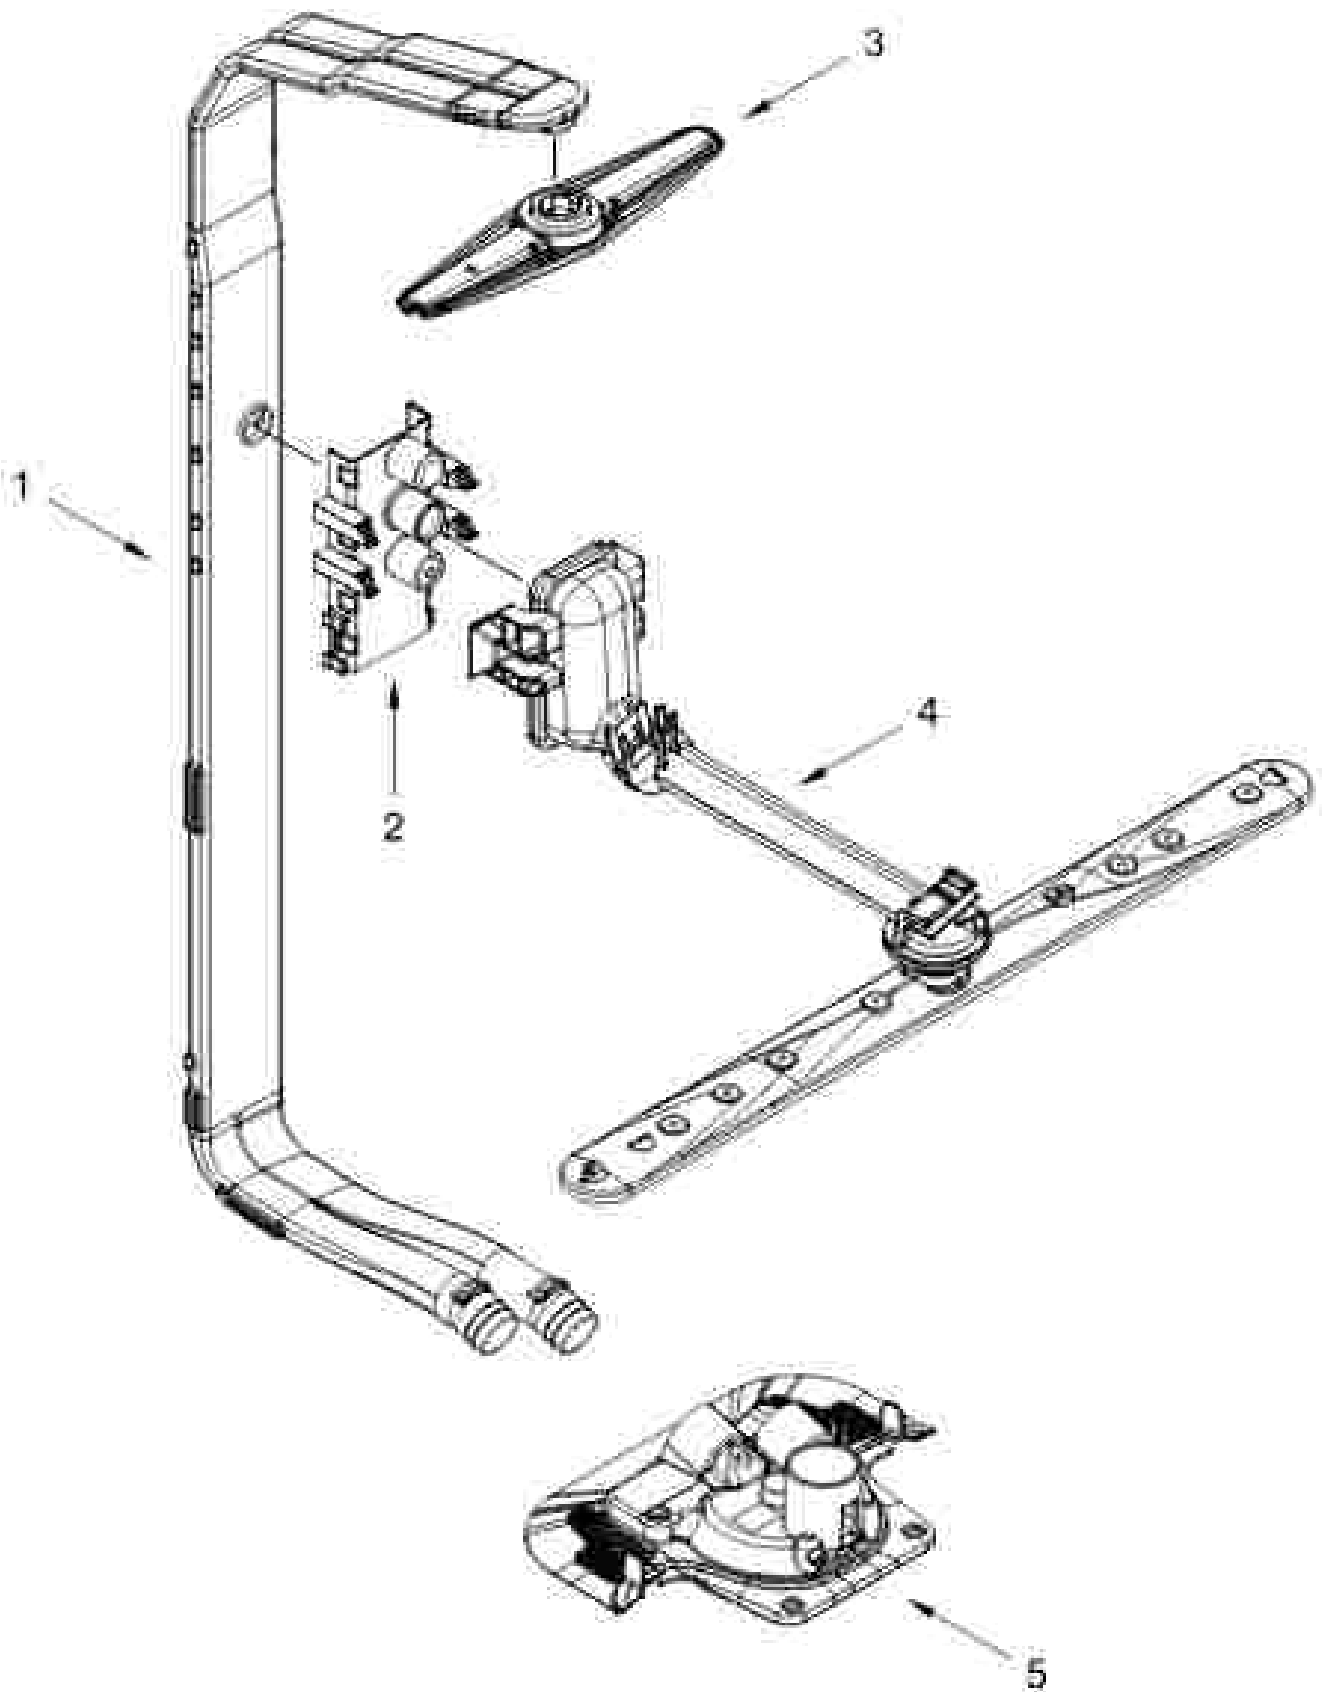

UPPER WASH AND RINSE PARTS

Item No.	Part No.	Description	Item No.	Part No.	Description	Item No.	Part No.	Description
1	W1152253	Feed Tube Assembly	3	W1152221	Sprayer, Third Level	4	W1522-95	Upper Sockjet Assembly
2	W1152215	Retainer, Dosing (2nd Level)				5	W1152250	Cover, Diverter

UPPER RACK AND TRACK PARTS

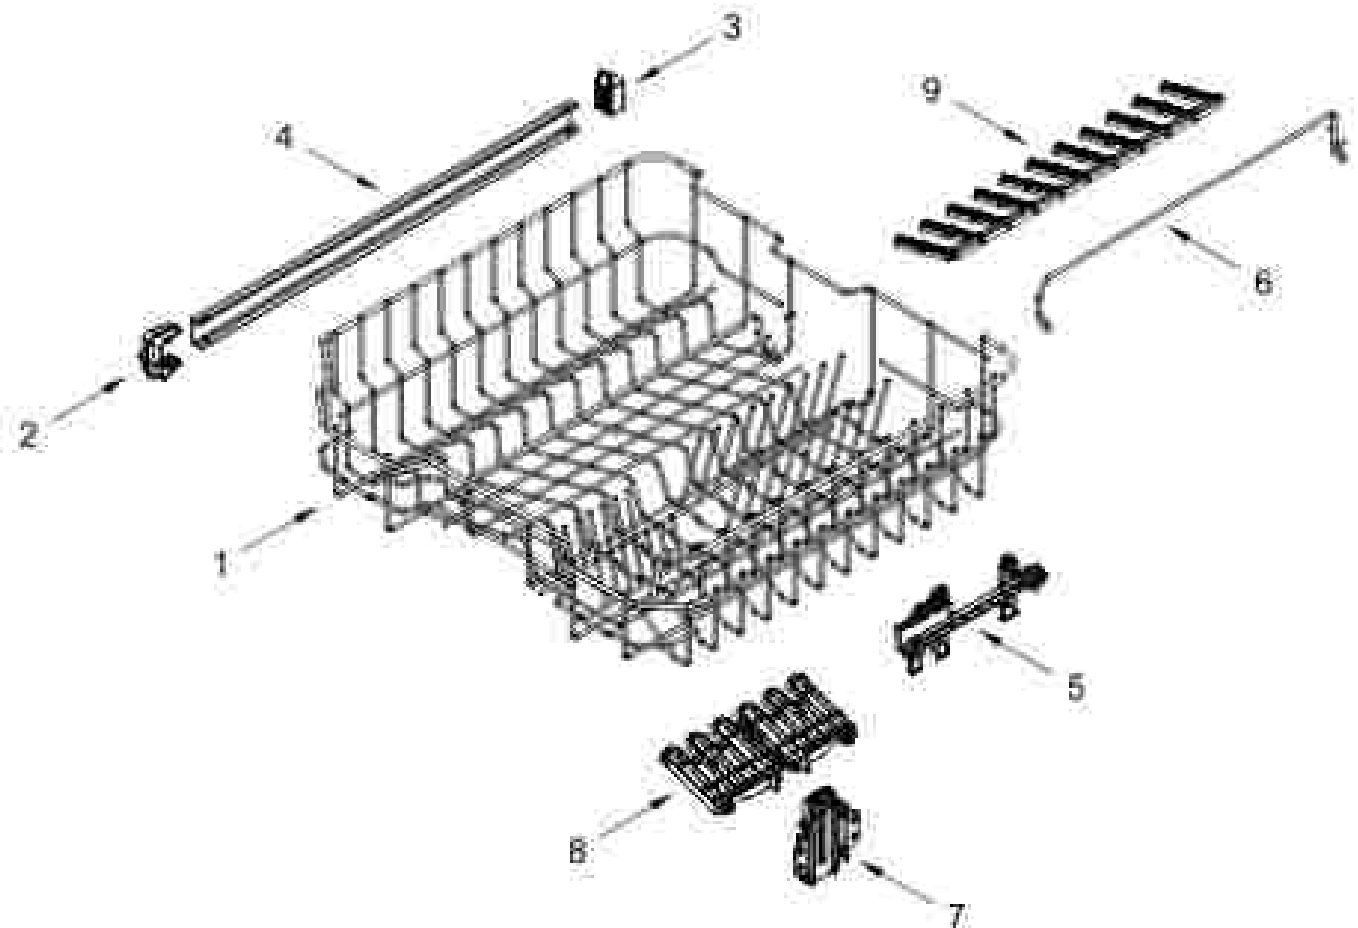


UPPER RACK AND TRACK PARTS

Item No.	Part No.	Description
1	W1132113	Distrocl, Upper
2	W11313114	Track Stop, Front
3	W11313115	Track Stop, Rear
4	W13334545	Track, Distrocl

Item No.	Part No.	Description
5	W11331501	Adjustment Assembly (Left)
	W11331500	Adjustment Assembly (Right)

Item No.	Part No.	Description
6	W11333345	Support, Tire Row
7	W11332552	Cup, Cup Shelf
8	W11332555	Cup Shelf
9	W11333438	Tire Row, Fold Down

LOWER RACK PARTS

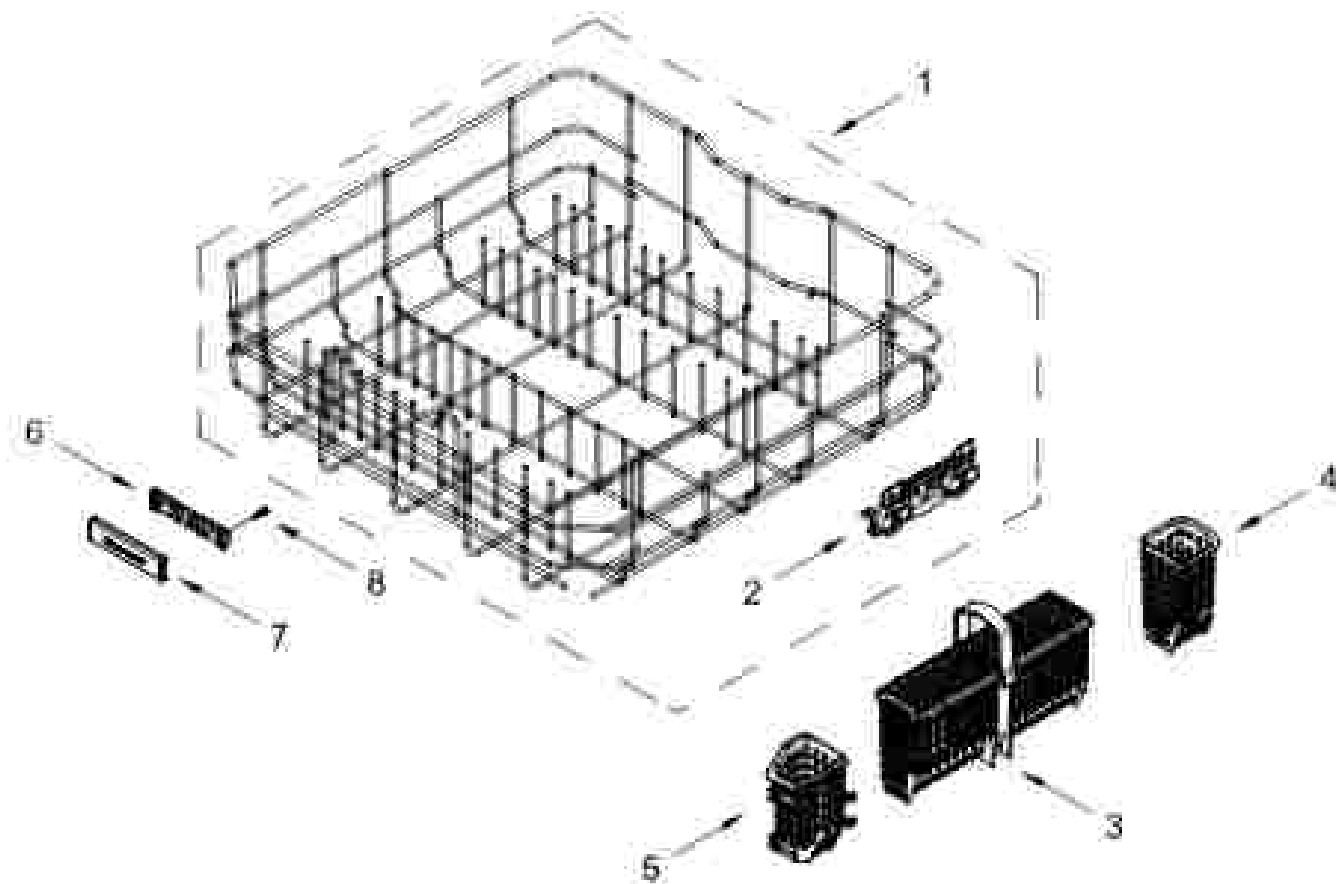

LOWER RACK PARTS

<u>Item</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Item</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Item</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11543671	Cantecr. Lower	4	W11534637	Uteral Basket (Rear)	7	W11590247	Handle, Front
2	W11543733	Wheel & Transport Assembly	5	W11534638	Uteral Basket (Front)	8	W11527332	Spoke
3	W11523677	Structure Basket Assembly	6	W11590338	Handle, Rear			