




MICROWAVE

MODELS:

WMH78519LW00 (White)

WMH78519LB00 (Black)


CONTROL PANEL PARTS

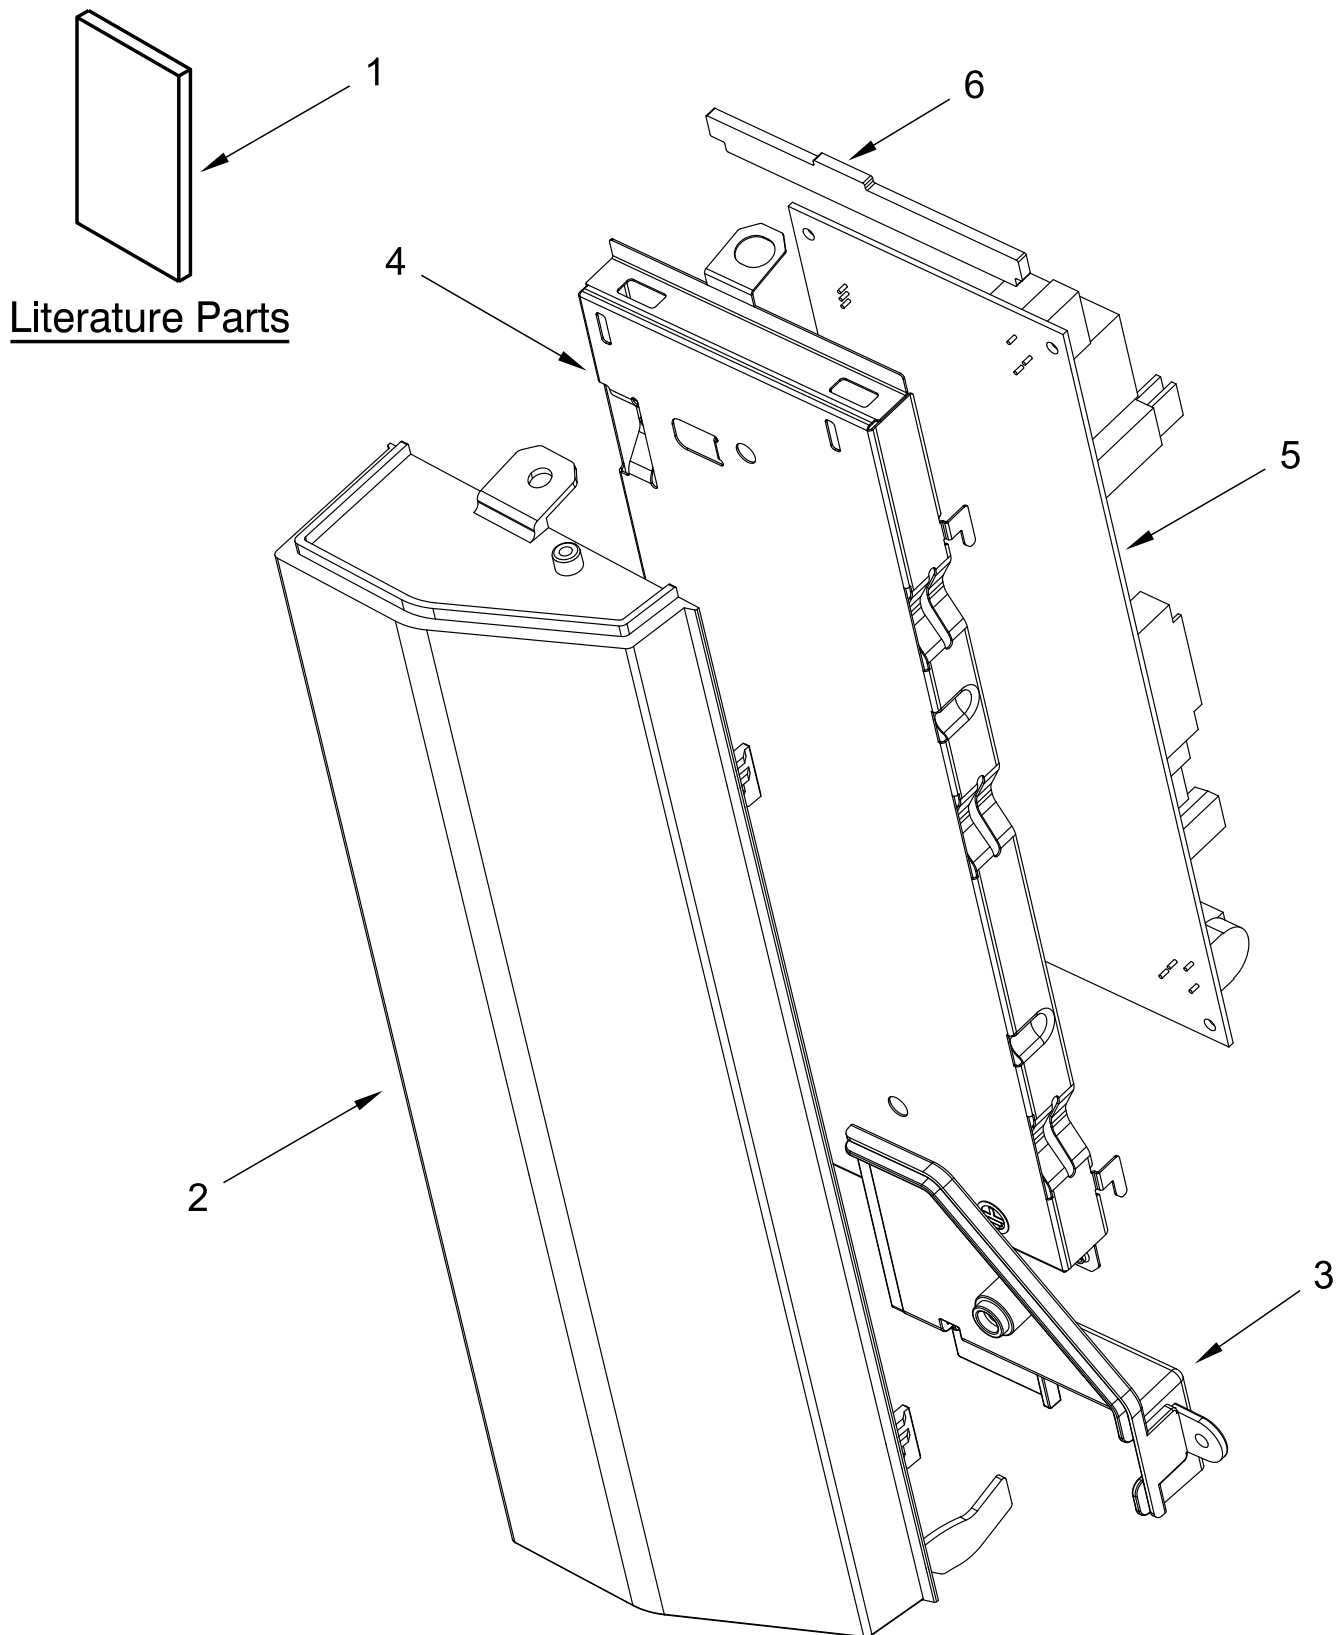

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	2		Cover, Control	5	W11627690	PCBA, Appliance Control Unit
	W11496338	Installation Instructions		W10571112	White			
				W10478239	Black	6	W10540721	Seal, Control
	W11603630	Use and Care Guide	3	W10533504	Duct, Cooling Front			
	W11603638	Quick Reference Guide	4	W10540727	Background, Control			
	W11603648	Tech Sheet						

DOOR PARTS

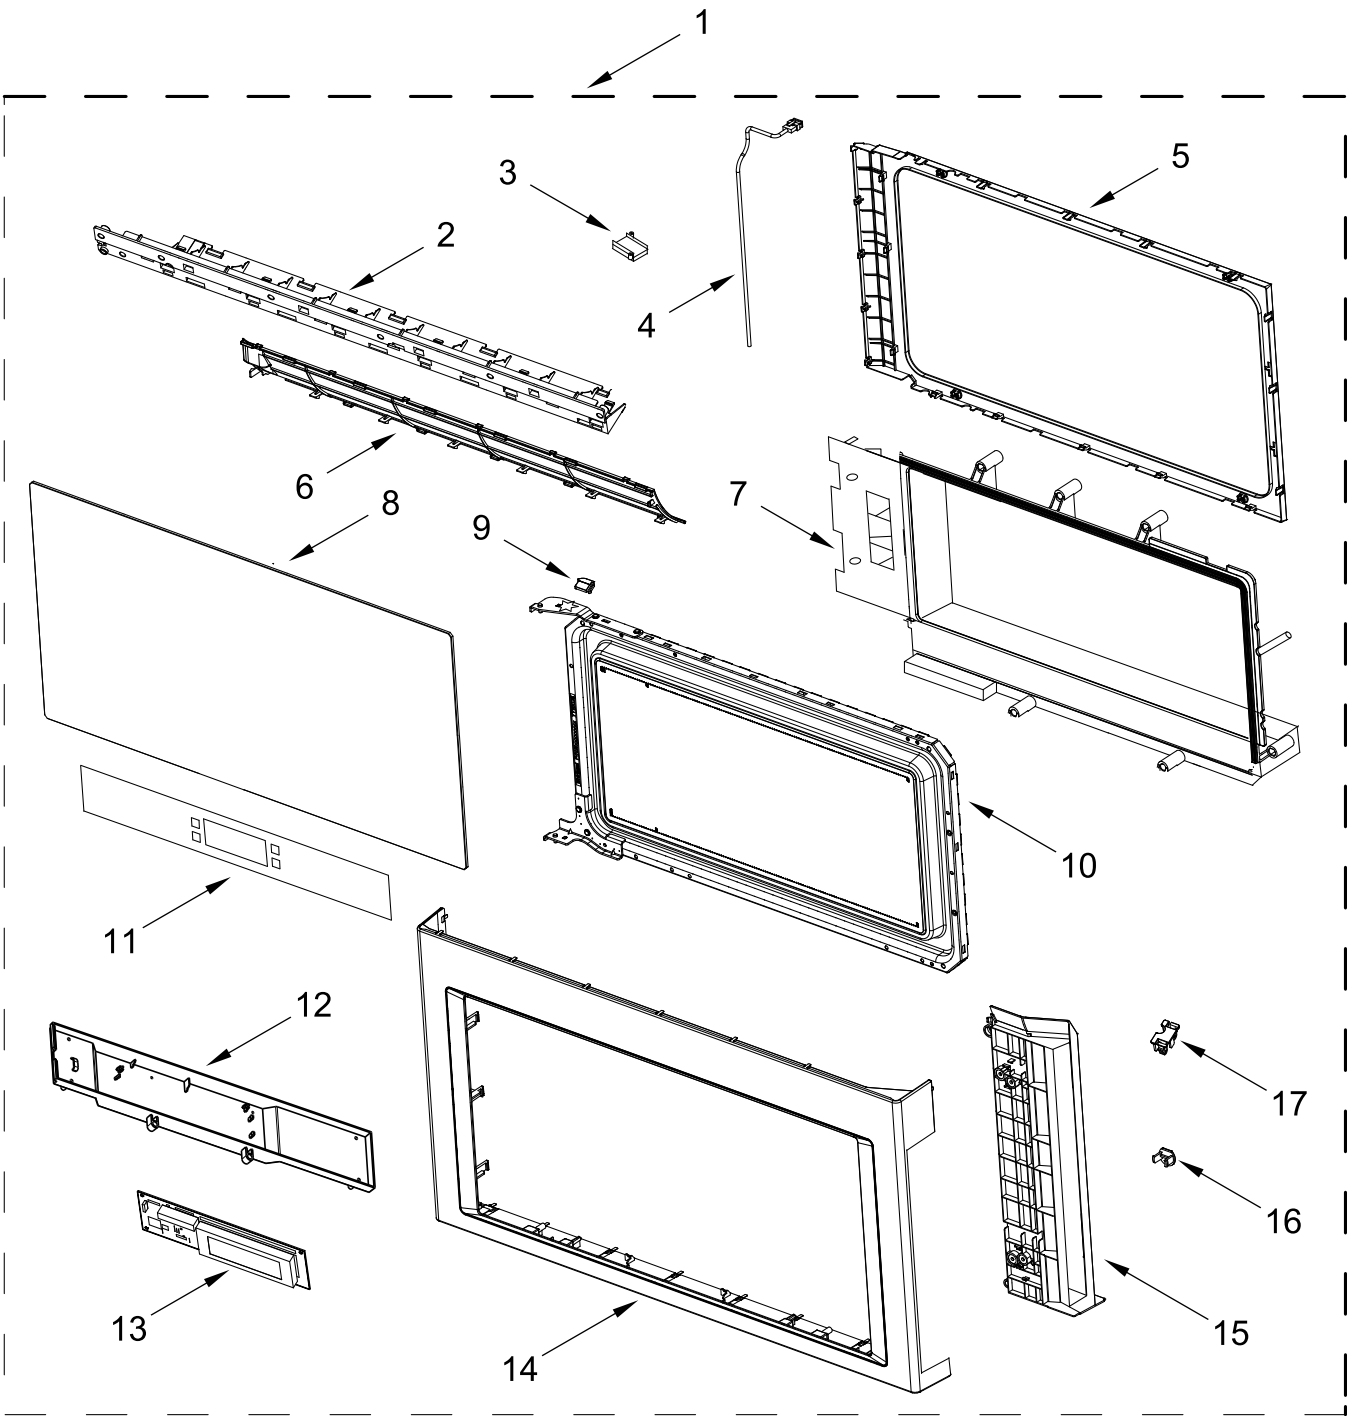


DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Door, Complete
	W11643340	White
	W11643348	Black
2	W10476546	Bracket, Door
3	W10770971	Bracket, Door Cable
4	W11320318	Cable, Door User Interface
5	W10897612	Frame, Inner
6		Frame, Back Decorating
	W10570992	White
	W10476550	Black

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
7	W11643345	Cover, PCBA
8	W11600911	Glass, Outer Door
9	W10643448	Stopper, Door
10	W10891969	Body, Door (With Glass)
11	W11381432	PCBA, Touch Sensor
12	W11602074	Holder, PCBA
13	W11623075	PCBA, User Interface
14		Assembly, Outer Door
	W11206125	White
	W11206123	Black

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
15	W10909200	Handle, Pocket Door
16		Cover, Screw
	W10571119	White
	W10542546	Black
17	W10770972	Holder, Door Cable


INTERIOR AND VENTILATION PARTS

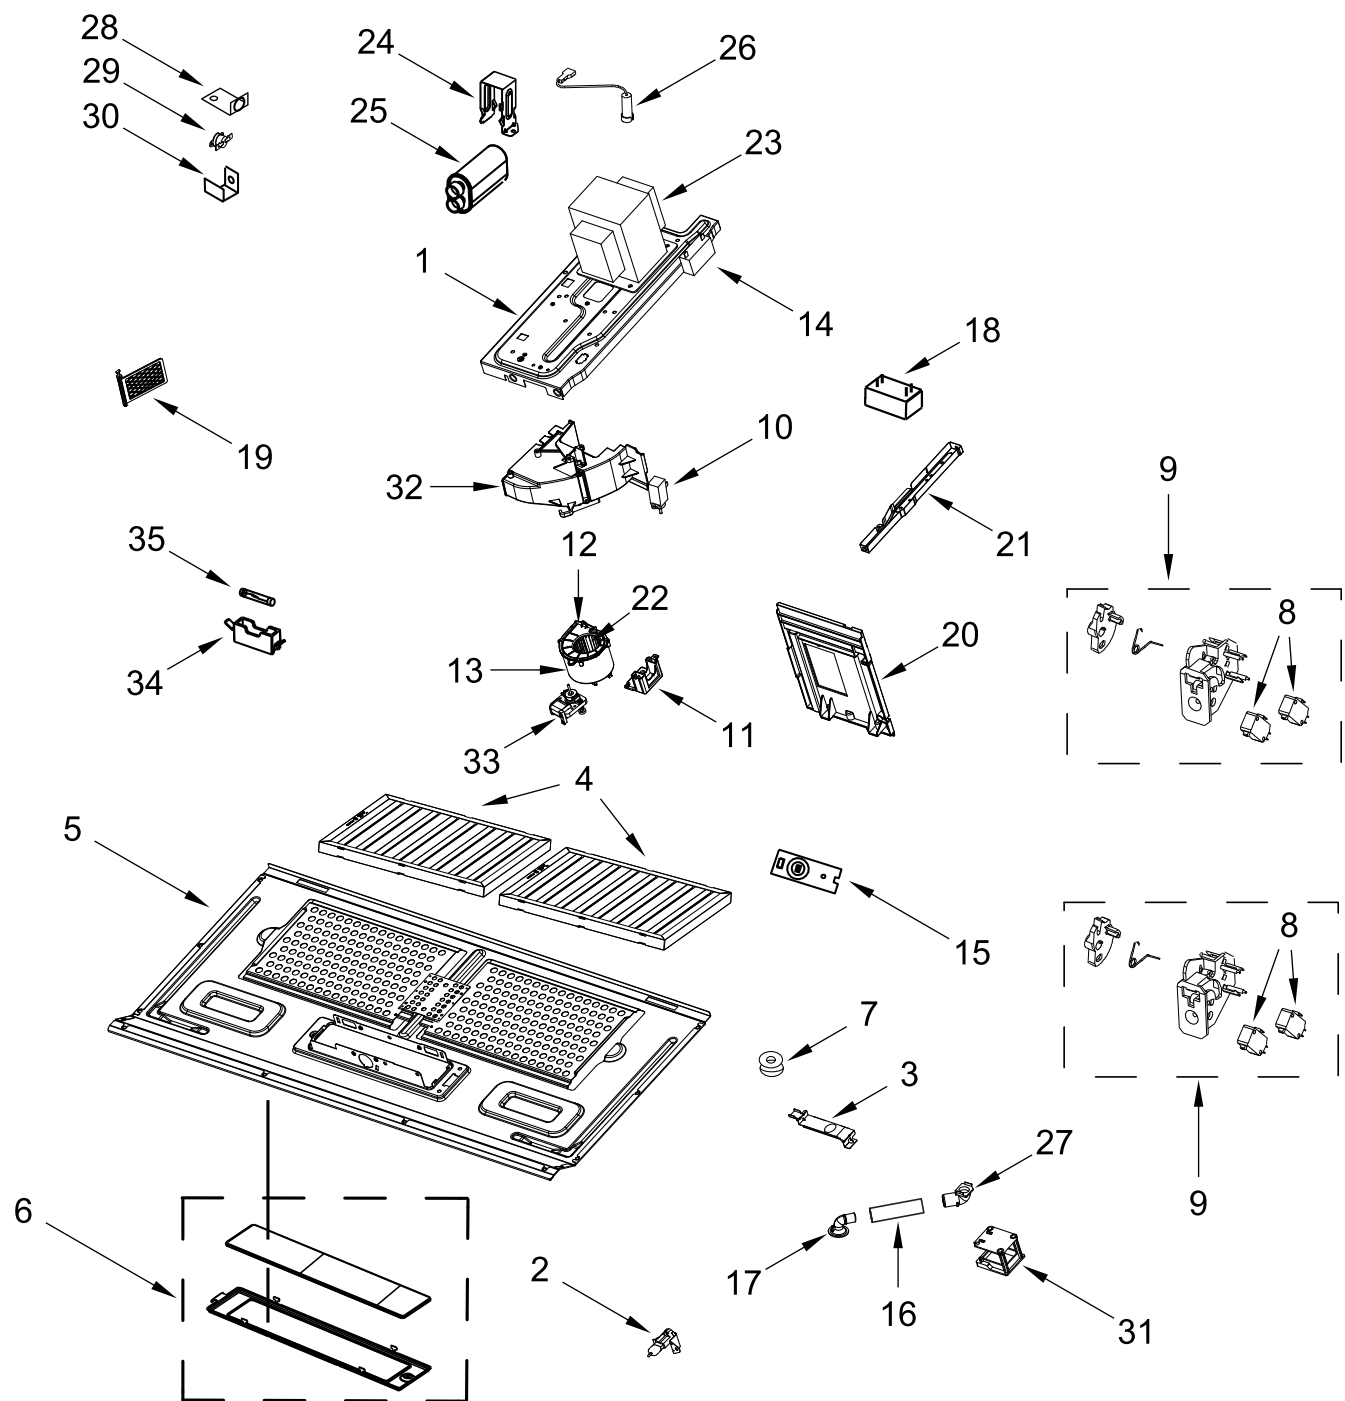

INTERIOR AND VENTILATION PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10908578	Chassis	12	W10533502	Cover, Cooling Fan	25	W10561774	Capacitor, High Voltage
2	W11409090	Lamp, Halogen	13	W10533501	Housing, Cooling Fan	26	W11222648	Diode, High Voltage
3	W10525853	Bracket, Smart Pop	14	W11405831	Capacitor, Motor	27	W10510233	Terminal, PCBA Smart Pop
4	W10535950	Filter, Grease	15	W10536989	Thermistor, PCBA	28	W10259248	Cover, Thermostat
5	W10571126	Plate, Bottom	16	W10510235	Tube, Smart Pop Sound	29	W11268275	Thermostat, Convection
6	W10240330	Assembly, Lamp Glass and Holder	17	W10510234	Terminal, Smart Pop	30	8206223	Clip
7	W10510237	Spacer, Smart Pop	18	W11259891	Resistor, Cement	31	W11381433	PCBA, Smart Pop
8		Switches, Interlock (Not Serviced, Order Interlock Assemblies)	19	W10533486	Valve, Door	32	W10631701	Air Guide, Magnetron
9	W11187757	Assembly, Interlock (Includes Switches)	20	W10533107	Deflector, Air	33	W11169357	Motor, Cooling Fan
10	W10458325	Actuator	21	W10540718	Bracket, Cavity	34	W10245194	Holder, Fuse
11	W10533480	Holder, NTC	22	W10533503	Wheel, Cooling Fan	35	W10138793	Fuse
			23	W11249660	Transformer, High Voltage			
			24	W10556823	Bracket, Capacitor			


AIR FLOW PARTS

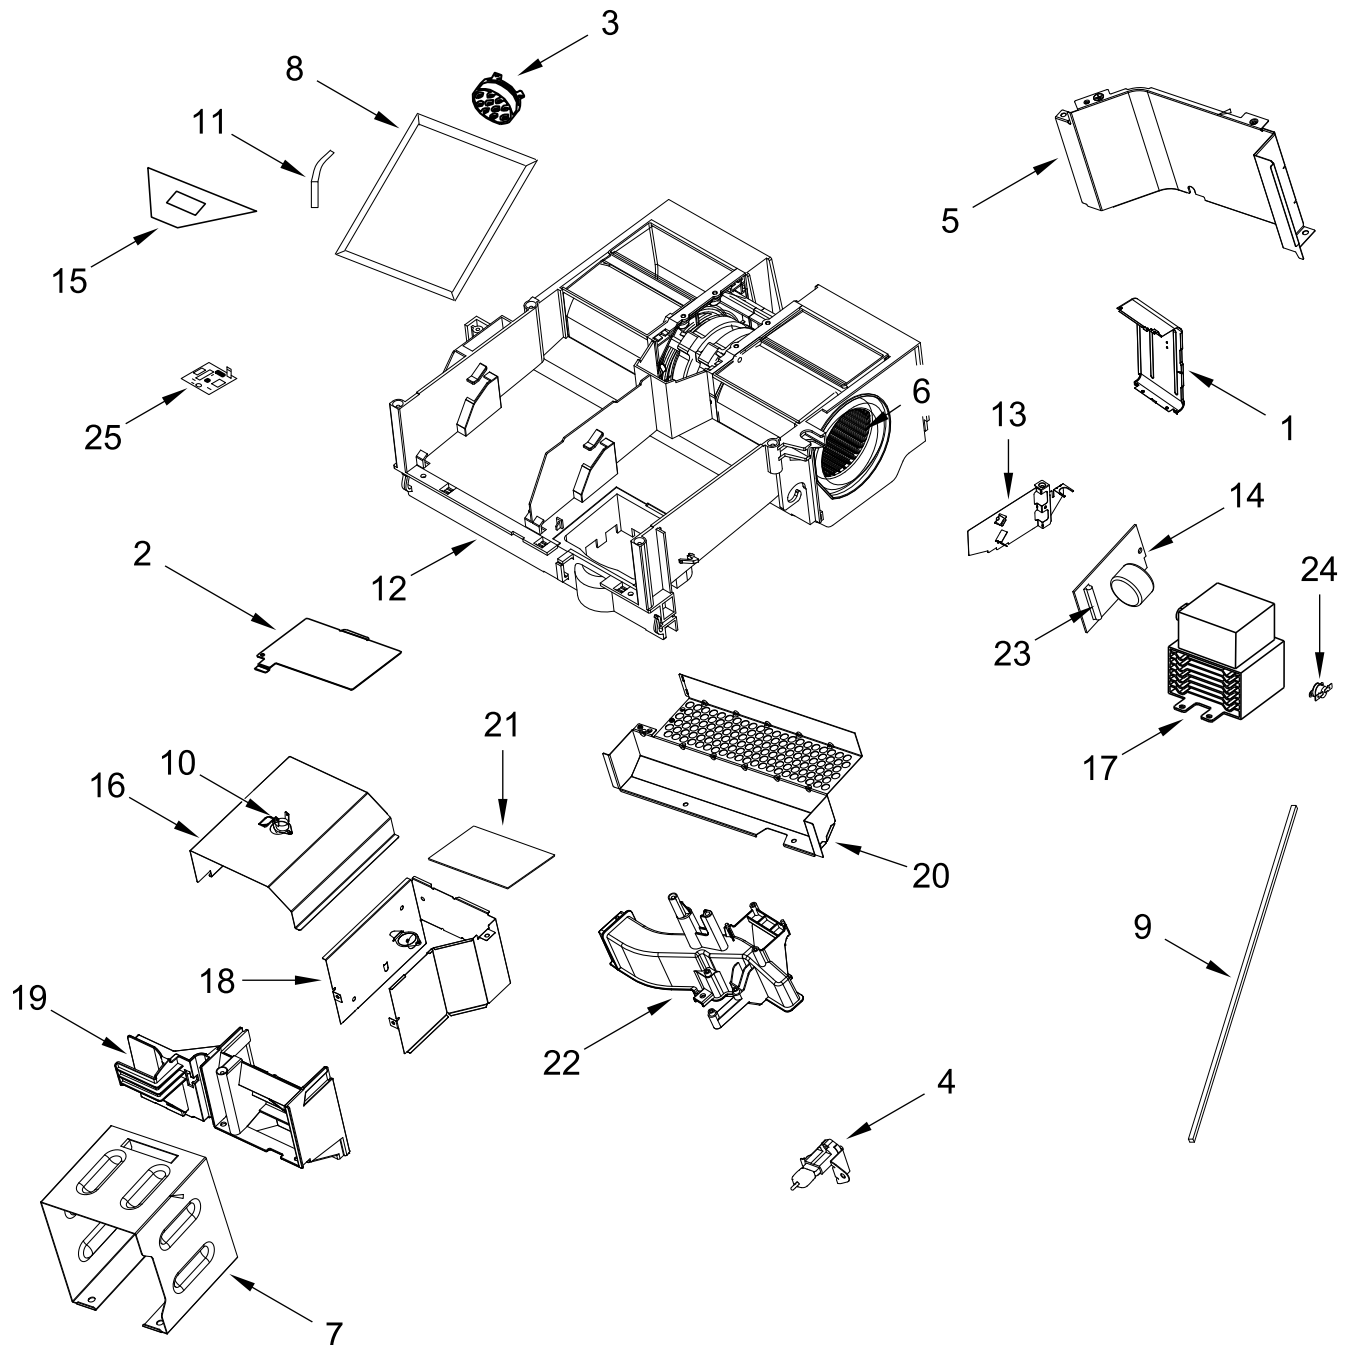

AIR FLOW PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11300398	Deflector, Air	14	W10572027	Board, Filter	22	W10758887	Assembly, Airguide Grille
2	8206382	Cover, Lamp	15	W10810142	Socket, Motor Wire	23	W10138793	Fuse
3	W10557536	Sensor, Humidity	16	W10533112	Outlet, Cavity (Back)	24	W10591803	Thermostat, Magnetron
4	W11409090	Lamp, Halogen	17	W10754517	Magnetron	25	W10565479	Board, Door Control
5	W10533487	Plate, Air Guide	18	W10533113	Duct, Cavity (Rear)			
6	W11409088	Motor, Fan	19	W10892384	Duct, Cavity (Front)			
7	W10712444	Housing, Damper			(For White Model)			
8	8206230	Filter, Charcoal		W10892383	Duct, Cavity (Front)			
9	W10571180	Seal, Foam			(For Black Model)			
10	W10654514	Thermostat, Cavity	20	W10715053	Shield, Finger			
11	W10557537	Sensor, Convection	21	W10531724	Glass, Lamp			
12	W10632409	Baseplate, Air Guide						
13	W11293488	Cover, Right Duct						


TURNTABLE PARTS

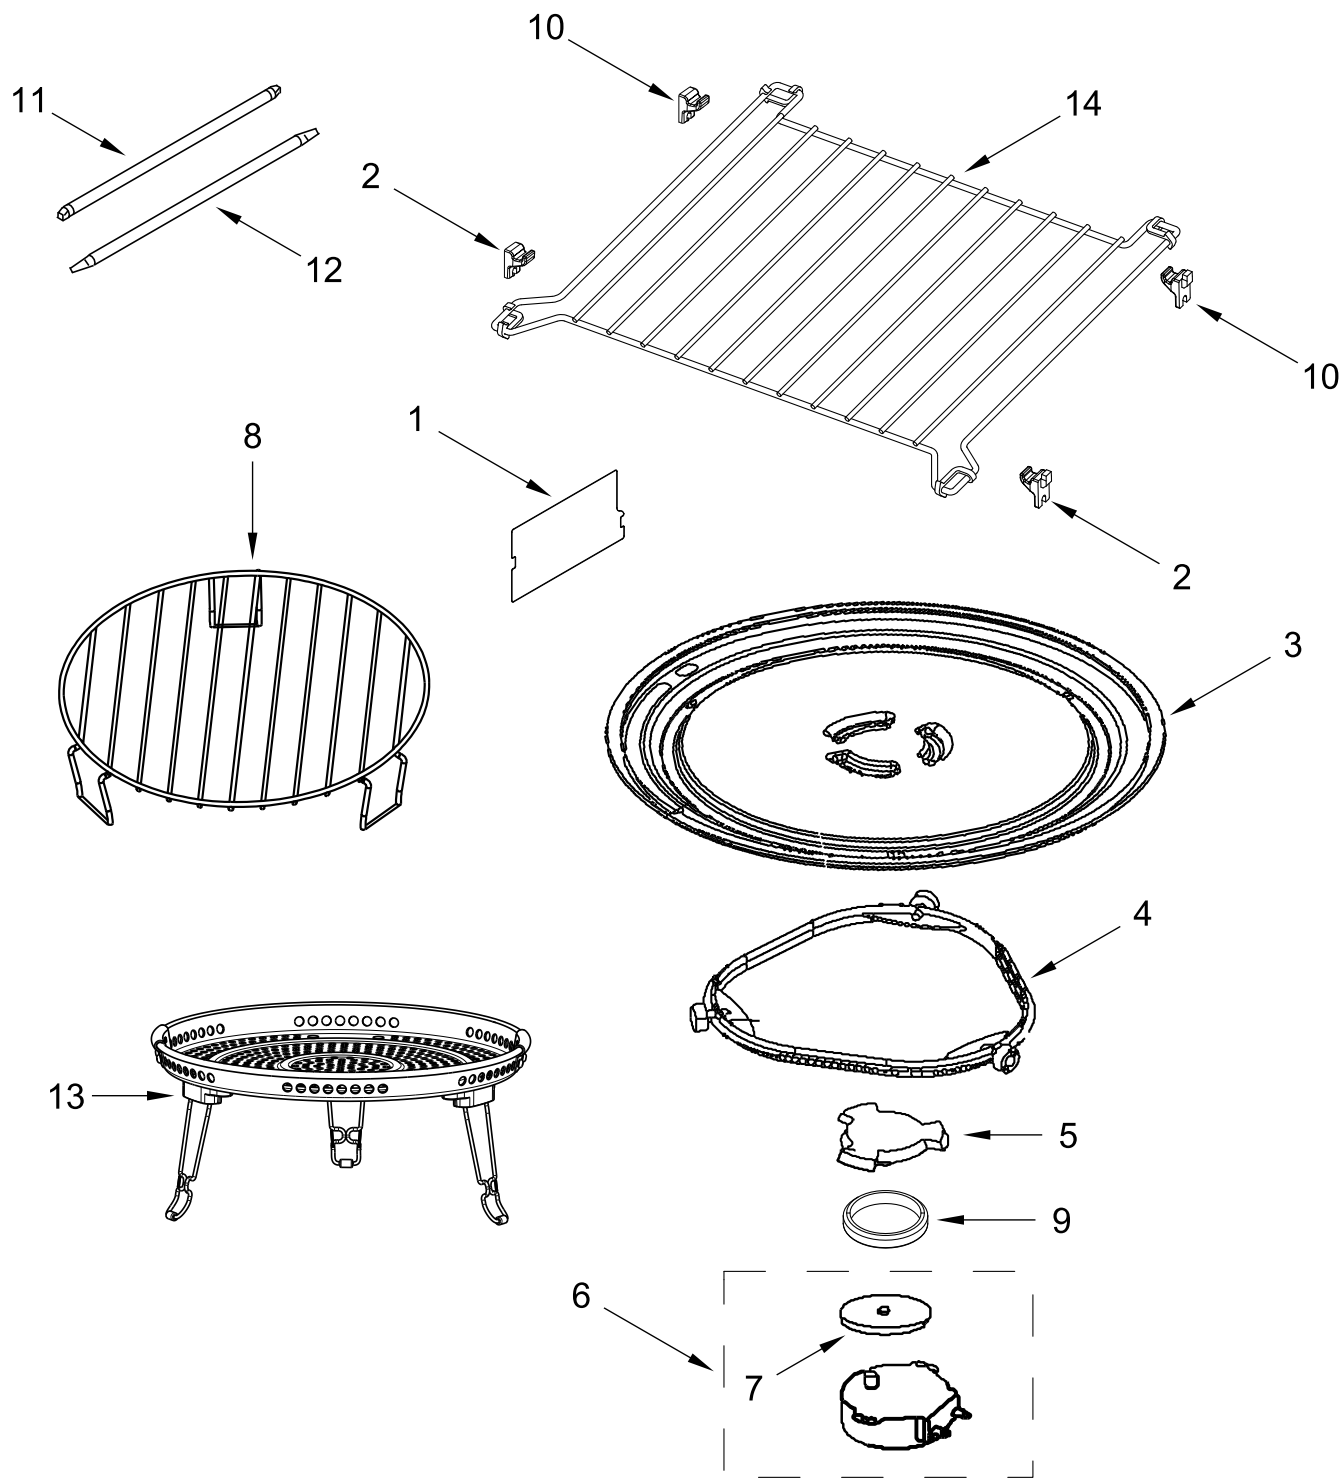

TURNTABLE PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11361167	Cover, Waveguide	6	W10466420	Motor, Turntable	11	8184837	Element, Grill Halogen
2	W10740485	Hook, Microwave (Left Front and Right Front)	7	8184109	Seal, Waterproof	12	W10510203	Heater, Quartz Grill
3	W11358813	Turntable	8	W10440082	Rack, Convection	13	W11594108	Basket, Air Fry
4	W10679313	Ring, Turntable	9	W10568148	Seal, Turntable Block	14	W10637931	Rack, Microwave (Sold Separately)
5	W10337248	Driver, Turntable	10	W10573936	Hook, Microwave (Left Rear & Right Rear)			

CABINET AND INSTALLATION PARTS

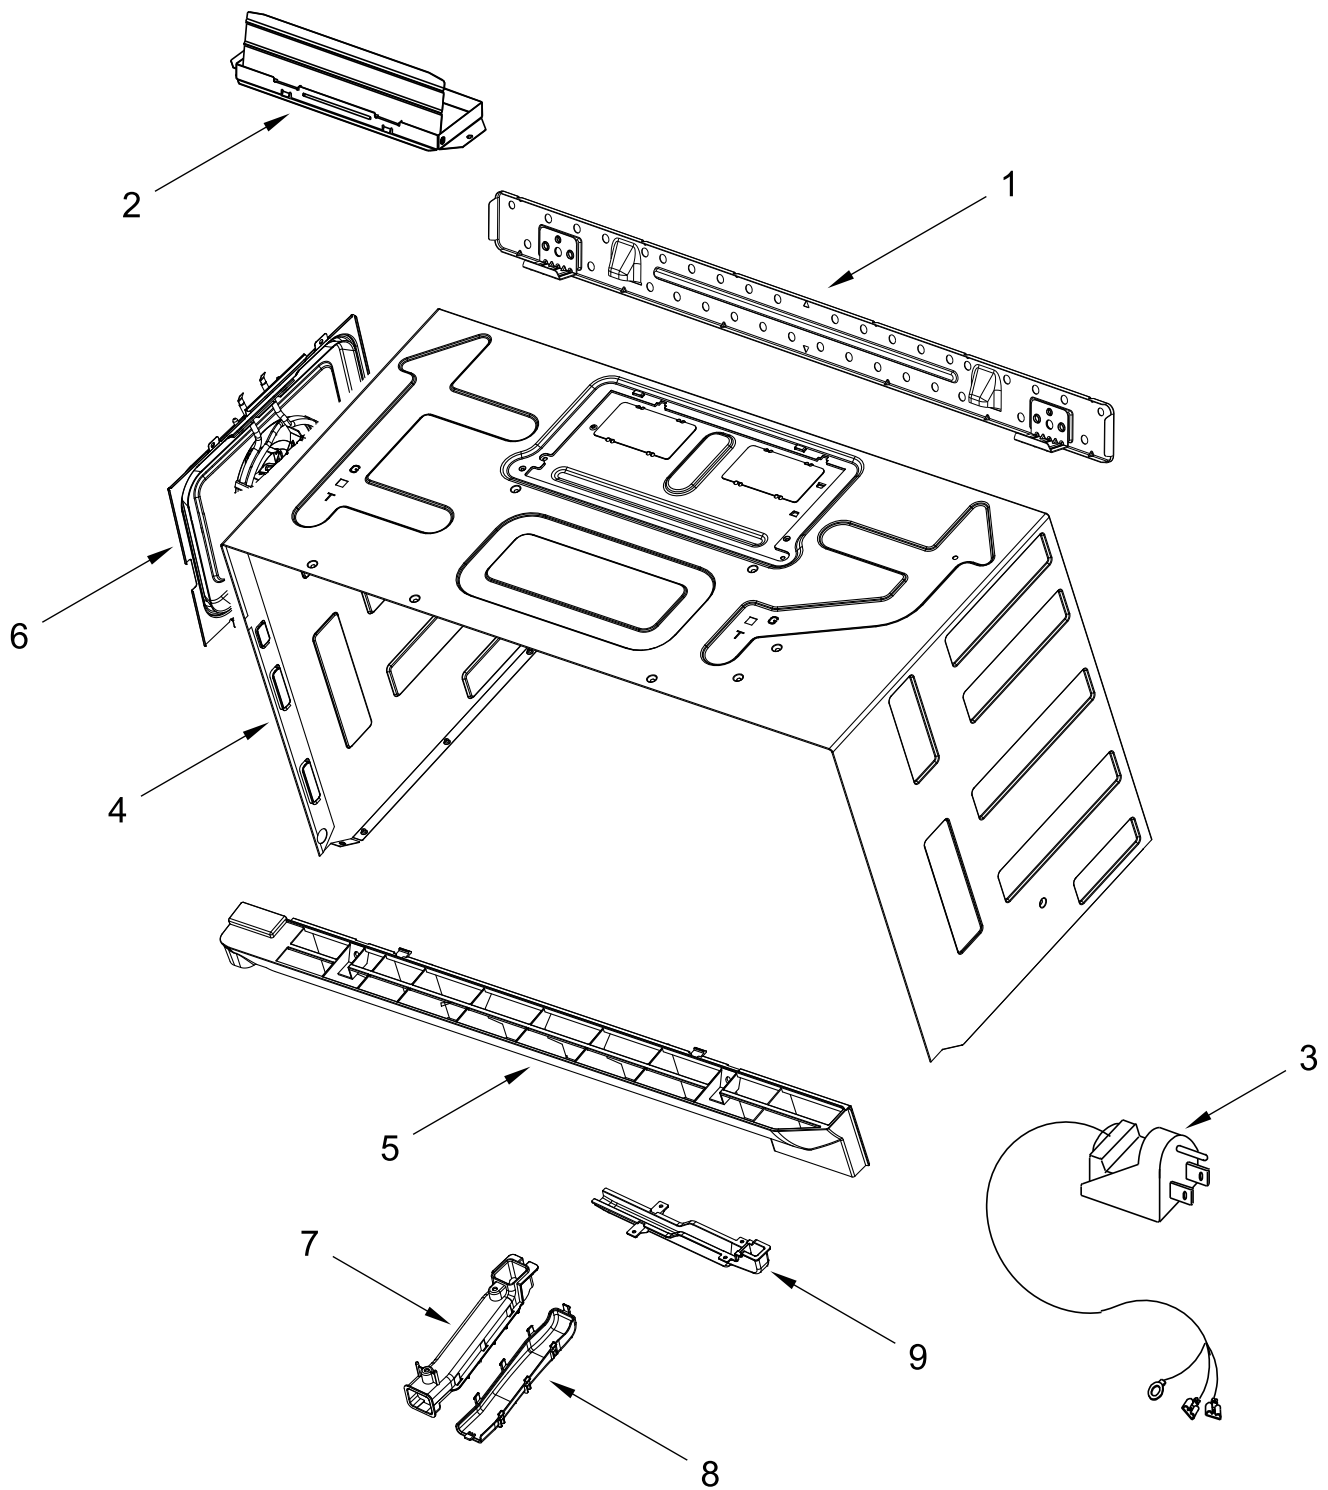

CABINET AND INSTALLATION PARTS

Illus.

<u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11025649	Plate, Mounting
2	W10748710	Damper
3	W10654511	Cord, Power
4		Case, Outer
	W11446920	White
	W11446919	Black
5		Grille, Vent
	W10701700	White
	W10701701	Black
6	W10571554	Assembly, Convection Motor and Fan
7	W10740434	Duct, Cooling (Upper)
8	W10533489	Duct, Cooling (Bottom)
9	W10570212	Air Duct, Turntable Motor
		FOLLOWING PARTS NOT ILLUSTRATED
	W10571450	Insulation, Back
	W10571452	Insulation, Top
	W10892377	Insulation, Bottom
	W10571453	Insulation, Side
		MISCELLANEOUS PARTS
	W10821385	Hardware, Installation
	W10190020	Template, Upper (English & Spanish)
	W10190018	Template, Upper (English & French)
	8169704	1/4-20x3" Panhead Screw
	W11302364	Harness, Main
	W11483628	Harness, Hood Lamp and Turntable Motor
	W10539840	Harness, PCBA Ground Wire
	W10566563	Harness, Smart Pop
	W10508741	Wire, Door Control Cable
	W10670896	Harness, Fade In / Fade Out
	W10566562	Cable, Fade In / Fade Out