




ELECTRIC RANGE

MODELS:

KSEG700ESS7 (Stainless)


COOKTOP PARTS

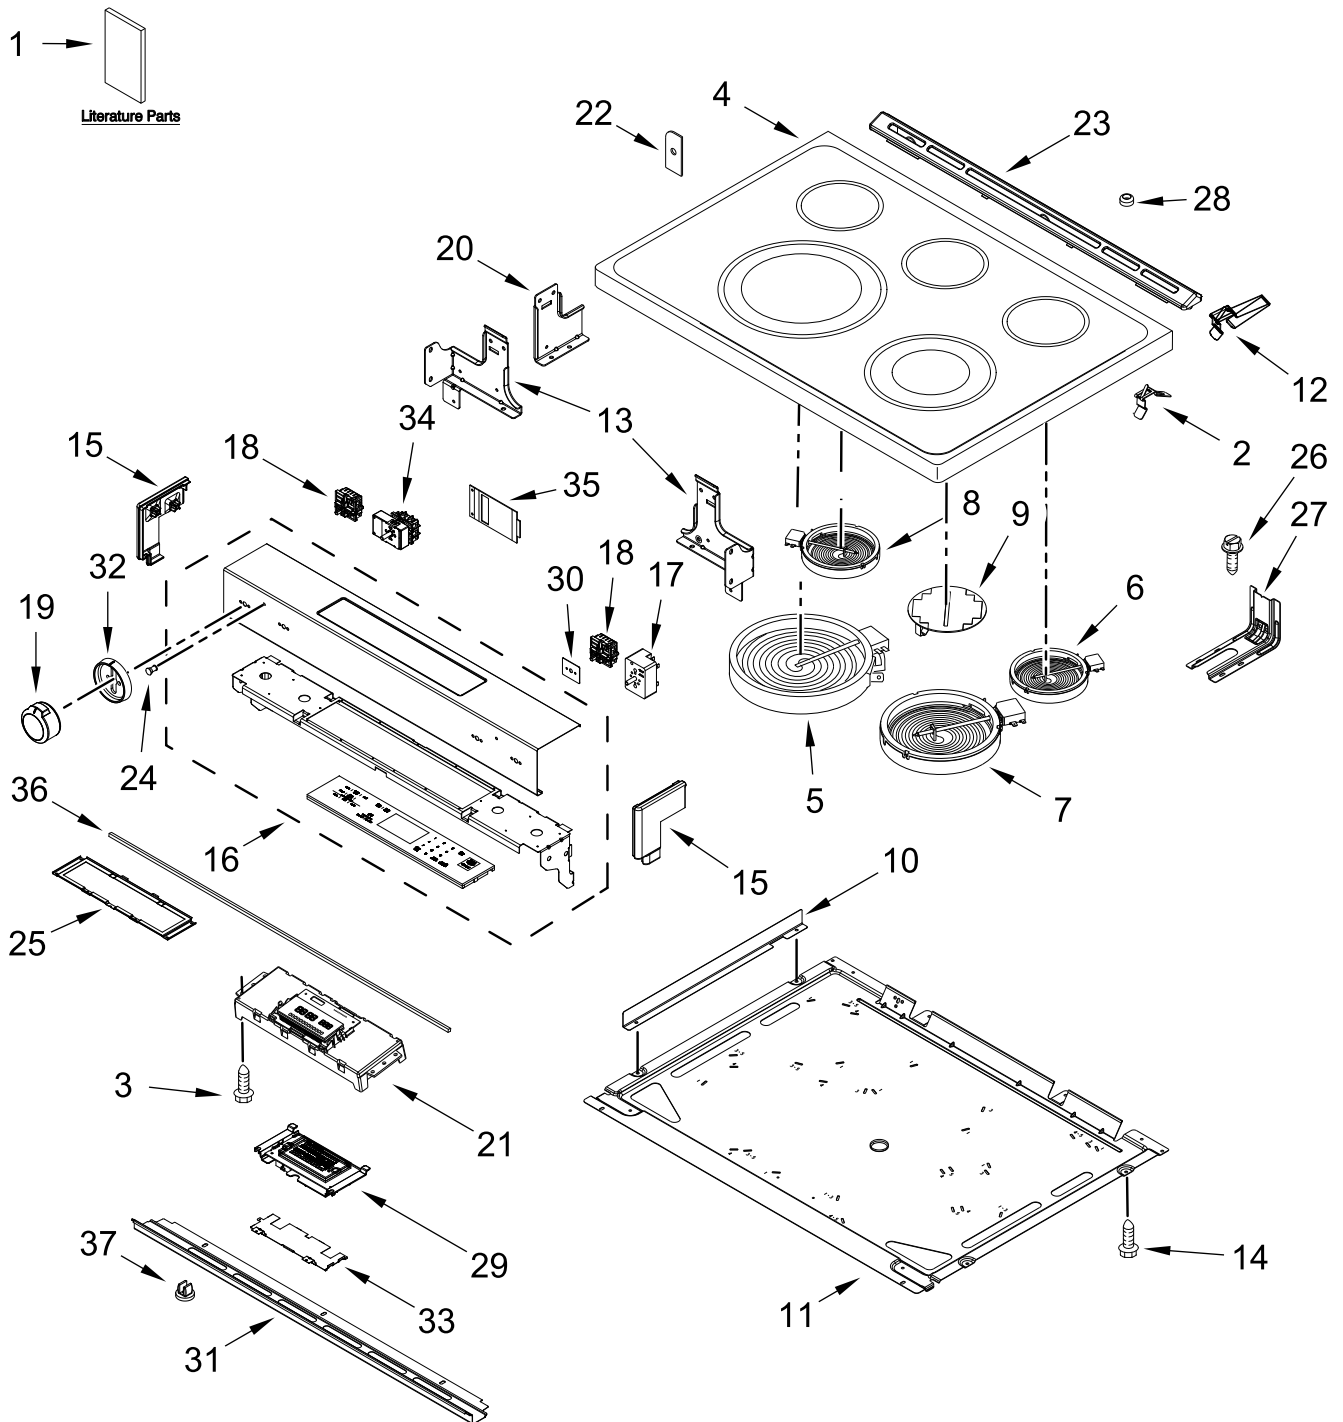

COOKTOP PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	15		Endcap	26	7101P485-60	Screw, Anti-Tip Kit
	W11645720	Owners Manual		W10555937	Stainless (Left)	27	W11379947	Bracket, Anti-Tip
	W11645714	Quick Start Guide		W10555940	Stainless (Right)	28	W10664705	Bumper
	W11326876	Tech Sheet	16		Console	29	W10759325	Assembly, Display
2	W11600012	Spring, Element		W10901128	Stainless	30	7201P077-60	Gasket, Infinite Switch
3	3196178	Screw	17	W10578768	Switch, Infinite	31		Console, Lower Panel
4		Cooktop			(Right Rear)		W10555934	Stainless
	W10536295	Black	18	W10437094	Switch, Infinite	32		Bezel
5	W11318371	Element (3000W)			(Right Front and Left Rear)		W10663809	Stainless
		(Left Front)	19		Knob	33	W10558372	Bracket, Control
6	W10248261	Element (1200W)		W10823543	Stainless	34	W10437097	Switch, Infinite
		(Right Rear)			(Right Rear)			(Left Front)
7	W10251108	Element (3200W)		W10823541	Stainless	35	W11355689	Keypad Shield
		(Right Front)			(Left Rear)	36	W10612719	Gasket, Console and Cooktop
8	W10342780	Element (1300W)		W10823538	Stainless	37	W10645947	Grommet
		(Left Rear)			(Right Front)			FOLLOWING PARTS NOT ILLUSTRATED
9	W10799048	Element, Warm Zone		W10823536	Stainless		W11454505	Harness, Main
		(Center Rear)			(Left Front)		W10575120	Harness, Keypad
10	W11175271	Bracket, Radiant	20	W10598048	Bracket, Console		W11172426	Harness, Display
11	W10536275	Pan, Radiant			(Center)		W11172417	Harness, Console
12	W10162253	Brace, Corner (Left)	21	W10759276	Control, MRC2		W10664316	Clip, Harness (Cooktop)
	W10162252	Brace, Corner (Right)	22	W10882900	Gasket		313438	Clip, Harness
13	W10289169	Support, Cooktop (Right)	23		Vent, Trim Top		W11134658	Harness, Cooktop
	W10289170	Support, Cooktop (Left)		W10636528	Black			
14	3196173	Screw	24	3196068	Lens, Indicator			
			25	W10555923	Bracket, User Interface			


CHASSIS PARTS

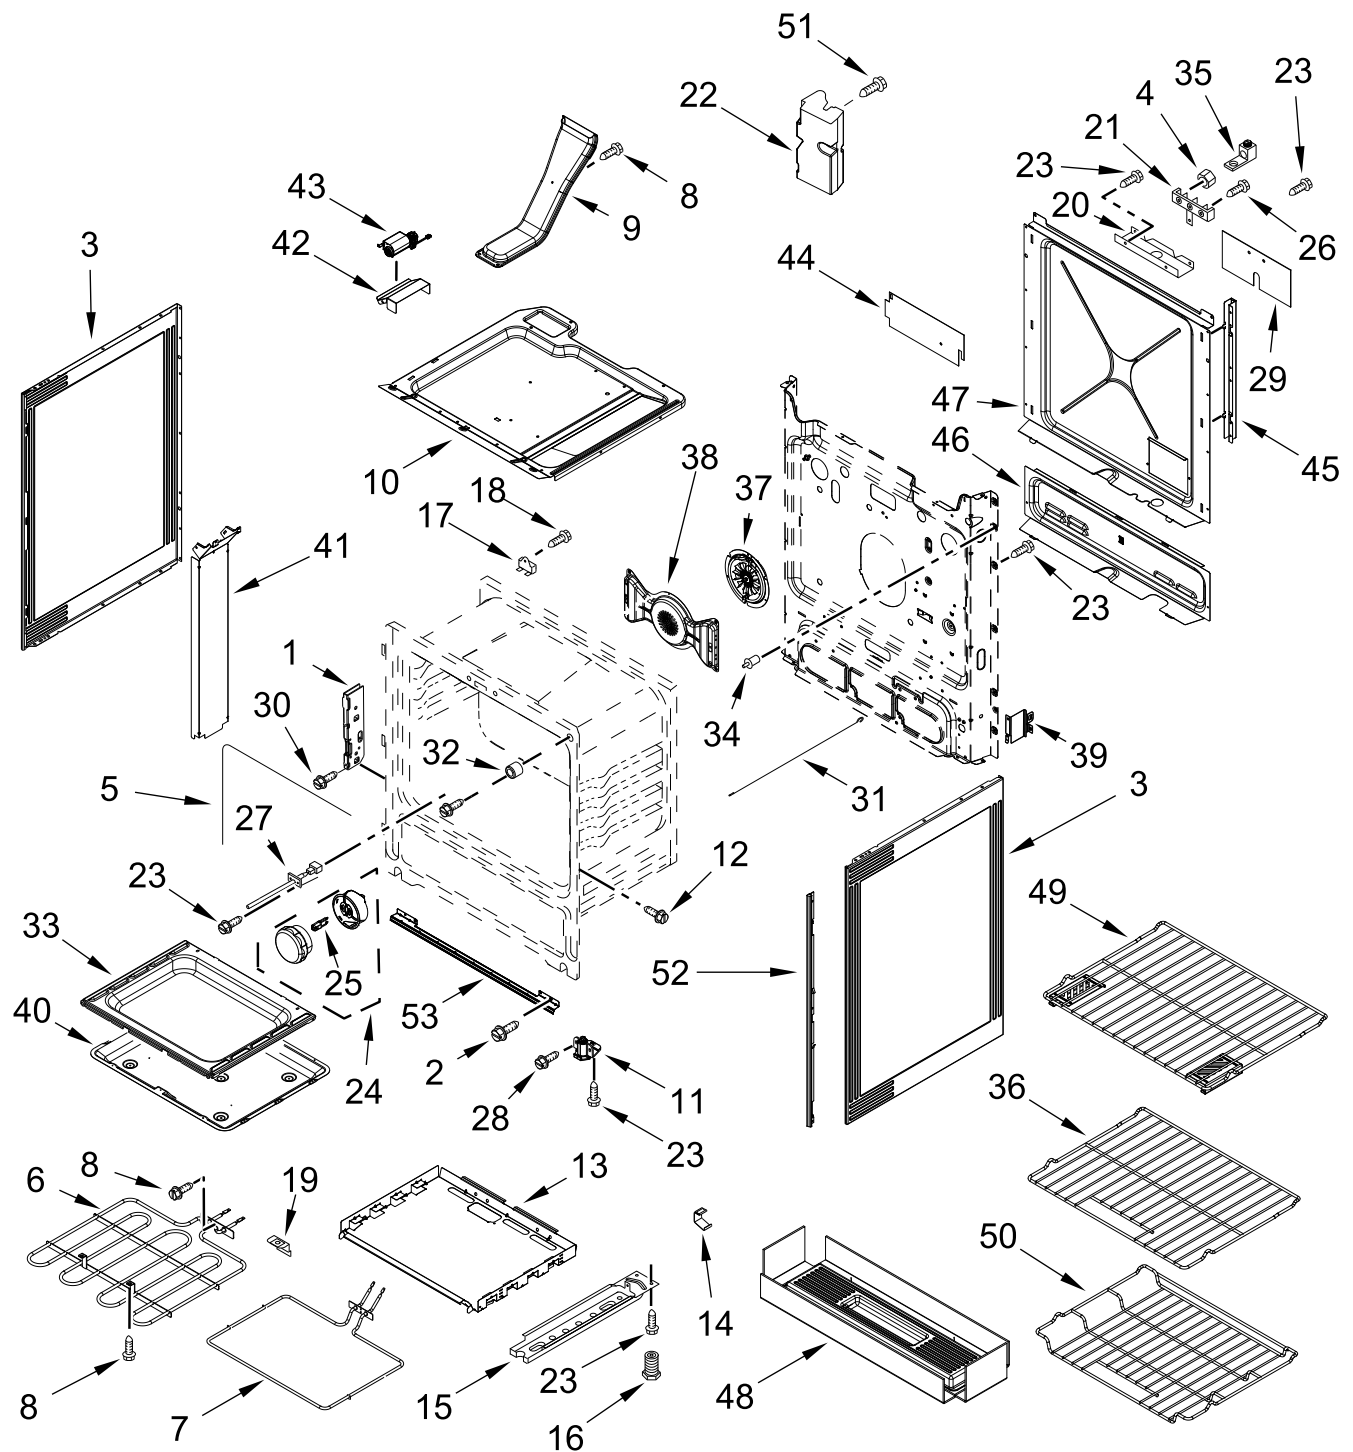

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10289077	Receiver, Hinge	22	W10914589	Counterweight	44	W11117035	Shield, Wire
2	3196560	Screw	23	3196178	Screw	45	W10162241	Channel, Rear
3		Panel, Side	24	W11634772	Light Assembly	46	W10162248	Cover, Wire
	W10162245	Black	25	W10571723	Bulb, Halogen 40 Watts	47	W11379354	Cover, Back
4	3400029	Nut	26	3400016	Screw	48	W10686408	Kit, Reservoir (Steam Rack)
5	W11491752	Gasket, Door	27	W10586204	Sensor	49	W10554007	Rack, Steam
6	W10544952	Element, Broil	28	3196169	Screw	50	W10554006	Rack, Maximum Capacity
7	W10774342	Element, Bake	29	W10655441	Shield, Power Cord	51	W11034869	Screw
8	W10362924	Screw	30	W10031780	Screw	52	W11510561	Barrier Rail, Rubber (Front Left)
9	W11122085	Assembly, Flue	31	W10273192	Rod, Door Switch		W11510562	Barrier Rail, Rubber (Front Right)
10	W10289168	Box, Burner SI	32	9758701	Spacer, Door	53	W11620269	Bracket, Front Frame
11	W10341186	Front Foot Assembly	33	W10774446	Bottom, Oven			FOLLOWING PARTS NOT ILLUSTRATED
12	W10067840	Screw	34	W11511828	Switch, Door		W10289173	Insulation, Wrap
13	W10541959	Shield, Bake	35	W10281322	Kit, Bare Wire Adapter Block		W10575374	Insulation, Bottom
14	W10137382	Clip, Panel	36	W10554005	Rack, Heavy Duty		4820F015-59	Insulation, Strap
15	W10390008	Base Rail Assembly (Left)	37	W11353932	Convection Assembly		W10162240	Insulation, Back
	W10390007	Base Rail Assembly (Right)	38	W10346153	Baffle, Full Convection		7111P017-60	Clamp, Wire
16	W10058460	Foot, Leveling	39	W10273002	Bracket, Oven Support			
17	3196548	Fuse, Thermal	40	W11379357	Bake Pan			
18	3196172	Screw	41	W10162255	Duct, Cover			
19	W10035900	Support, Oven Bottom	42	W10162254	Duct, Cooling			
20	3186034	Bracket, Service	43	W11467246	Cooling Fan			
21	W10245259	Block, Terminal						

DOOR PARTS

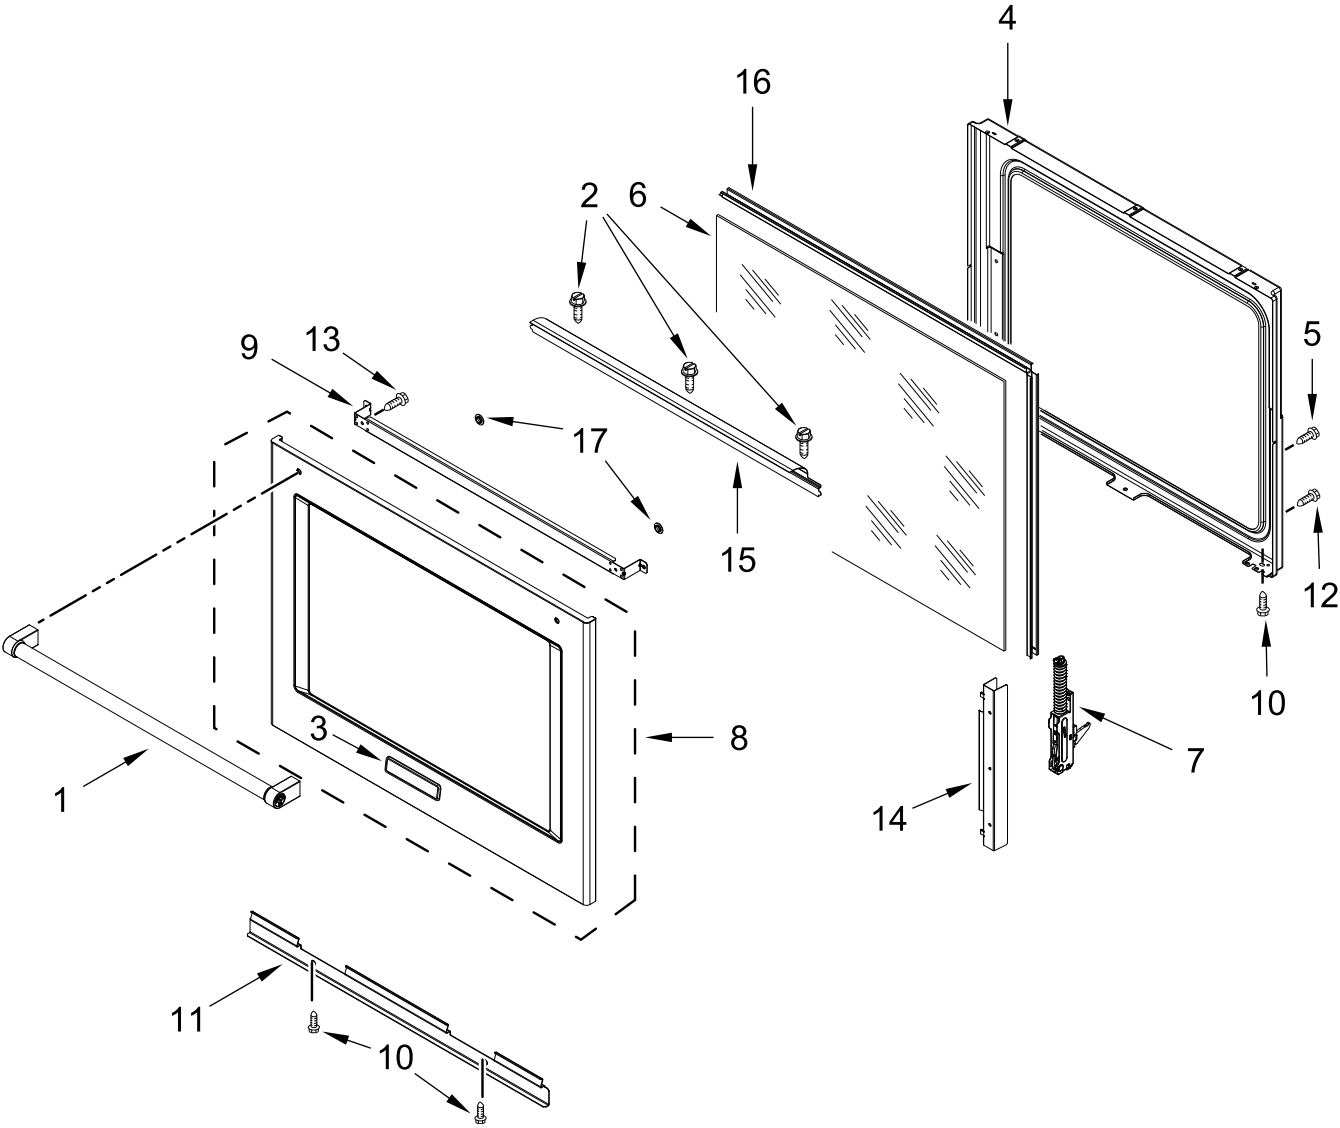


DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Assembly, Door Handle
	W11669501	Stainless
2	9780274	Screw
3	W10518672	Badge
4	W10826568	Liner, Door
5	W10031790	Screw
6	W11223202	Glass, Inner

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
7	W10885519	Hinge, Door (Active)
8		Assembly, Outer Door
	W10634271	Stainless
9	W10541911	Bracket, Glass Upper Handle
10	W10327235	Screw
11	W10813140	Rail, Horizontal Support

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
12	W10031780	Screw
13	8533988	Screw
14	W10813139	Rail, Vertical Support
15		Scoop, Door
	W10613791	Black
16	W11379948	Glass Spacer
17	W10319024	Washer, Door

DRAWER PARTS

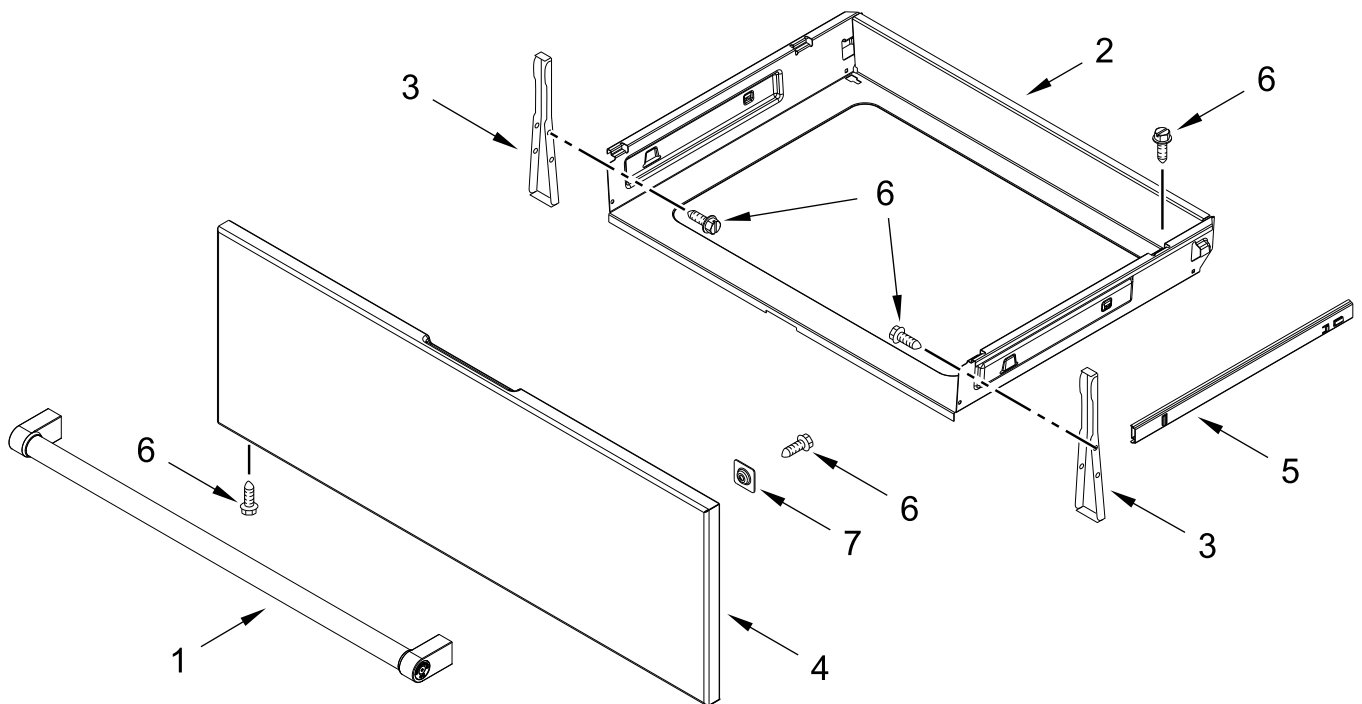

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Handle, Drawer	5	W10441804	Slide, Drawer (Left)	6	3196169	Screw
	W11669501	Stainless		W10441805	Slide, Drawer (Right)	7	3823F017-45	Spacer, Handle
2	W10688022	Drawer, Storage						
3	W10318026	Bracket, Mounting						
4		Panel, Drawer Front						
	W10541954	Stainless						

OPTIONAL PARTS (NOT INCLUDED)

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	72032	Black
	4392899	Biscuit and Bisque
	511873	White Porcelain (2 oz.)

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black
	4392901	Biscuit and Bisque

PAINT, BULK (1 QT.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

REFINISHING MATERIAL

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

INSULATION

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2 x 24 x 120 in)
	240132	Insulation (2-1/2 x 22 x 120 in)

ACCESSORY PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		CLEANERS AND POLISHES
	31605	Kit, Cooktop Care
	W10355051	Cleaner, Cooktop
	W10355016	Cleaner, Stainless Steel
	WA906B	Scraper, Cooktop
	W10432019	Alt Cleaning Kit
	W10391473	Pad, Cooktop Cleaning
		MISCELLANEOUS
	4396923	Broiler Pan and Grid
	W10123240	Rack, Broiler Pan and Roasting
	W10432539	Griddle
	W10432545	Kit, Grill
		TRIM KITS
	W10675026	Black
	W10675027	White
	W10675028	Stainless
		BACKSPLASH ASSEMBLY
	W10655449	Black
	W10655448	White
	W10655450	Stainless