KitchenAid®

GAS RANGE
Includes Griddle

MODELS:

KFGC558JYP05 (Yellow Pepper)

© 2022 KitchenAid
Part No. W11634446 Rev. A

BURNER BOX AND GRIDDLE PARTS

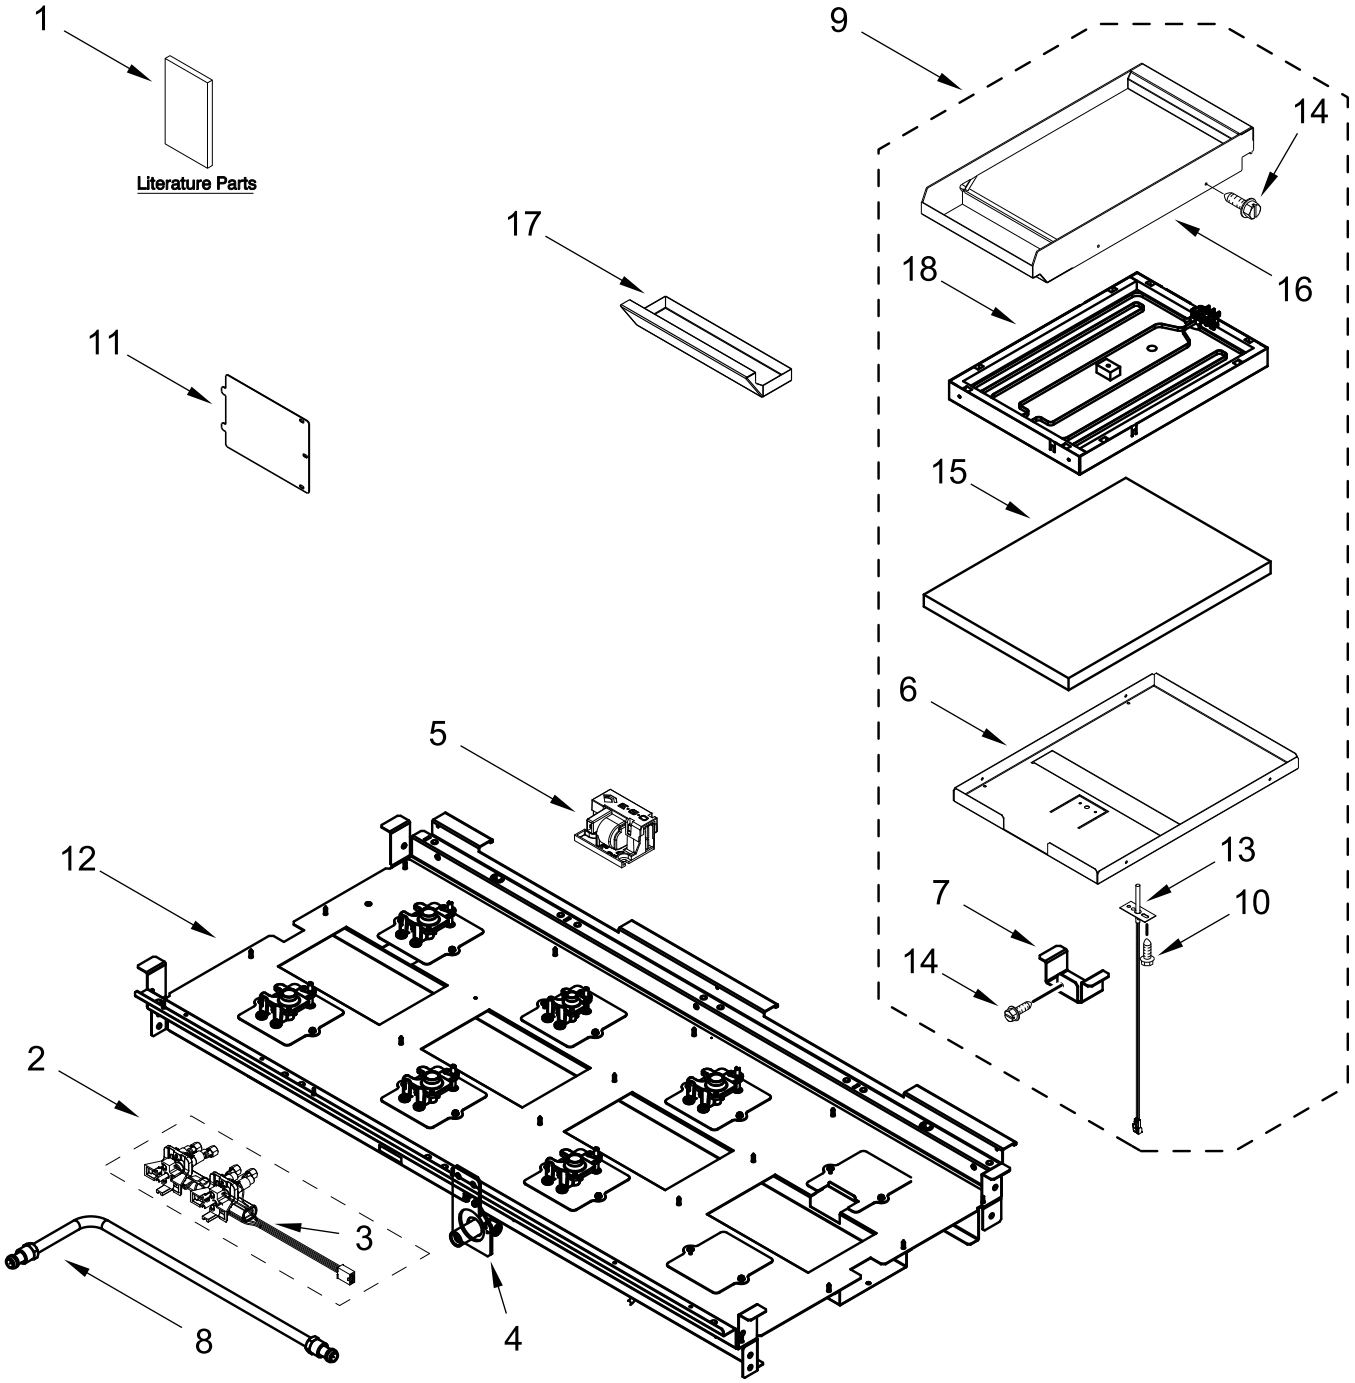

BURNER BOX AND GRIDDLE PARTS

Illus. No.	Part No.	Description
1		Literature Parts
	W11508863	Use and Care Guide
	W11508887	Installation Instructions
	W11184759	Guide, Internet Connectivity
	W11364680	Guide, Quick Start
	W11575704	Wiring Diagram (Cooktop)
	W11565468	Tech Sheet
2	W11183720	Assembly, Valve Manifold
		(Left Front And Left Rear)
	W11036612	Assembly, Valve Manifold
		(Left Center Front And Left Center Rear)
	W10892994	Assembly, Valve Manifold
		(Right Center Front And Right Center Rear)
3	W10903728	Switch, Harness
4	W11121194	Bracket, Manifold
5	W11121317	Module, Spark
6	W11330430	Tray, Griddle Insulation
7	W11121384	Bracket, Griddle-RTD
8	W10892809	Tube, Manifold Supply
		(Left)
	W10892804	Tube, Manifold Supply
		(Left Center)
	W10892805	Tube, Manifold Supply
		(Right Center)
9	W11505236	Griddle Module Assembly
10	3196160	Screw
11	W10115843	Cover, Ignition
12		Box, Burner (Not Serviced)
13	W10891584	Sensor, Griddle
14	W10162096	Screw
15	W11121383	Insulation, Griddle
16	W11360151	Module, Griddle
17	W10276497	Tray, Griddle Drip
18	W10891698	Element, Griddle
		FOLLOWING PARTS NOT ILLUSTRATED
	W11448064	Harness, Main (48 in)
	W10903727	Harness, Griddle
	W11200329	Harness, Cooktop
	W10780278	Harness, Door Lock
	W11200318	Harness, Communication
	W11242785	Harness, WIFI
	313438	Clip, Harness
	W10624584	Cord, Power
	4450800	Screw, Grounding
	W10253333	Bracket, Anti-Tip
	7101P485-60	Screw, Anti-Tip Kit
	W11238042	Kit, LP Conversion
	W11311196	Ignitor Wire, Wire-Electrode Bake
	W11311197	Ignitor Wire, Wire-Electrode Broil

COOKTOP, BURNER AND GRATE PARTS

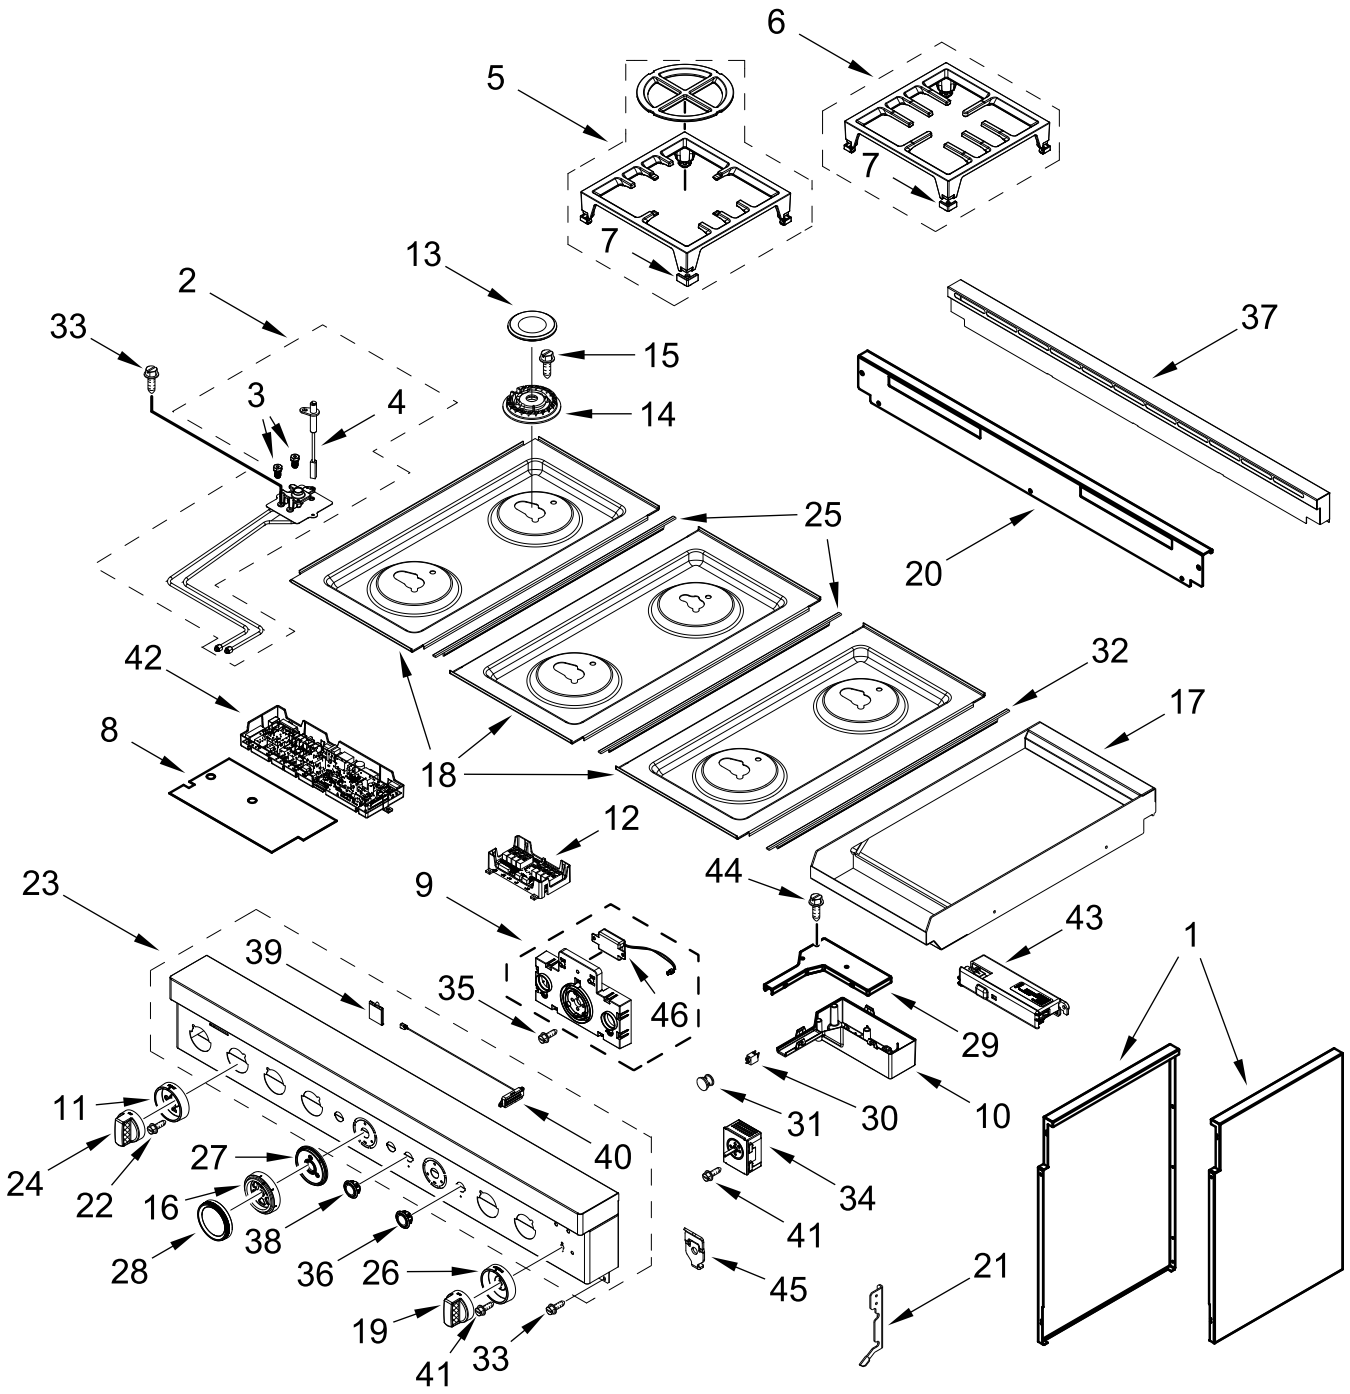

COOKTOP, BURNER AND GRATE PARTS

Illus. No.	Part No.	Description
1	W11111429	Panel, Cabinet Side (Left)
	W11111428	Panel, Cabinet Side (Right)
2	W10892793	Assembly, Orifice Holder (Left Front)
	W10892492	Assembly, Orifice Holder (Left Rear)
	W11159461	Assembly, Orifice Holder (Left Center Front)
	W10892808	Assembly, Orifice Holder (Left Center Rear)
	W10892505	Assembly, Orifice Holder (Right Center Front)
	W10892446	Assembly, Orifice Holder (Right Center Rear)
3	W10892422	Orifice, Main (17.4K) (Left Front, Right Center Front)
	W10892419	Orifice, Main (15K) (Left Rear, Left Center Front, Right Center Rear)
	W10892435	Orifice, Simmer (2.6K) (Left Front, Right Center Front)
	W10892438	Orifice, Simmer (5K) (Left Center Rear)
4	W11238757	Igniter (Left Front, Right Center Front)
	W11114379	Igniter (Left Rear)
	W10892340	Igniter (Left Center Front, Left Center Rear, Right Center Rear)
5	W11291183	Burner, Grate (With Wok Ring)
6	W11291179	Burner, Grate
7	W11042504	Bumper, Grate
8	W11281269	Barrier, Appliance Manager
9	W11436336	User Interface
10	W11205795	Cover, WIFI Outer
11	W10881642	Bezel (Front Burners)
	W10883433	Bezel (Rear Burners)
12	W10871065	Manager, Appliance (Expansion)
13		Cap, Burner
	W11121390	Black (Includes 6)
14	W10891746	Spreader, Flame (High) (Left Front, Right Center Front)
	W10891974	Spreader, Flame (Low) (Left Rear, Left Center Front, Right Center Rear)
	W10891978	Spreader, Flame (AUX) (Left Center Rear)
15	W11323261	Screw (8-18 X 1 in)
	W11323309	Screw (8-18 X 1/2 in)
16		Knob, Oven Mode
	W11500864	Stainless (For 18 in Oven)
	W11500865	Stainless (For 30 in Oven)
17		Assembly, Griddle Module (Part Number Shown On Burner Box and Griddle Parts Page)
18		Panel, Cooktop
	W11038235	Black (Left)
	W11038257	Black (Left Center)
	W11038243	Black (Right Center)
19		Knob, Griddle
	W10912167	Stainless
20	W10323252	Trim, Island Insert
21	W10130760	Bracket, Moving Console (Left)
	W10130759	Bracket, Moving Console (Right)
22	W11328357	Screw
23	W10877951	Panel, Control
24		Knob, Burner
	W10912166	Stainless (Left Rear, Left Center Front, Right Center Rear)
	W10883172	Stainless (Left Front, Left Center Rear, Right Center Front)
25		Trim, T-Strip
	W10271524	Black
26	W10886700	Bezel, Griddle
27		Bezel, Oven
	W11500871	Stainless
28		Knob, Oven Temperature
	W11500869	Stainless (For 18 in Oven)
	W11500868	Stainless (For 30 in Oven)
29	W11205794	Cover, WIFI Inner
30	W10116114	Light, Indicator Housing
31	W10294500	Lens, Indicator Light
32	W10291193	Trim, L-Strip
33	7101P426-60	Screw
34	W11033497	Control, Griddle
35	3400814	Screw
36	W11241510	Button Assembly, Oven Start
37	W11476244	Island Trim
38	W11241511	Button Assembly, Oven Light
39	W10896366	Assembly, Light Pipe
40	W11130078	Antenna, WIFI
41	7101P309-60	Screw
42	W11543346	Manager, Powermax Appliance
43	W11110768	Assembly, WIFI Module
44	7101P624-60	Screw
45	W11036559	Spring Clip, Range
46	W10568405	Assembly, Speaker

CHASSIS PARTS

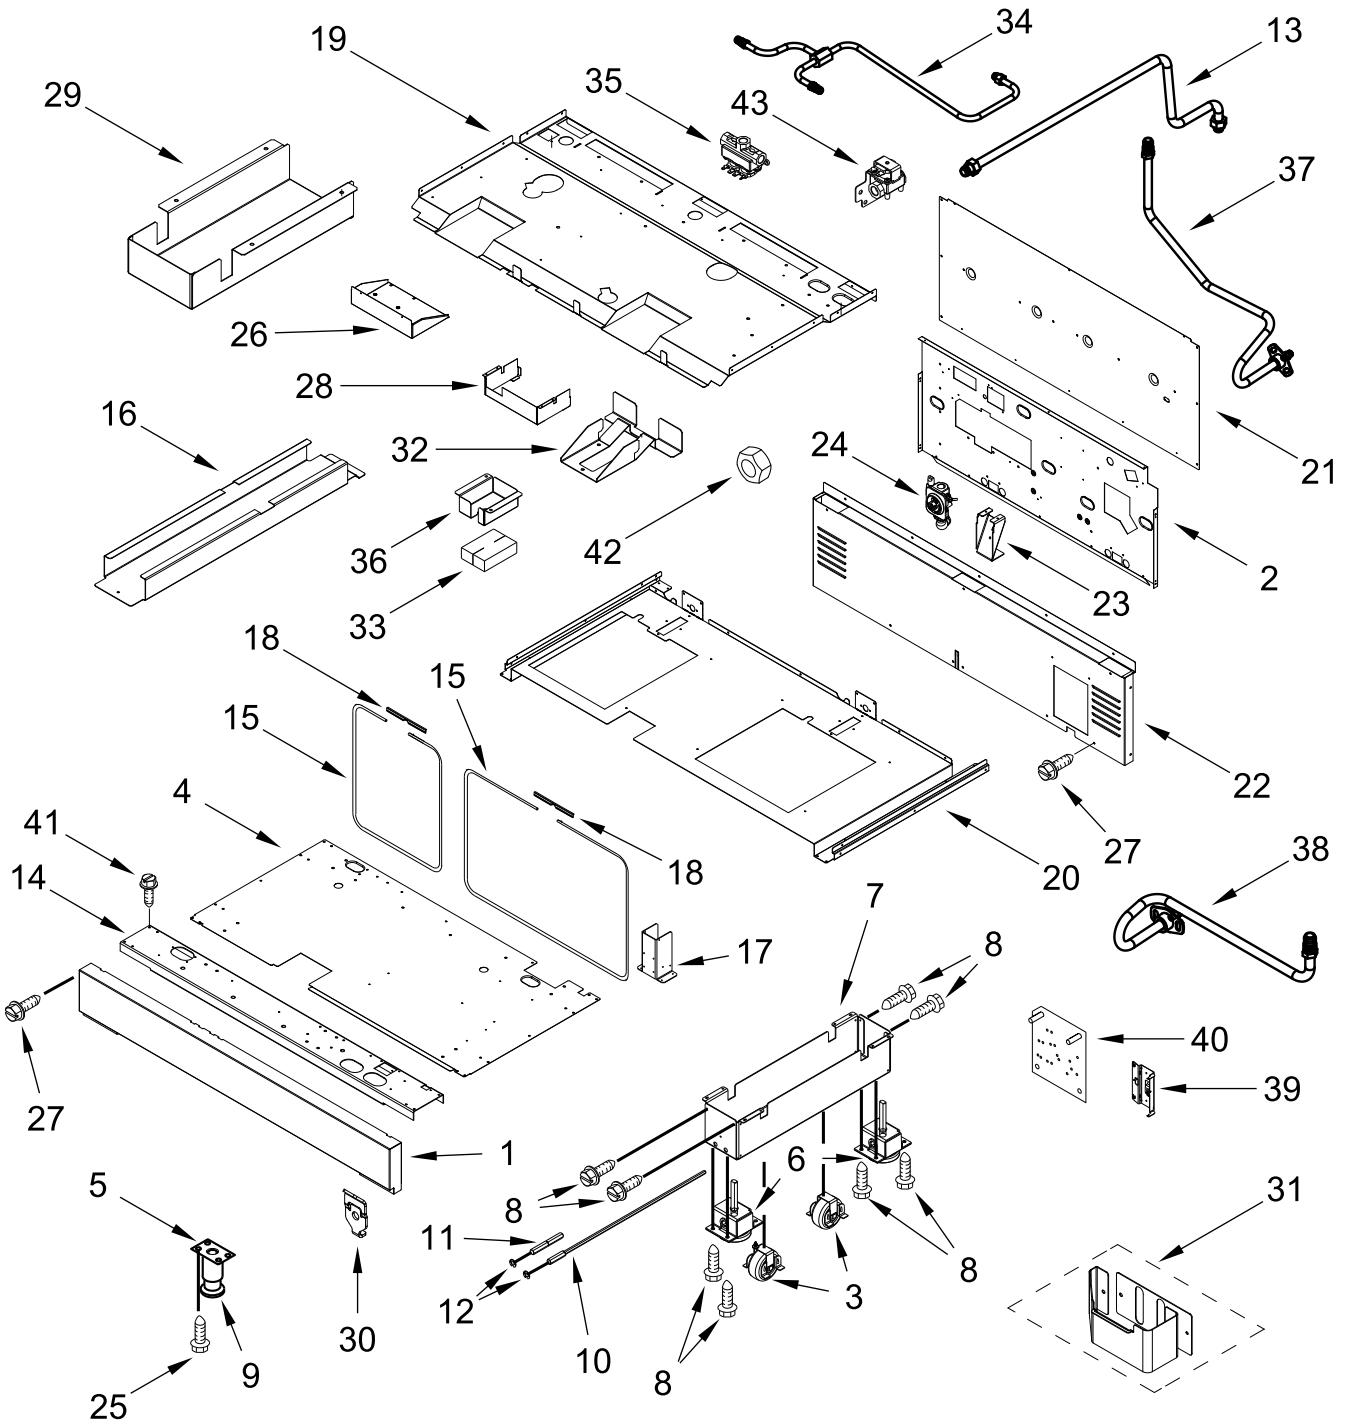

CHASSIS PARTS

Illus. No.	Part No.	Description
1	W11394819	Kickplate
2	W11324987	Back, Chassis
3	W10138054	Assembly, Roller
4	W11110260	Duct, Bottom (48 in)
5	9759118	Plate, Mounting
6	9760860	Leveler
7	W10908710	Base, Leveling Leg
8	4449743	Screw
9	9759117	Foot, Dual Fuel
10	W10115869	Shaft, Long
11	W10115793	Shaft, Short
12	489504	E-Ring
13	W11181648	Tube, Pressure Regulator
14	W11369238	Support, Channel
15	W11115328	Gasket, Oven (30 in)
	W11115326	Gasket, Oven (18 in)
16	W11050145	Duct-Chassis, Rear
17	W10115819	Column, Central
18	W11362015	Retainer, Gasket (9 in Long)
19	W11324984	Top, Chassis
20	W11040800	Chassis, Bottom
21	W11103335	Panel, Back Top
22	W11034123	Panel, Back Bottom
23	W11096823	Bracket, Pressure Regulator
24	W10896959	Regulator, Pressure
25	3400518	Screw
26	W11106341	Drawer, Appliance Manager
27	7101P426-60	Screw
28	W11369237	Cabinet, Appliance Manager
29	W11368831	Channel, Wire
30	W11036559	Spring Clip, Range
31	W11199181	Cover, Foot (Left)
	W11199178	Cover, Foot (Right)
32	W11190223	Bracket, Bake Alignment
33	W10311009	Insulation, Broil Cover
34	W11112366	Tube, Valve (Double)
35	W10145680	Valve, Dual
36	W10310985	Cover, Broil
37	W11109238	Tube, Broil
38	W11106980	Tube, Bake
39	W10145362	Bracket-Board, DSI
40	W10511278	Module, Spark DSI
41	3196560	Screw
42	112432	Nut, Hex
43	W10311268	Valve, Single

30-IN OVEN PARTS

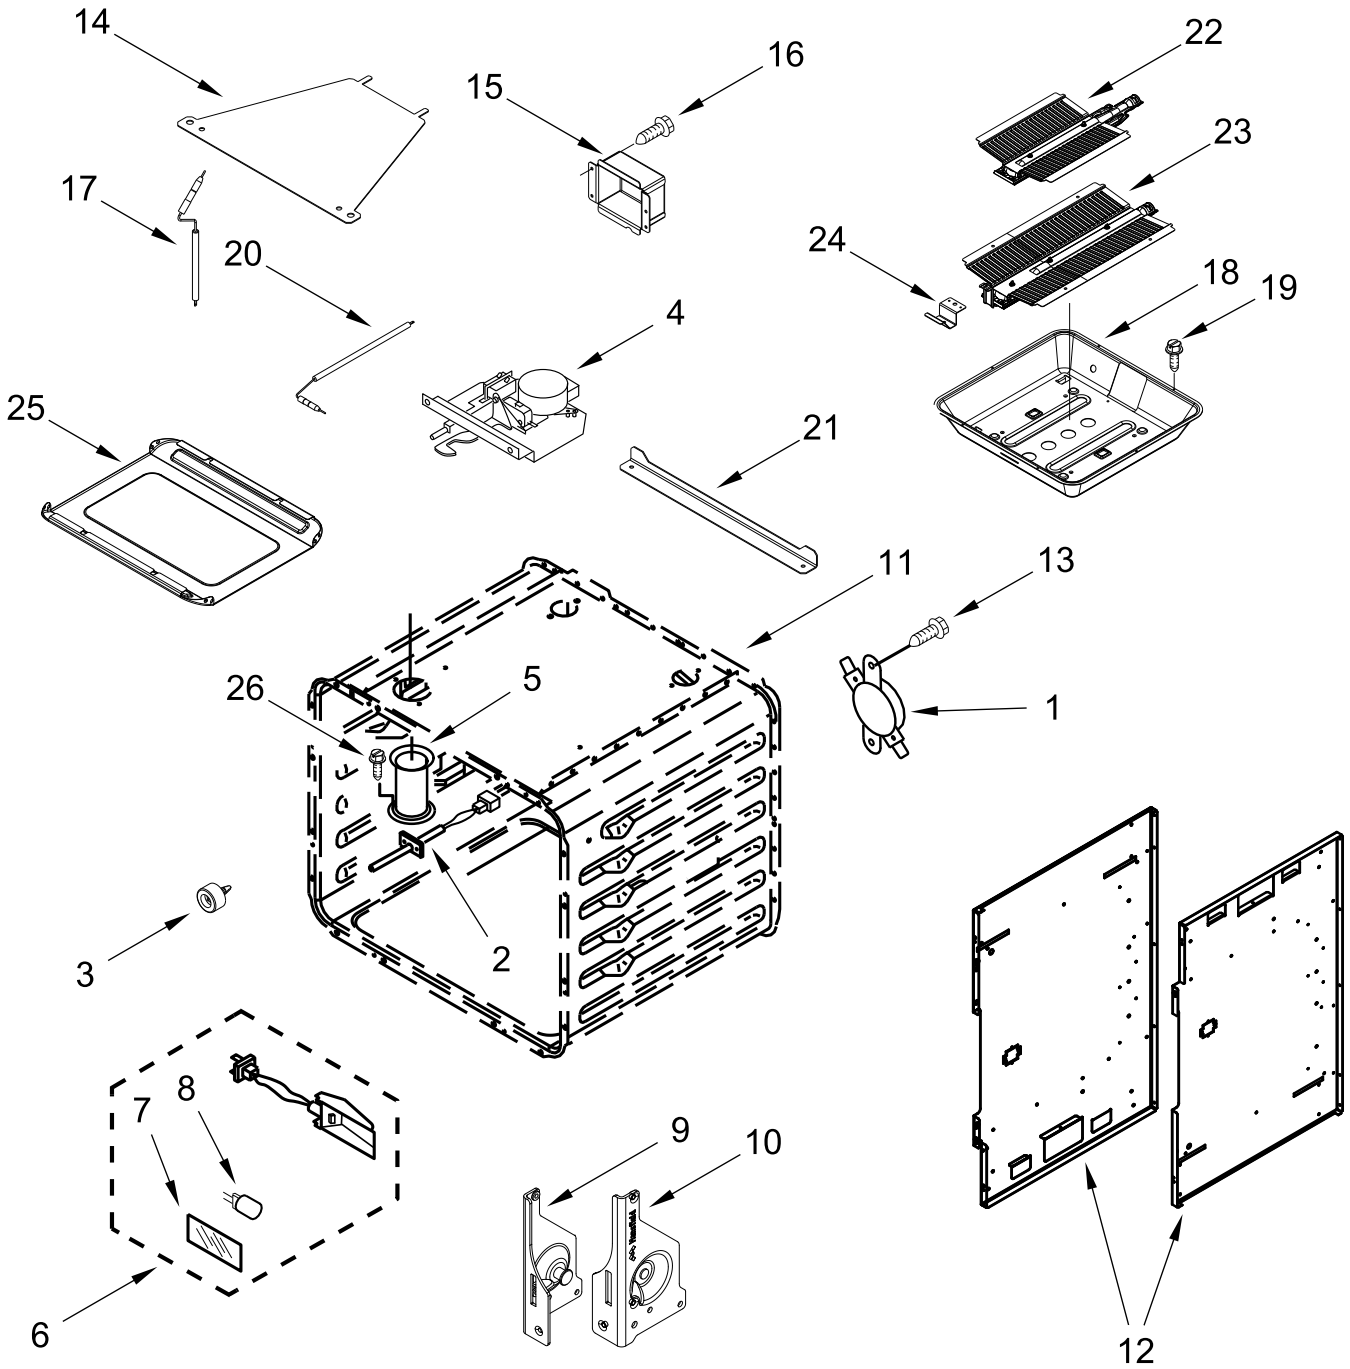

30-IN OVEN PARTS

Illus. No.	Part No.	Description
1	4450249	Thermostat (TOD)
2	W10622170	Probe, Sensor
3	W10351278	Bumper and Screw
4	W10830016	Latch, Motorized
5	W10145743	Tube, Vent
6	W11223932	Assembly, Oven Light
7	W10169756	Lens, Light
8	W10169757	Bulb, Light
9	W11096294	Receiver, Hinge (Left)
10	W11096293	Receiver, Hinge (Right)
11		Liner, Oven (Not Serviced)
12	W11102297	Chassis, Side (Left)
	W11102296	Chassis, Side (Right)
13	7101P426-60	Screw
14	W10160858	Cover, Latch
15	W10308051	Box, Broil
16	7101P434-60	Screw
17	W11182863	Electrode, Broil
18	W10145744	Support, Bake Pan
19	12992902	Screw
20	W11205400	Electrode, Bake
21	W10317437	Bracket, Broil Standoff
22	W10878504	Burner, Bake
23	W10311335	Burner, Broil
24	W10308040	Bracket, Bake Burner
25	W10496809	Pan, Oven Bottom
26	3196176	Screw
		FOLLOWING PARTS NOT ILLUSTRATED
	W10282810	Insulation, Wrap (30 in)
	W11109145	Insulation, Back (30 in)
	W10299354	Insulation, Bottom
	3400968	Nut

18-IN OVEN PARTS

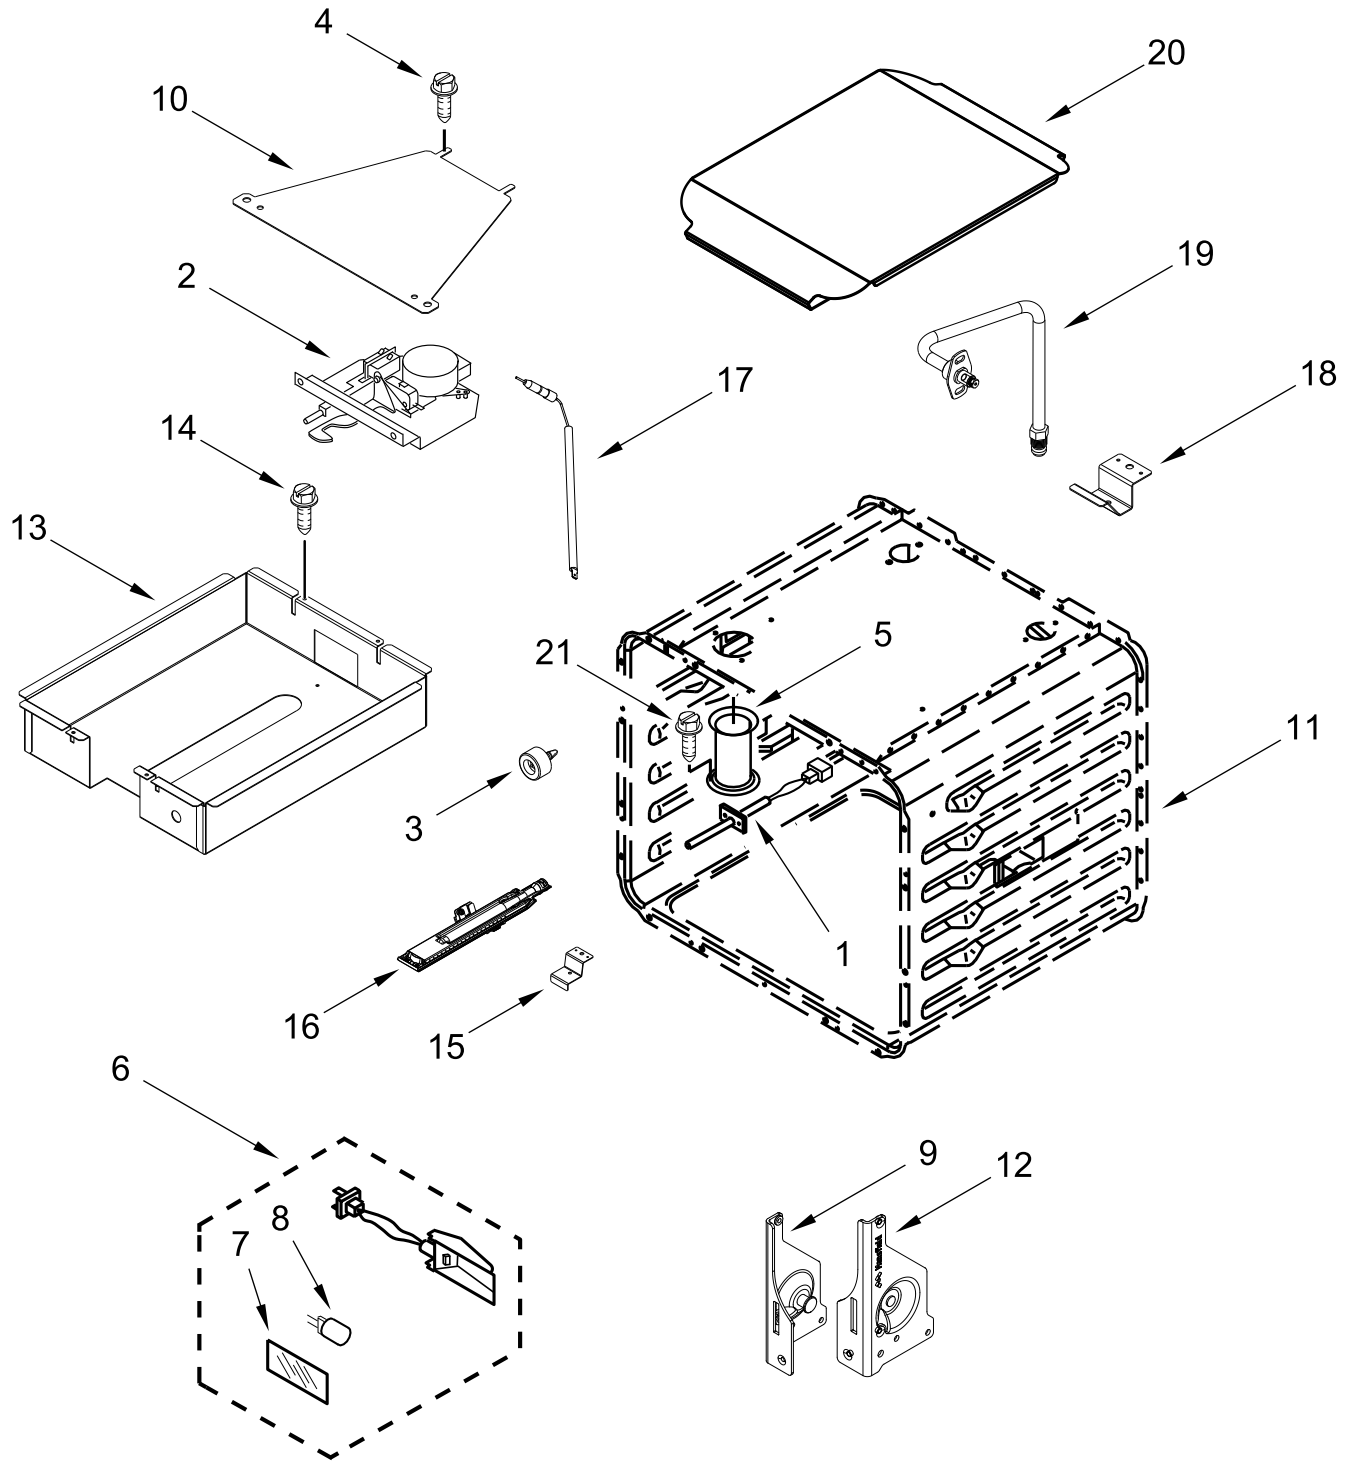

18-IN OVEN PARTS

Illus. No.	Part No.	Description
1	W10622170	Probe, Sensor
2	W10830016	Latch, Motorized
3	W10351278	Bumper and Screw
4	7101P426-60	Screw
5	W10145743	Tube, Vent
6	W11223932	Assembly, Oven Light
7	W10169756	Lens, Light
8	W10169757	Bulb, Light
9	W11096294	Receiver, Hinge (Left)
10	W10160858	Cover, Latch
11		Liner, Oven (Not Serviced)
12	W11096293	Receiver, Hinge (Right)
13	W10145651	Support, Bake Pan
14	12992902	Screw
15	W10308041	Bracket, Bake Burner (18 in Cavity)
16	W10878505	Burner, Bake W/O Spreader
17	W11205400	Electrode, Bake
18	W10308040	Bracket, Bake Burner
19	W10145706	Tube, Bake
20	W11211936	Cover, Bake
21	3196176	Screw
		FOLLOWING PARTS NOT ILLUSTRATED
	W10282820	Insulation, Wrap, 18 in
	W10299353	Insulation, Back, 18 in
	W10299355	Insulation, Bottom
	3400968	Nut

VENTING PARTS

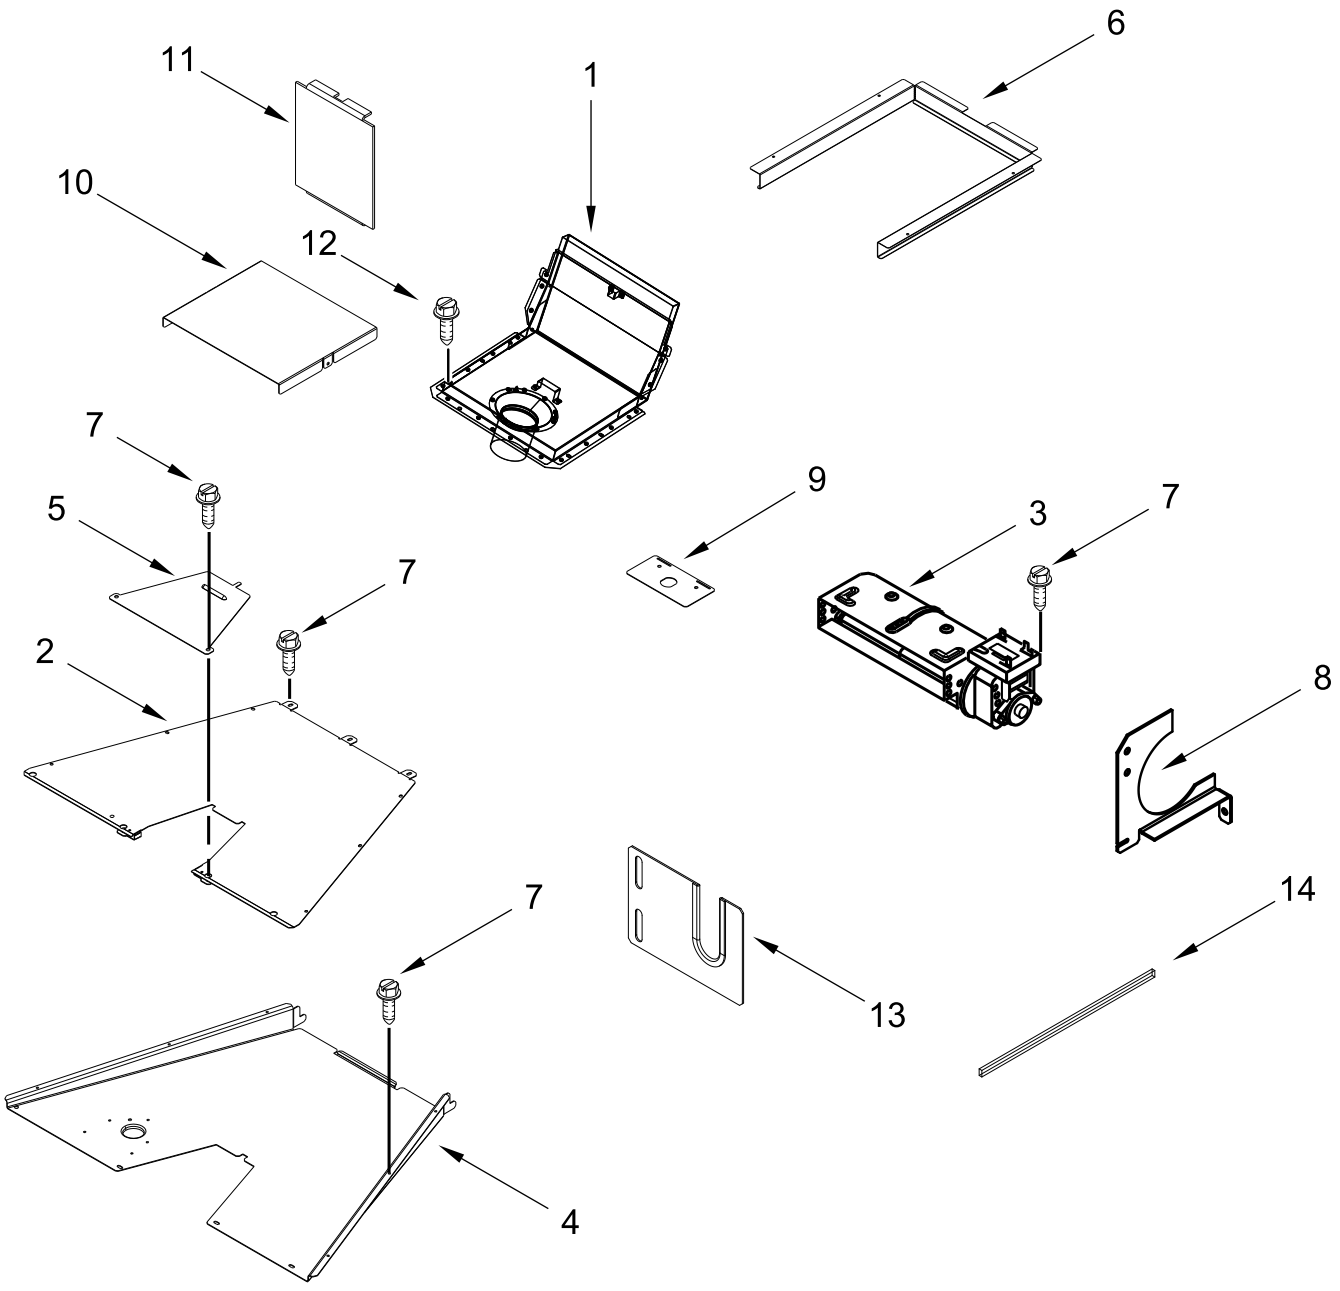

VENTING PARTS

Illus. No.	Part No.	Description
1	W10340579	Vent, Chimney Box (30 in / 36 in)
	W11476247	Vent, Chimney Box (18 in)
2	W11105221	Vent, Cooling Top (30 in)
	W11113379	Vent, Cooling Top (18 in)
3	W11200129	Blower
4	W11091676	Vent, Cooling Bottom (30 in)
	W11113377	Vent, Cooling Bottom (18 in)
5	W11109518	Plate, Cooling Latch
6	W10145363	Duct, Primary Air (30 in)
	W10145364	Duct, Primary Air (18 in)
7	7101P426-60	Screw
8	W11047754	Bracket, Blower Mount
9	W10115855	Holder, Strain Relief
10	W10246086	Retainer, Insulation
11	W10246087	Insulation, Chimney
12	3400805	Screw (Zinc)
13	W11106956	Cover, Channel
14	W10919715	Gasket

30-IN OVEN DOOR PARTS

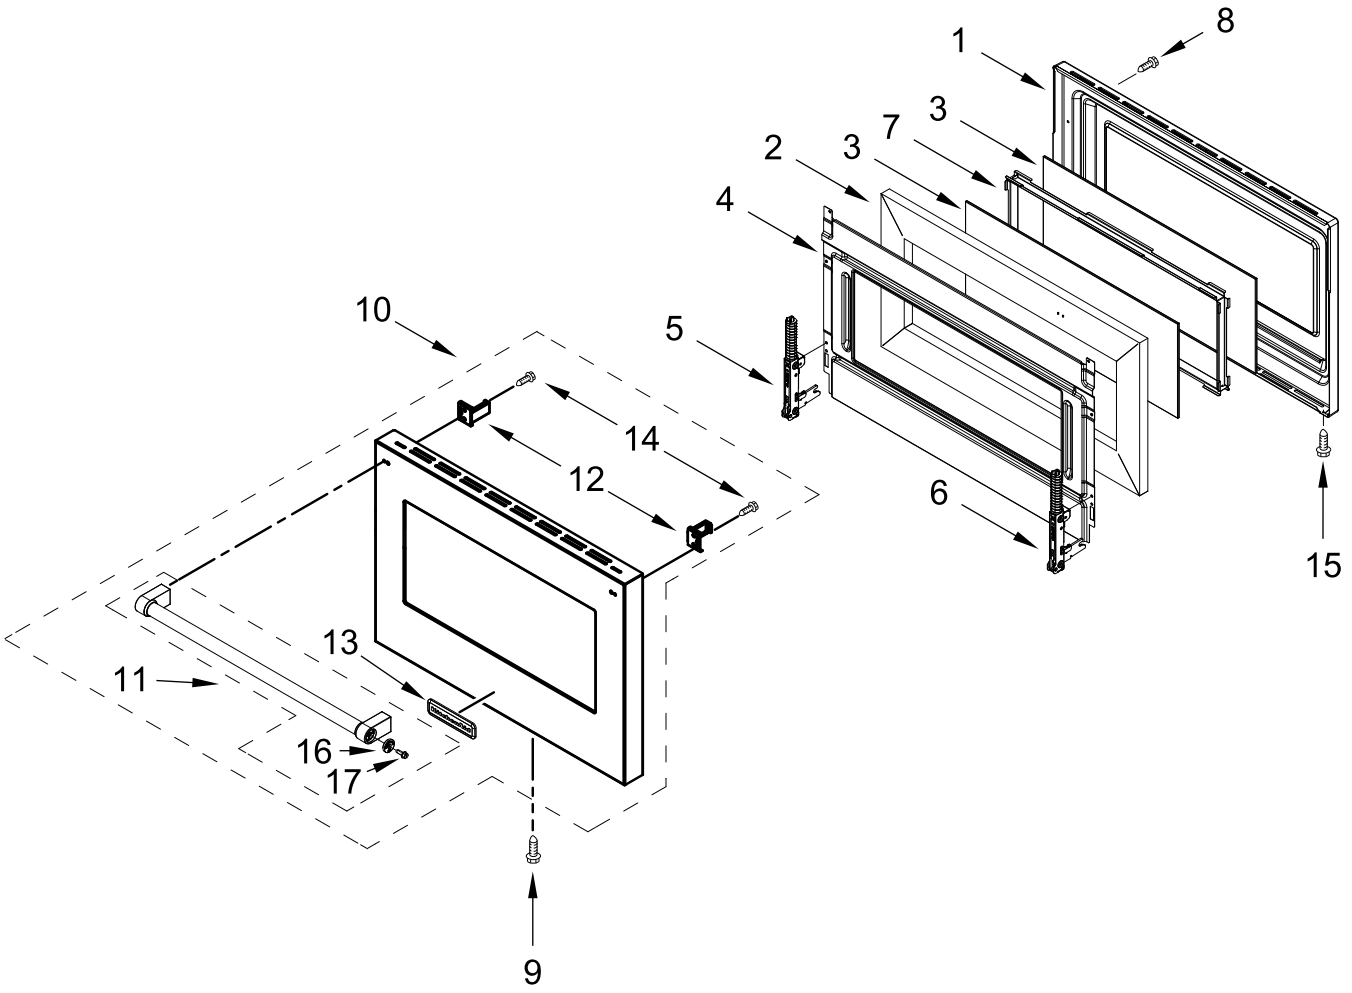

30-IN OVEN DOOR PARTS

Illus. No.	Part No.	Description
1	W11036771	Liner, Door
2	W11413190	Insulation, Door (30 in)
3	W11184409	Glass, Inner
4	W11194821	Retainer, Glass
5	W11390105	Hinge, Door (Left)
6	W11390124	Hinge, Dual (Right)
7	W10272594	Frame, Glass
8	W10898280	Screw
9	W10162096	Screw
10	W11389302	Assembly, Outer Door (Includes Handle)
11	W11362706	Handle Assembly
12	W11197830	Bracket, Handle
13	W10518672	Badge
14	W10276043	Screw
15	W10607120	Screw
16	W11361074	Medallion, Handle
17	W10656499	Screw

18-IN OVEN DOOR PARTS

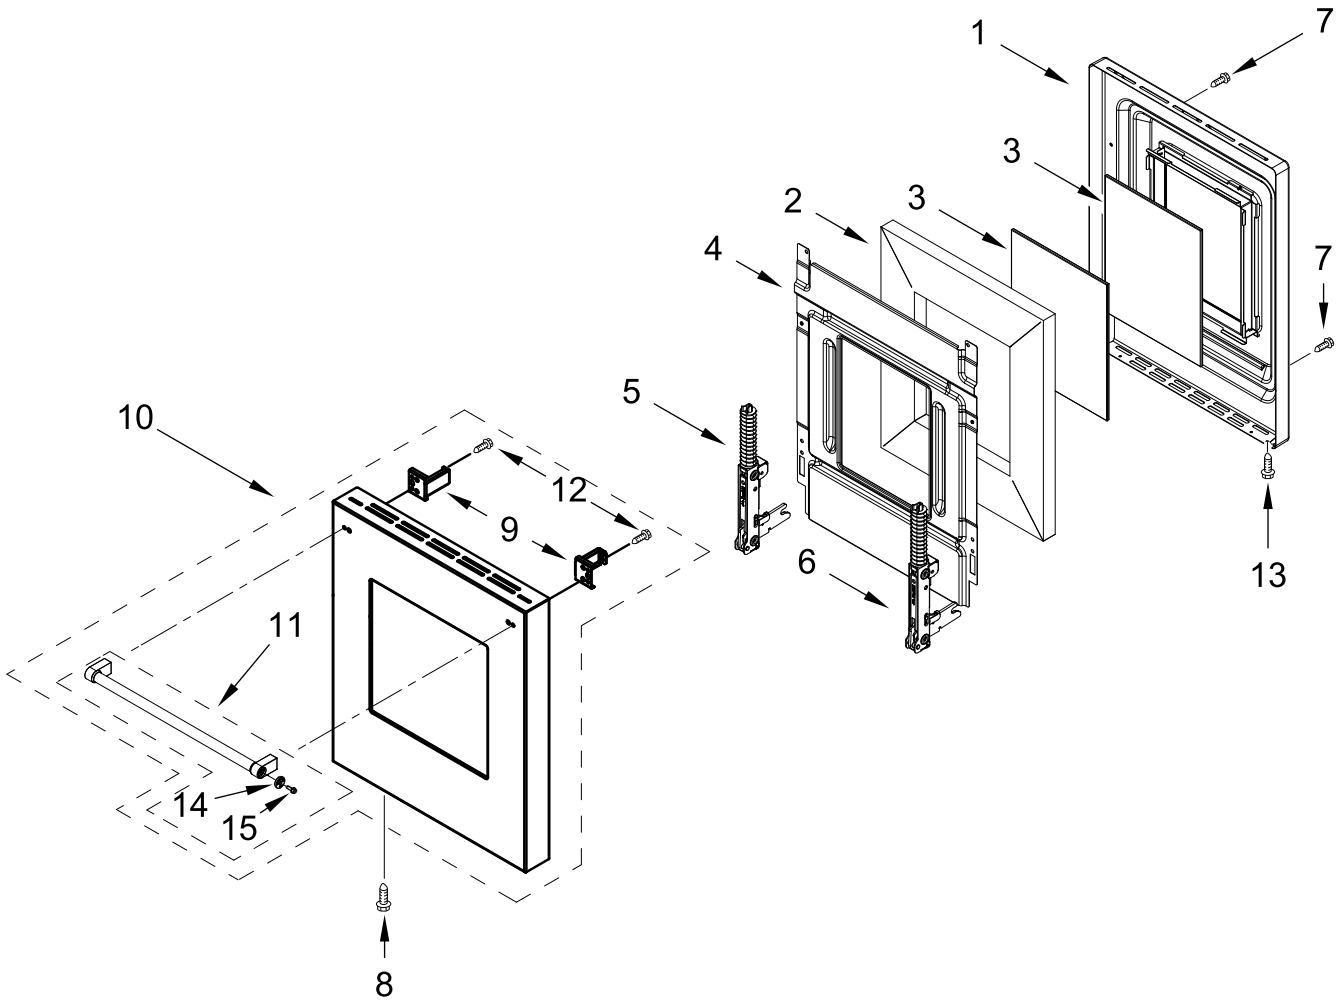

18-IN OVEN DOOR PARTS

Illus. No.	Part No.	Description
1	W11036770	Liner, Door
2	W10884821	Insulation, Door
3	W11036789	Glass, Inner
4	W11194818	Retainer, Glass
5	W11390106	Hinge, Door (Left)
6	W11390125	Hinge, Door (Right)
7	W10898280	Screw
8	W10162096	Screw
9	W11197830	Bracket, Handle
10	W11389277	Assembly, Outer Door (Includes Handle)
11	W11362703	Handle Assembly
12	W10276043	Screw
13	W10607120	Screw
14	W11361074	Medallion, Handle
15	W10656499	Screw

30-IN INTERNAL OVEN PARTS

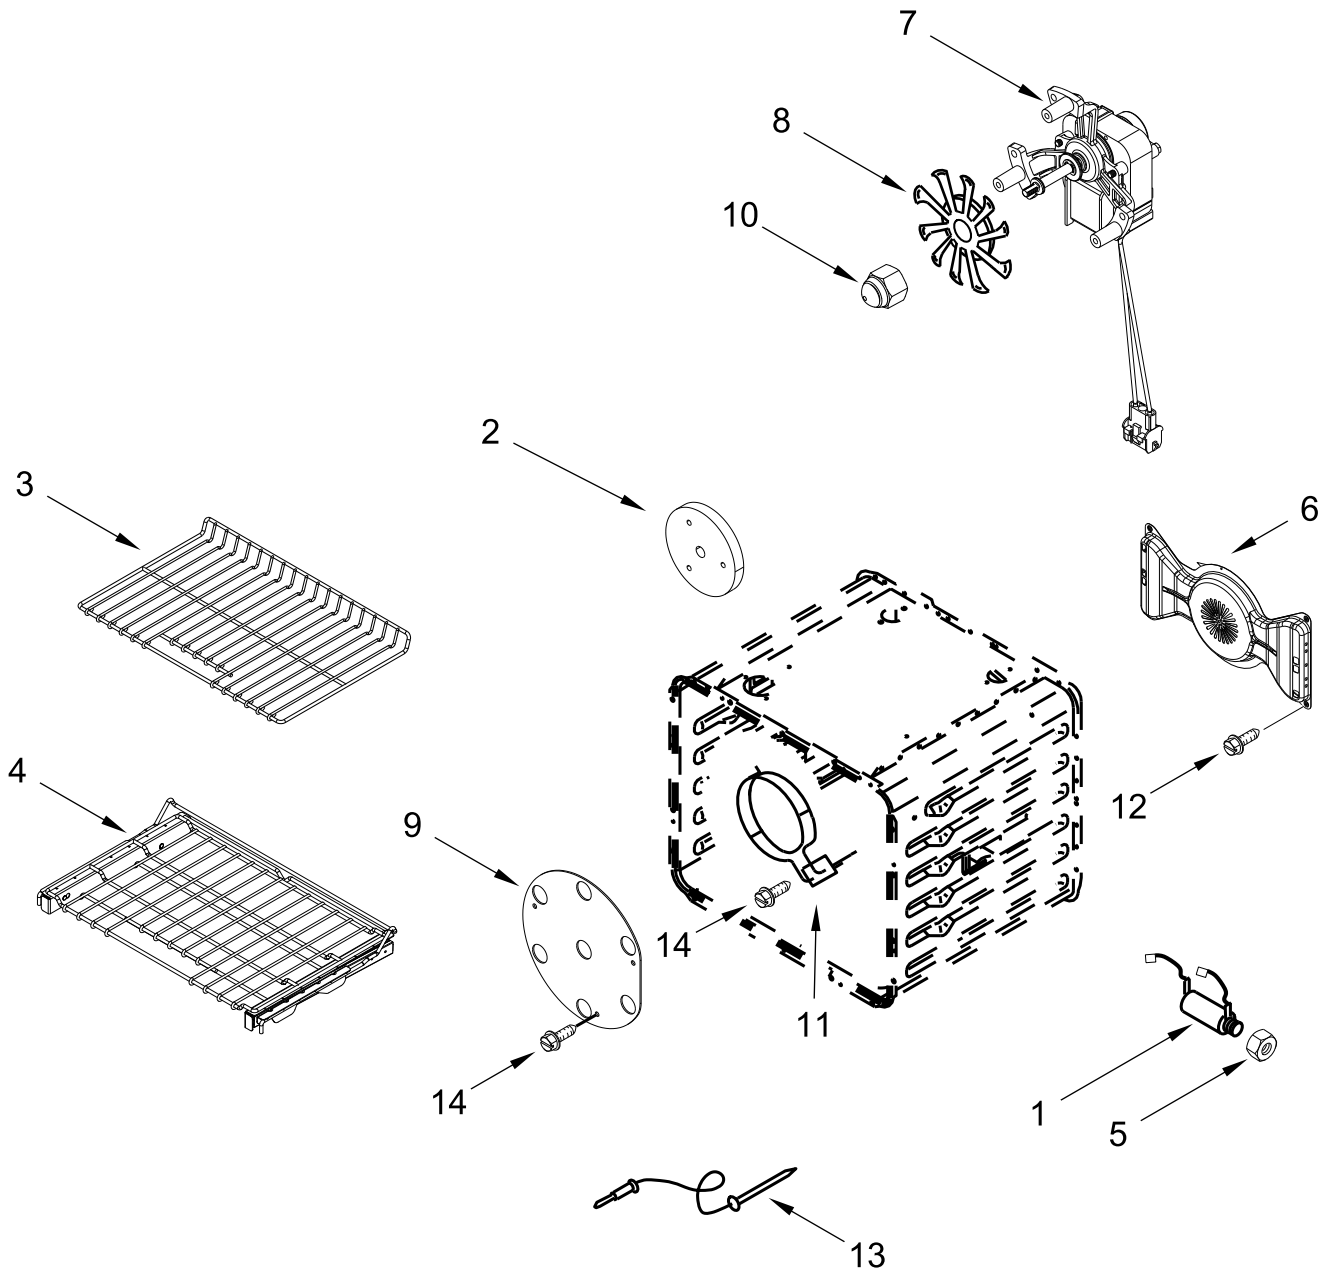

30-IN INTERNAL OVEN PARTS

Illus. No.	Part No.	Description
1	9755543	Jack, Meat Probe
2	W10282821	Insulation, Convection Cover
3	W10570887	Rack, Oven
4	W11496977	Rack, Sliding Oven
5	W11033111	Nut, Locking
6	W11212180	Baffle, Convection
7	W10631506	Motor, Convection
8	W10631503	Blade, Fan
9	W10261523	Plate, Fan
10	W10631504	Nut, Acorn (LH)
11	W11098505	Element, Convection Heat
12	W10739592	Screw
13	9755542	Probe, Temperature
14	4449154	Screw

18-IN INTERNAL OVEN PARTS

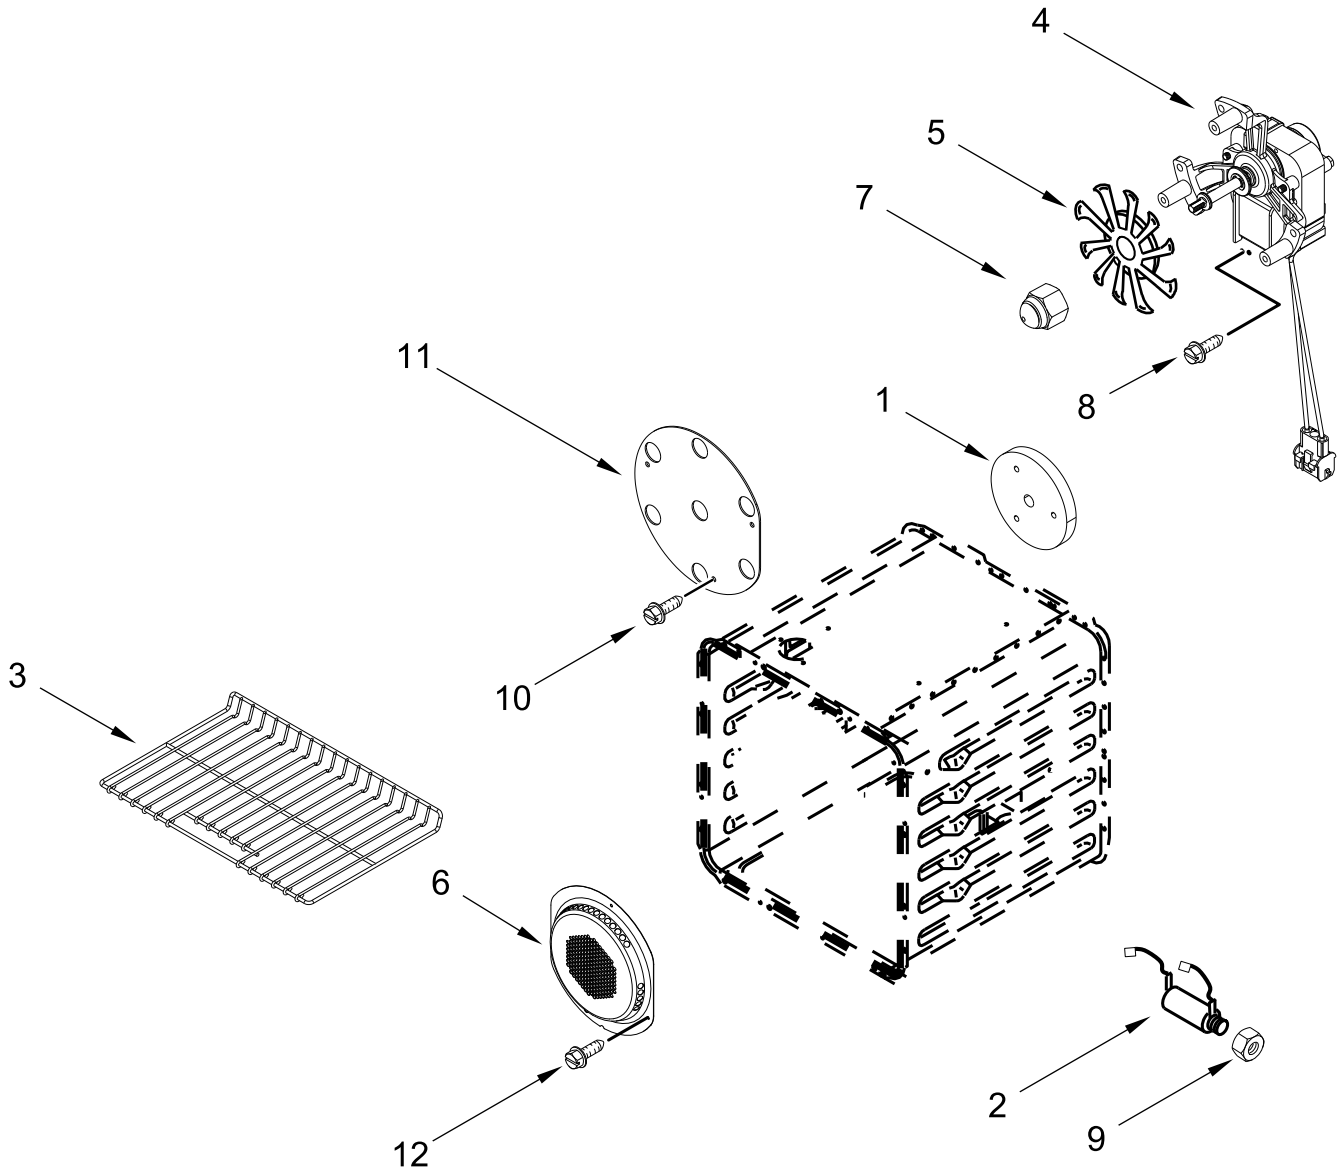

18-IN INTERNAL OVEN PARTS

Illus. No.	Part No.	Description
1	W10282821	Insulation, Convection Cover
2	9755543	Jack, Meat Probe
3	W10570879	Rack, Oven (18 in)
4	W10631506	Motor, Convection
5	W10631503	Blade, Fan
6	W11211948	Cover, Fan
7	W10631504	Nut, Acorn (LH)
8	4449154	Screw
9	W11033111	Nut, Locking
10	W10720084	Screw
11	W10261523	Plate, Fan
12	W10739592	Screw

OPTIONAL PARTS (NOT INCLUDED)

Illus. No.	Part No.	Description
		ACCESSORIES
	W11042467	Spray, Stainless Steel Cleaning
	W10355051	Cleaner, Cooktop
	30-48KITRC	Gas Range Connector Kit
	W10123240	Rack, Broiler Pan and Roasting
	4396096RB	Griddle
		Backsplash
	W10285449	48-in With Shelf