

QUICK START GUIDE

“IMPORTANT” — READ THE USE AND CARE GUIDE BEFORE USING THIS APPLIANCE




⚠ WARNING

Fire Hazard

Never place items in the washer that are dampened with petrol or other flammable fluids.
No washer can completely remove oil.
Do not dry anything that has ever had any type of oil on it (including cooking oils).
Doing so can result in death, explosion, or fire.


1 Add detergent.

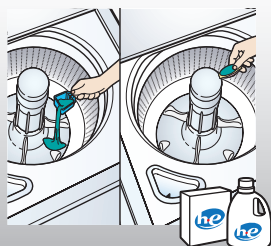

2 Load washer.




3 Add chlorine bleach (if desired).

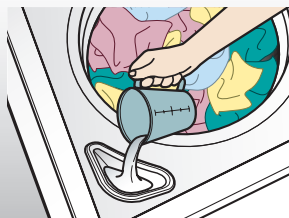

4 Add fabric softener (if desired).



5 Press START/STOP (pause/unlock lid).

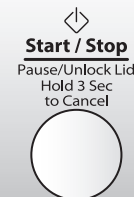

CYCLE FEATURES

Cycle Selector	Casual; Colors; Cold Wash	Jeans; Deep Clean; Whites	Bulky Items; Deep Water Wash	Delicate	Quick Wash
Load Size					
Washer Levels (automatic)					
Load Description	Cottons and Linen	Mixed Loads	Large/Bulky Items	Mixed Loads	Mixed Loads
Water Temps	* Except Cold Wash Water Temp.				
Soil Level Selector	Medium Soils	Loose Soils; Heavy Soils; Stains	Medium Soils	Light Soils	Light Soils
	Decrease or increase the agitation time for any cycle.				
Water Temp	Decrease or increase the maximum target water temperature for any cycle.				

HELPFUL HINTS:

- To Add a Garment: Press START/STOP if the lid is locked to pause and unlock the lid. Open the lid, add garment, close the lid, and press START/STOP to resume operation.
- Lid must remain closed during fill—if opened, the water will stop flowing and will only resume when the lid is closed.
- **NOTE:** Washer will not operate if the lid is open.
- To stop the cycle for manual soak, select PAUSE and leave the lid closed.
- **IMPORTANT:** If the lid is left open for more than 10 minutes, the wash cycle will cancel and the water will pump out. If you need more than 10 minutes to add a garment, close and reopen the lid before this time.

NOTE: Not all options are available on all models. See Use and Care Guide for more information.


تحذير

خطر الحريق

لا تقم أبداً بوضع أشياء في الغسالة قد تكون مبللة بالبترول أو السوائل الأخرى القابلة للاشتعال.
لا تستطيع أي غسالة إزالة الزيت تماماً.
لا تجفف أي شيء لامس في أي وقت مضى أي نوع من الزيوت (بما في ذلك زيوت الطهي).
إن القيام بذلك يؤدي إلى الوفاة أو انفجار أو حريق.




1 أضف المنظف.

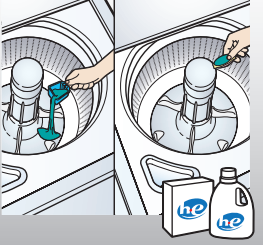


2 حمل الغسالة.



3 أضف مبيض الكلور (إذا رغبت في ذلك).

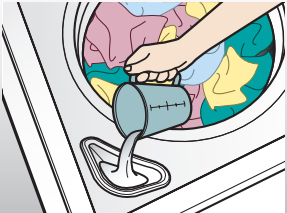

4 أضف منعم الألياف (إذا رغبت في ذلك).

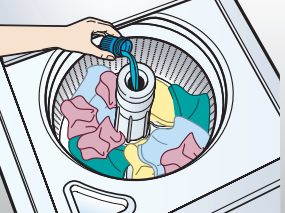

5 اضغط على زر START/STOP (البداية/الإيقاف) (أو وقف/افتح الغطاء).









Start / Stop
Pause/Unlock Lid
Hold 3 Sec
to Cancel

تلميحات مفيدة:

- لإضافة اللباس: اضغط START/STOP. إذا كان الغطاء مقفلاً لإيقاف الغطاء وفتح قفله. افتح الغطاء، ضع اللباس، ثم أغلق الغطاء، وبعد ذلك اضغط على START/STOP لمواصلة التشغيل.
- يجب أن يبقى الغطاء مغلقاً أثناء التعبئة - في حال فتحه، سوف يتوقف الماء عن التدفق، وسوف يستأنف فقط بعد غلق الغطاء.
- **ملاحظة:** لن تعمل الغسالة إذا كان الغطاء مفتوحاً.
- لإيقاف الدورة للنقع اليدوي، حدد "PAUSE" (توقف مؤقت) ثم اترك الغطاء مغلقاً.
- **هام:** إذا ترك الغطاء مفتوحاً لمدة تزيد عن 10 دقائق، سوف تلغى دورة الغسيل، وسوف يتم تصريف الماء. إذا احتجت إلى أكثر من 10 دقائق لإضافة الملابس، أغلق الغطاء ثم أعد فتحه قبل هذا الوقت.

خصائص الدورة

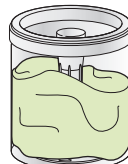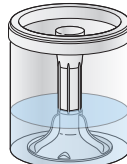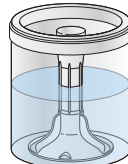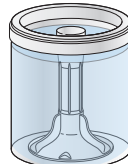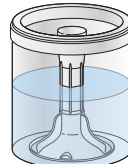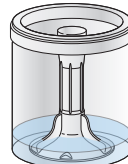منتقي الدورة	غير رسمي، ألوان، غسيل بارد	جبنز، تنظيف عميق، ملابس بيضاء	أشياء كبيرة الحجم، غسيل عميق بالماء	حساسة	دورة غسيل سريعة
حجم الحمولة					
مستويات الغسالة (الأوتوماتيكية)					
وصف الحمولة	القطن والكتان	حمولات مختلطة	أشياء كبيرة/ضخمة	حمولات مختلطة	حمولات مختلطة
حرارة الماء	 * باستثناء حرارة ماء الغسيل البارد.				
منتقي مستوى الاتساخ	اتساخ متوسط	اتساخ طفيف؛ اتساخ شديد؛ بقع	اتساخ متوسط	الأوساخ الخفيفة	الأوساخ الخفيفة
حرارة الماء	خفض أو زد حرارة الماء المستهدفة لأي دورة.				

ملاحظة: لا تتوفر جميع الخيارات في جميع الموديلات. انظر "دليل الاستخدام والعناية" لمزيد من المعلومات.