




FRENCH DOOR BOTTOM MOUNT REFRIGERATOR

MODELS:

WRF535SMHW05 (White)

WRF535SMHB05 (Black)


CABINET PARTS

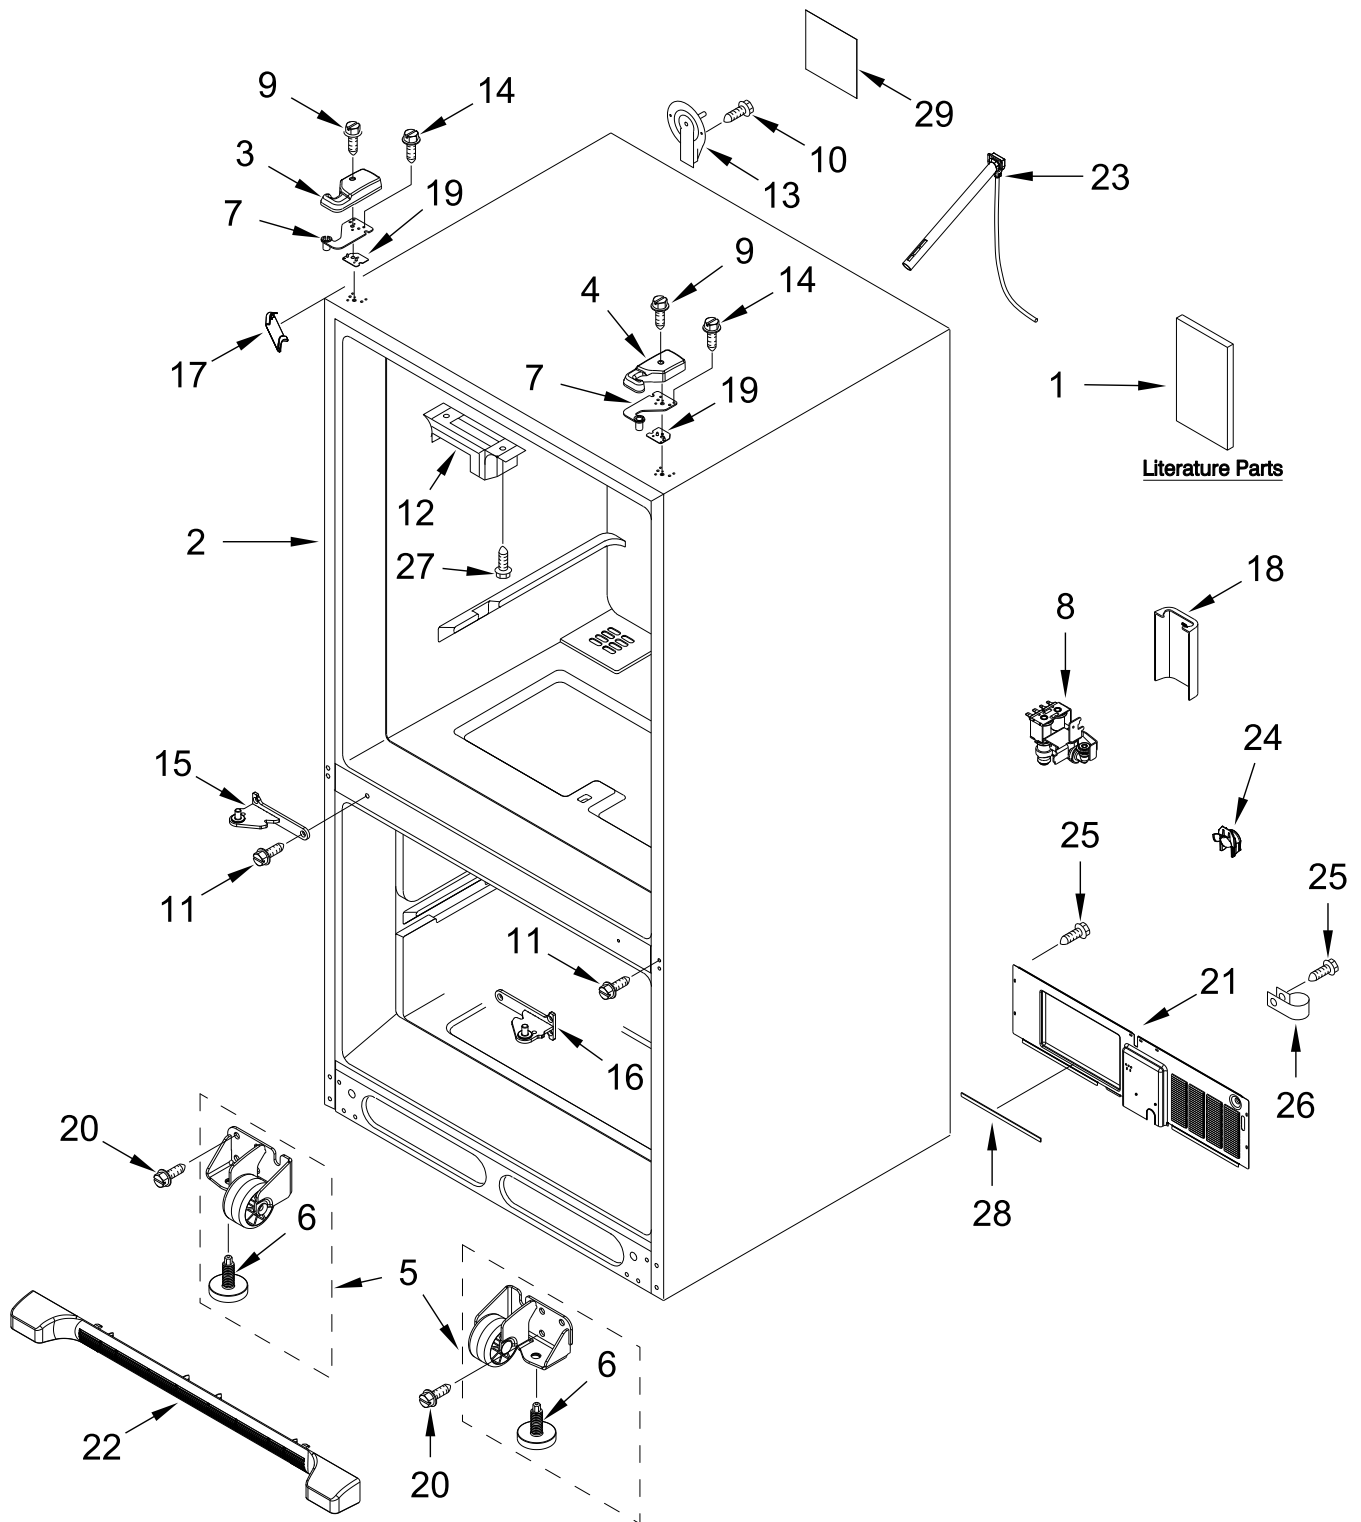

CABINET PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	8	W11446817	Valve, Inlet	20	W10709365	Screw
	W11468670	Use and Care Guide	9	12992602	Screw	21	W10211854	Cover, Unit
	W11308945	Energy Guide	10	12990504	Screw	22		Grille, Toe
	W11312474	Tech Sheet	11	W10673840	Screw (Stainless)		W10534154	White
2		Cabinet (Not a Servicable Part)	12	12698403	Plate, Pivot		W10534153	Black
3		Cover, Top Hinge (Includes Foil)	13	12726003	Cover, Water Line	23	W11046934	Assembly, Fill Tube (Includes Tubing, Fill Tube Elbow, Tube Insert and Clamp)
		Left Hand	14	12992403	Screw			
	W10337634	White	15		Hinge, Center Left Hand	24	W10485986	Guide, Waterline
	W10337647	Black		W10740148	White	25	W10141645	Screw
4		Cover, Top Hinge Right Hand		W10740149	Black	26	M0108107	Clamp, Tube
	12962302W	White	16		Hinge, Center Right Hand	27	688983	Screw
	12962302B	Black		W10740144	White	28	W11534848	Gasket
5		Assembly, Roller		W10740145	Black	29	W11042480	Cover, Fill Tube
	W10515763	Left Hand	17		Cover, Corner			
	W10515762	Right Hand		12587703W	White			
6	W10141622	Brake, Roller		12587703B	Black			
7		Hinge, Top	18	W10208592	Cover, Valve			
	12963204ED	Left Hand	19		Shim, Top Hinge			
	12963205ED	Right Hand		12999501	Left Hand			
				12999502	Right Hand			


REFRIGERATOR LINER PARTS

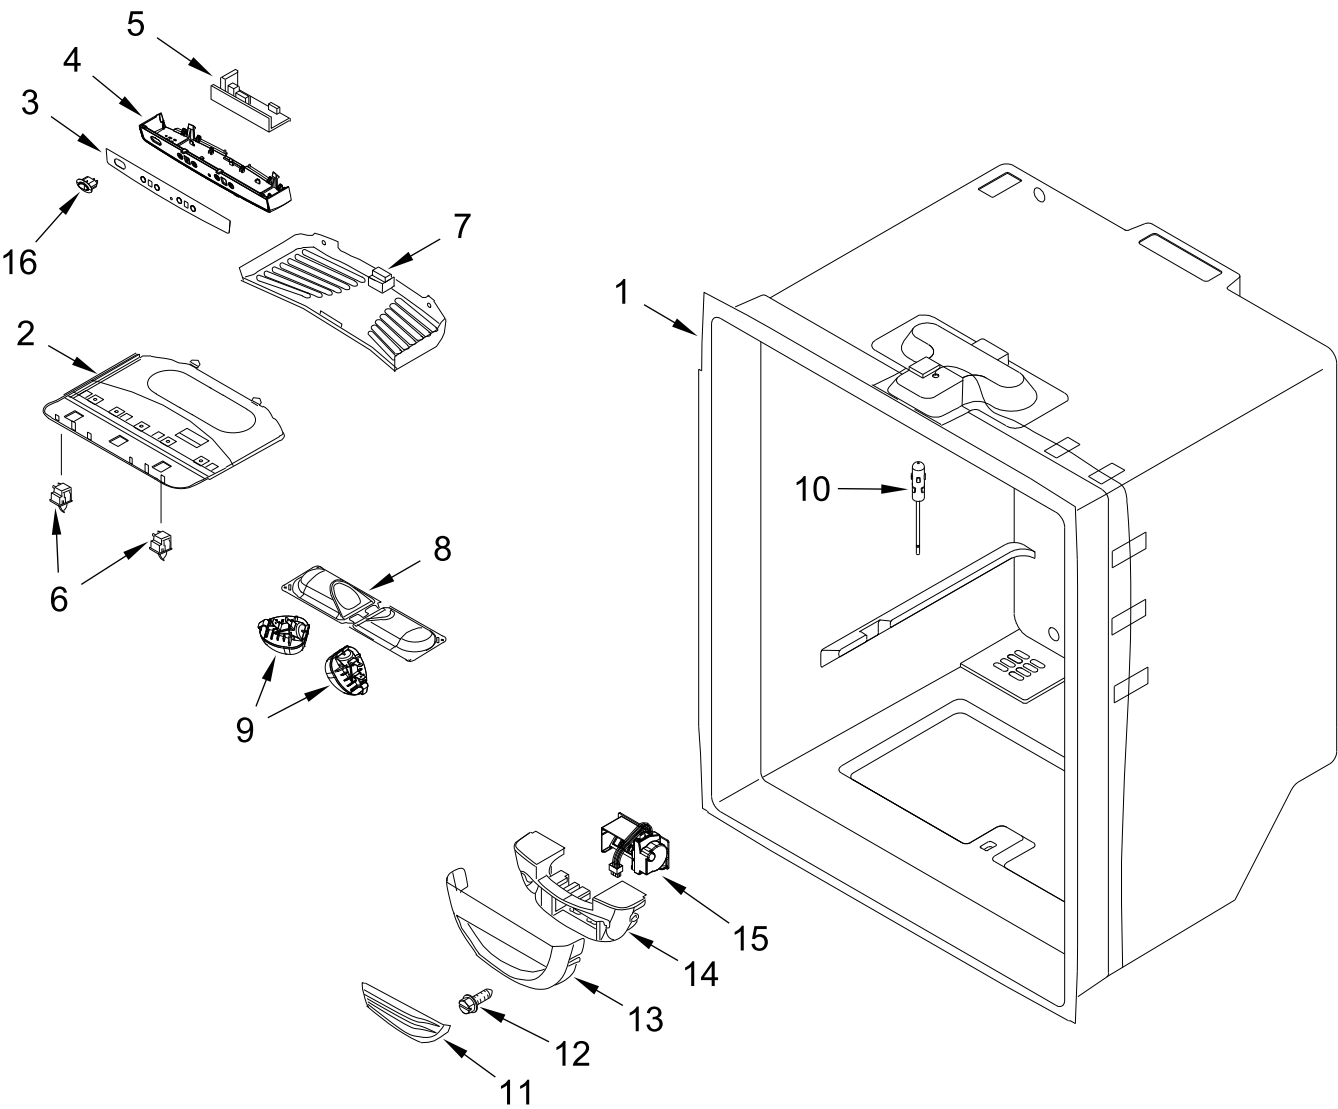

REFRIGERATOR LINER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Liner (Not A Serviceable Part)	7	W11132917	Cover, Light	14	13012402	Insulation, Damper
2	W10464764	Module, Light	8	W10443023	Housing, Light	15	W10594330	Damper, Control
3	W11357424	Overlay, Control	9	W11468934	Light Module, LED	16	W11311953	Switch, Energy Saver
4	W11319776	Module, Control	10	12791403	Thermistor			FOLLOWING PARTS NOT ILLUSTRATED
5	W11321360	Control, Electronic	11	12806801	Insert, Damper Cover			
6	W10847853	Switch, Light	12	12990604	Screw	W11455468		Harness, Refrigerator Control (Includes Thermistor)
			13	12806701	Cover, Damper			


FREEZER LINER AND ICEMAKER PARTS

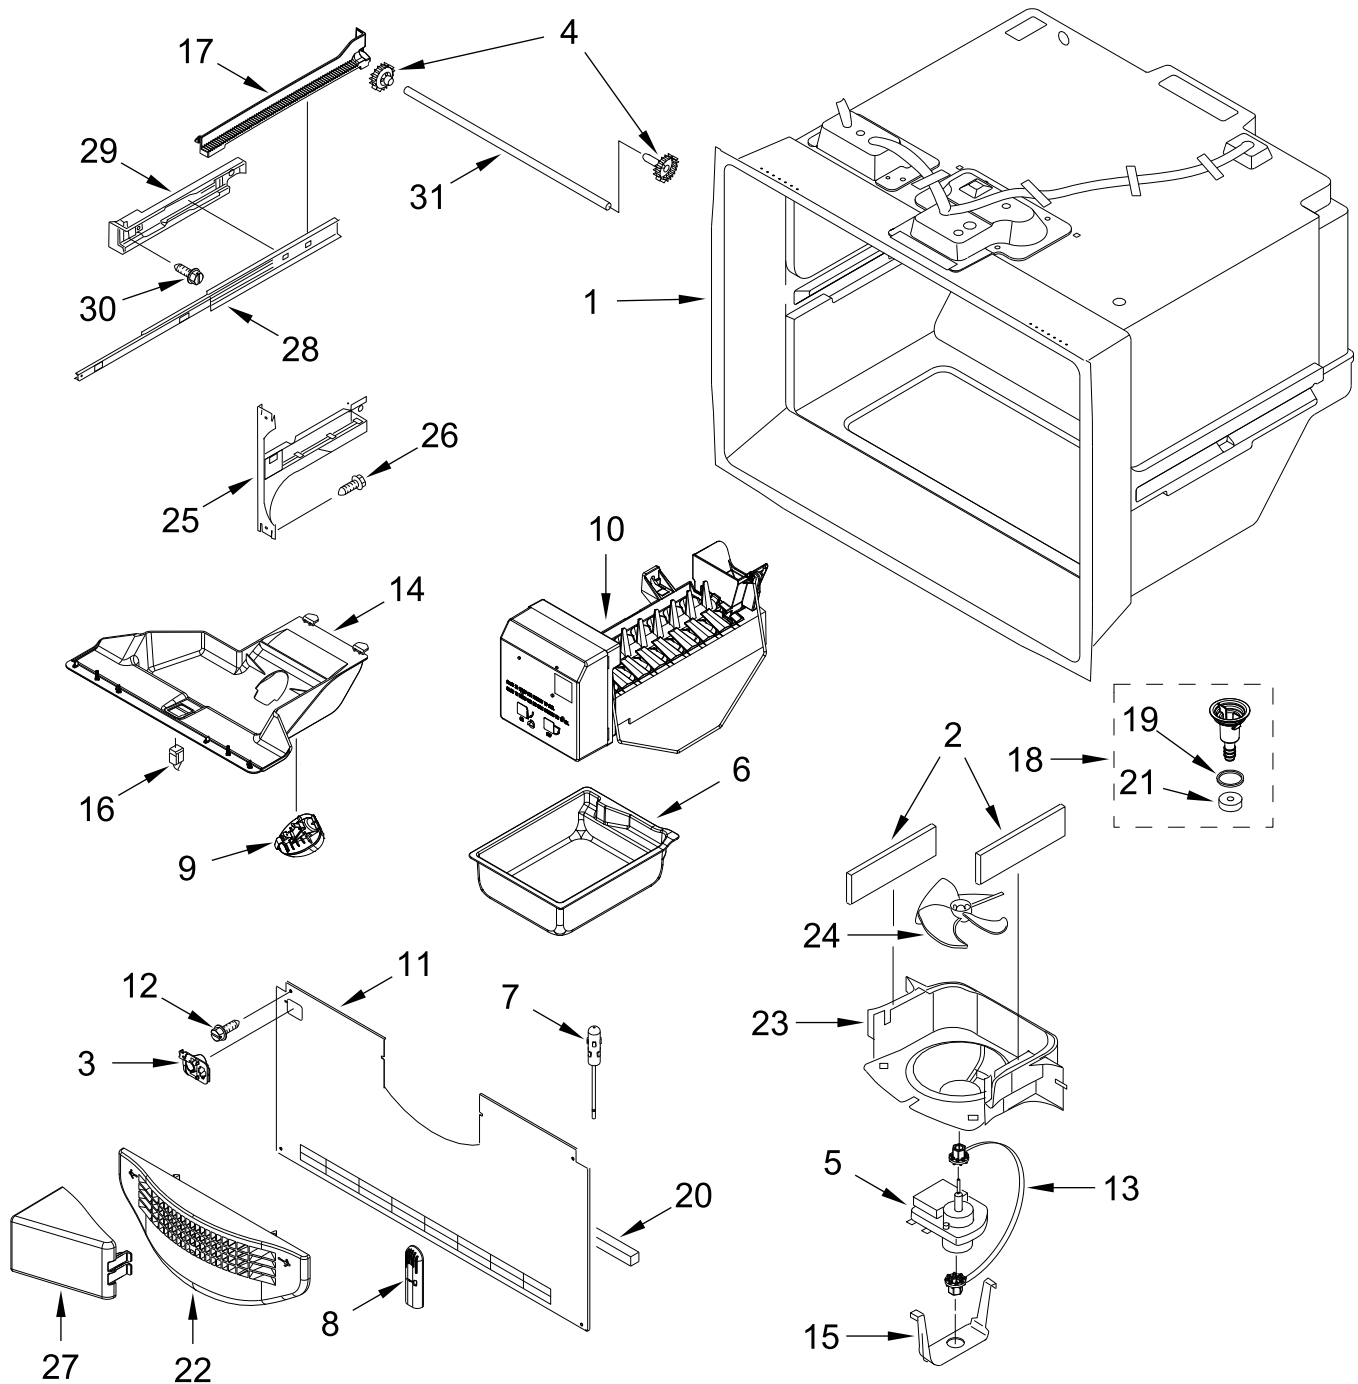

FREEZER LINER AND ICEMAKER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Liner (Not A Serviceable Part)	13	W10121318	Grommet	24	2169142	Blade, Fan
2	A3189392	Gasket, Foam	14	W10277025	Module, Light	25		Bracket, Door
3	W11341630	Guide, Fill Tube	15	13058002	Clip, Evaporator Motor		W10330991	Left Hand
4	12002497	Gear	16	W10847849	Switch, Light		W10330993	Right Hand
5	W10128551	Motor, Evaporator	17		Rail, Side	26	12990521	Screw
6	W10171529N	Pan, Ice		W11309374	Left Hand	27	W10157765	Diverter, Air
7	12791409SP	Thermistor		W11309377	Right Hand	28	W10860513	Slide, Door
8	12815301	Cover, Thermistor	18	W10662407	Assembly, Drain Funnel	29		Adapter, Slide
9	W11468934	Light Module, LED	19	M0500703	Seal		W10284684	Left Hand
10	W11456887	Assembly, Icemaker (Complete)	20	A3189396	Gasket		W10284685	Right Hand
11	W10308416	Cover, Evaporator	21	B8381501	Gasket, Drain	30	12990501	Screw
12	12990511	Screw	22	13024803	Grille, Freezer Air	31	W10802332	Shaft, Rack
			23	13057901	Shroud, Evaporator Fan			


REFRIGERATOR DOOR PARTS

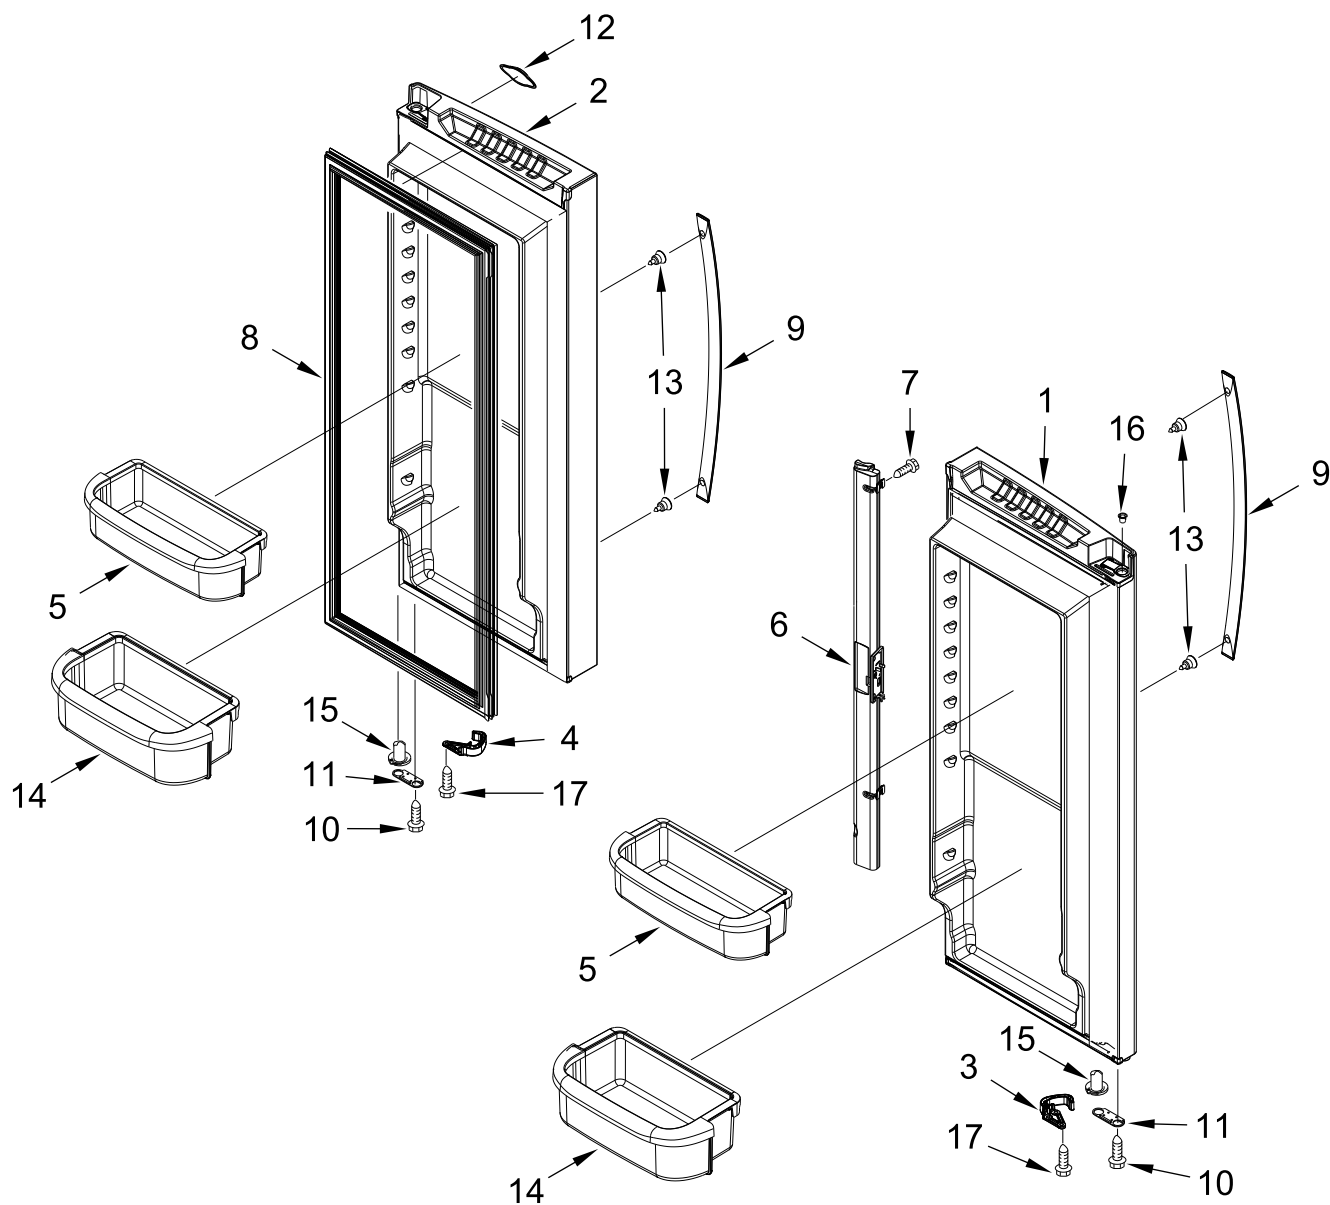

REFRIGERATOR DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Door, Refrigerator	6		Mullion, Door	15		Closure, Door
		Left Hand	12722803W	White		12028505W	White	
	13107888W	White	12722803BN	Black		12028505B	Black	
	13107888B	Black	7	12990204	Screw	16	12996601	Clip, Bushing
2		Door, Refrigerator	8		Gasket, Door	17	12990518	Screw
		Right Hand	W10830189	White				
	13107887W	White	W10830206	Black				
	13107887B	Black	9		Handle, Door			
			W11101973	White				
3		Latch, Door Closer	W11101974	Black				
		Left Hand	10	12990504	Screw			
	W10833740	White	11		Stop, Door			
	W10725268	Black	12968202W	White				
4		Latch, Door Closer	12968202B	Black				
		Right Hand	12	W10884773	Badge			
	W10833738	White	13	W11328753	Screw			
	W10725267	Black	14	W10289497	Bucket, Gallon			
5	W10371194	Bucket, Medium						


FREEZER DOOR PARTS

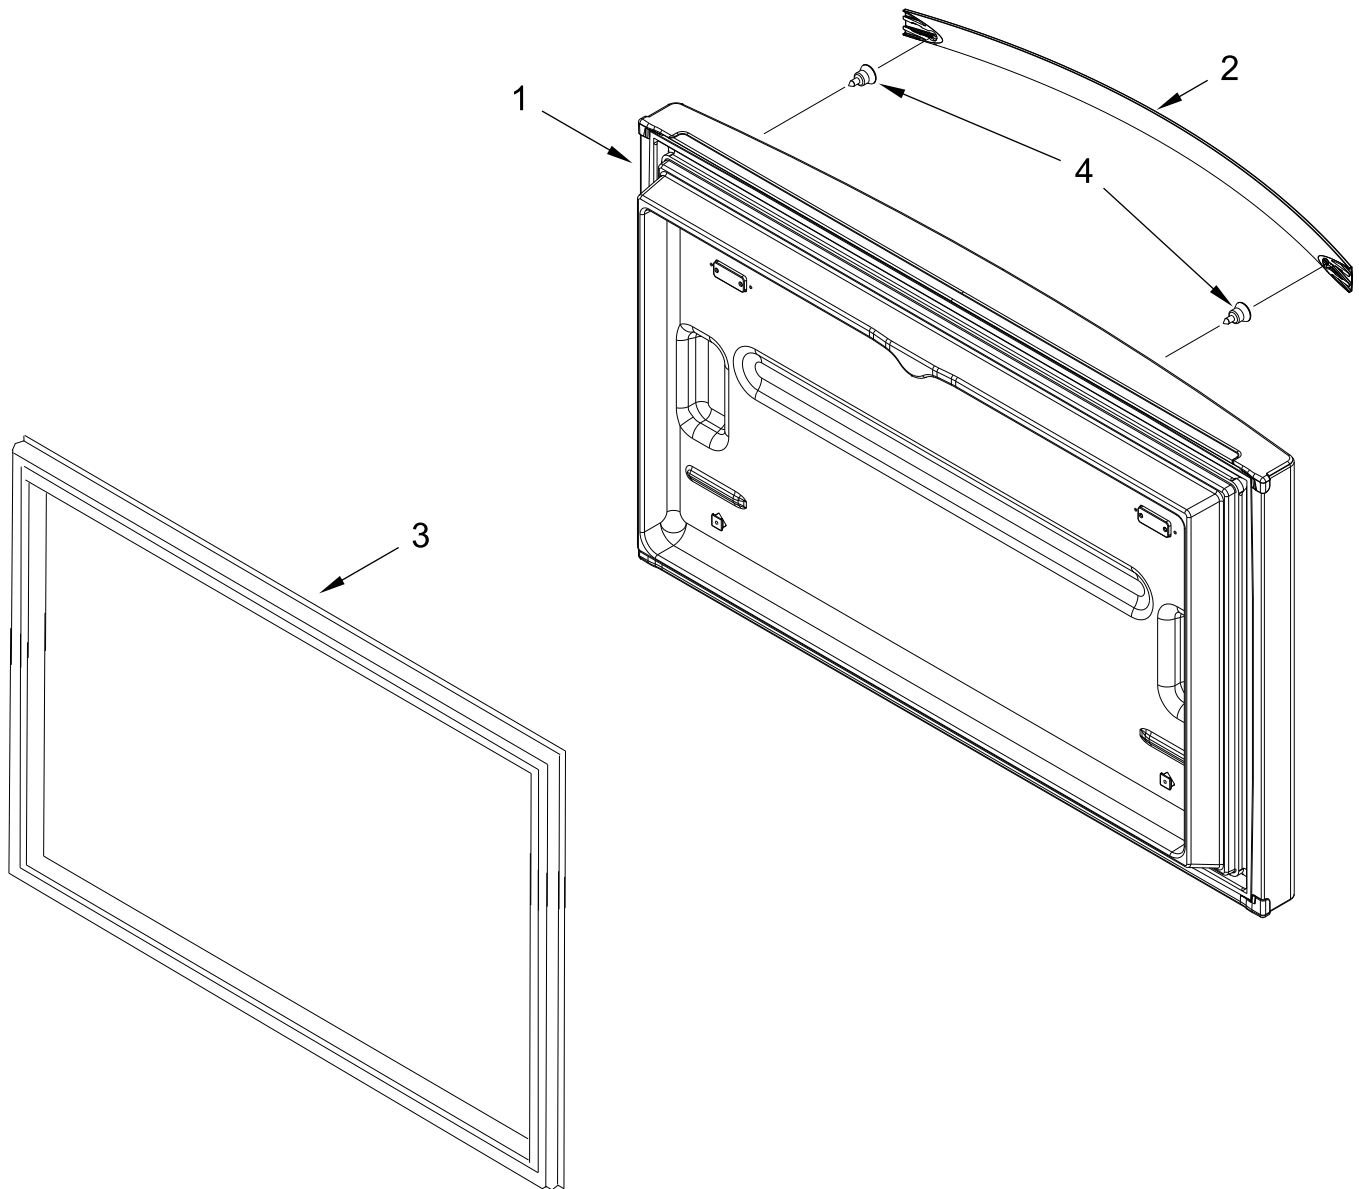

FREEZER DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Door, Freezer	2		Handle, Door	3		Gasket, Door
	12977879W	White		W11101978	White		W10443319	White
	12977878B	Black		W11101980	Black		W10436252	Black
						4	W11328753	Screw


UNIT PARTS

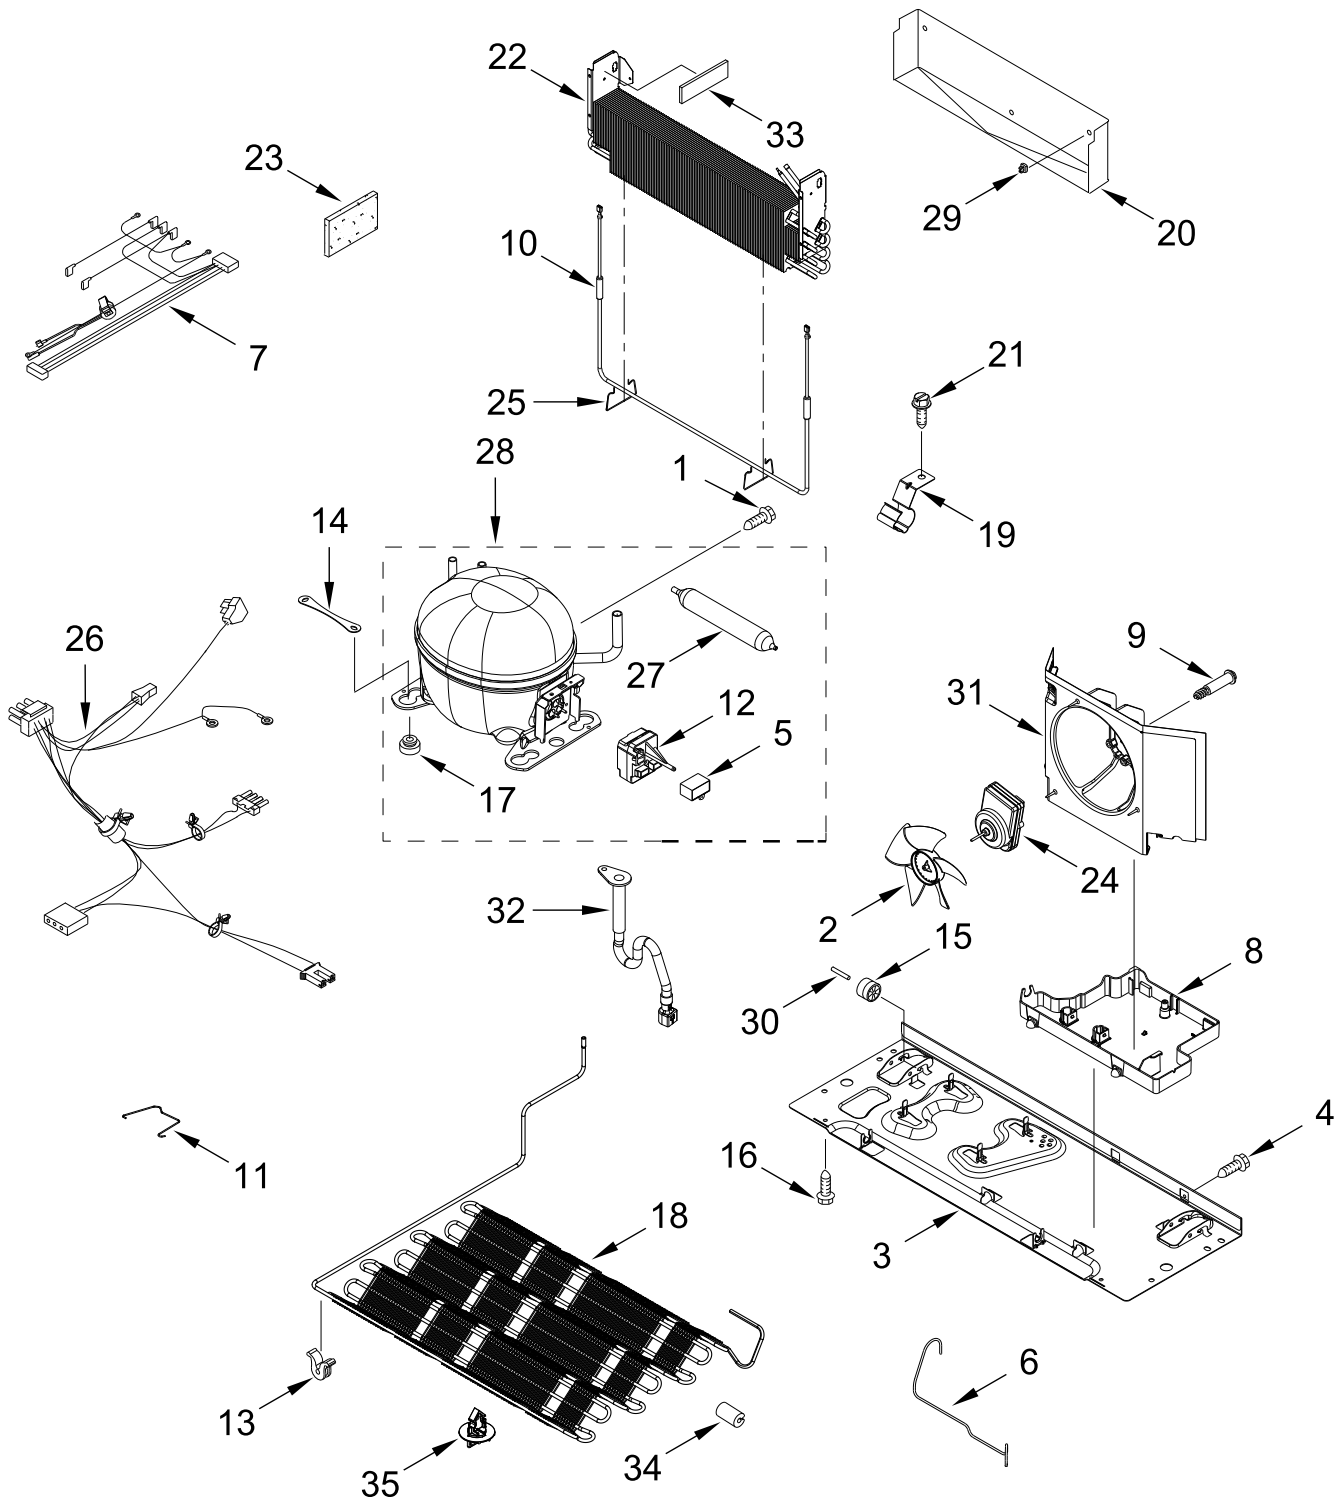

UNIT PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	12992301	Screw	20	W11337767	Tray, Drip	28	W11332031	Compressor
2	12825803	Blade, Fan	21	12990701	Screw			(Also Order the Following Lokring Parts)
3	W10480111	Basepan	22	W11337412	Evaporator			
4	12990511	Screw			(Also Order the Following Lokring Parts)	W11504416	8.5/6 NR MS 00	(Suction Tube to Compressor)
5	W10350564	Capacitor		W11504423	8/2 NR AL 00	W11504431	7/5 NR MS 00	(Discharge Tube to Compressor)
6	W11370275	Tube, Discharge			(Capillary Tube to Evaporator)			
7	W11305539	Harness, Evaporator (Includes Defrost Thermostat)		W11504415	8.5/8 NR MS 00	W11506621	6 NK MS 00	(Charging Tube to Compressor)
8	W10655368	Pan, Drain			(Suction Line to Evaporator)			
9	W10622701	Screw	23	2169104	Insulation, Sound Deadening	W11506635	Tube, Charging (1/4" w/ Schrader Valve)	
10	W11287565	Heater, Defrost	24	W11373924	Motor, Condenser Fan	29	10623002	Clip, Evaporator
11	W11379613	Strap, Bale	25	W11380964	Clip, Heater	30	12477202	Axle, Roller
12	W11359985	Device, Start	26	W11525276	Harness, Unit (Includes Power Cord)	31	W10189184	Shroud, Condenser Fan
13	W10137529	Grommet, Condenser	27	W11353156	Drier	32	W10622099	Extension, Drain Tube
14	W10236396	Strap, Compressor			(Also Order the Following Lokring Parts)	33	W11244122	Gasket, Foam
15	12477102	Roller		W11504445	5/4 NR MS 00	34	2319835	Grommet, Condenser
16	12992101	Screw			(Heat Loop to Drier)	35	W10815863	Clip, Condenser
17	10835903	Grommet		W11504447	5/1.8 NR MS 00			REFRIGERANT CHARGE
18	W11353137	Condenser (Also Order the Following Lokring Parts)			(Capillary Tube to Drier)			54 grams (R600a)
	W11506623	5 NK MS 00 (Discharge Tube to Condenser)						
	W11504432	6/5 NR MS 00 (Heat Loop to Condenser)						
19	W10281329	Clip, Drier						

SHELF PARTS

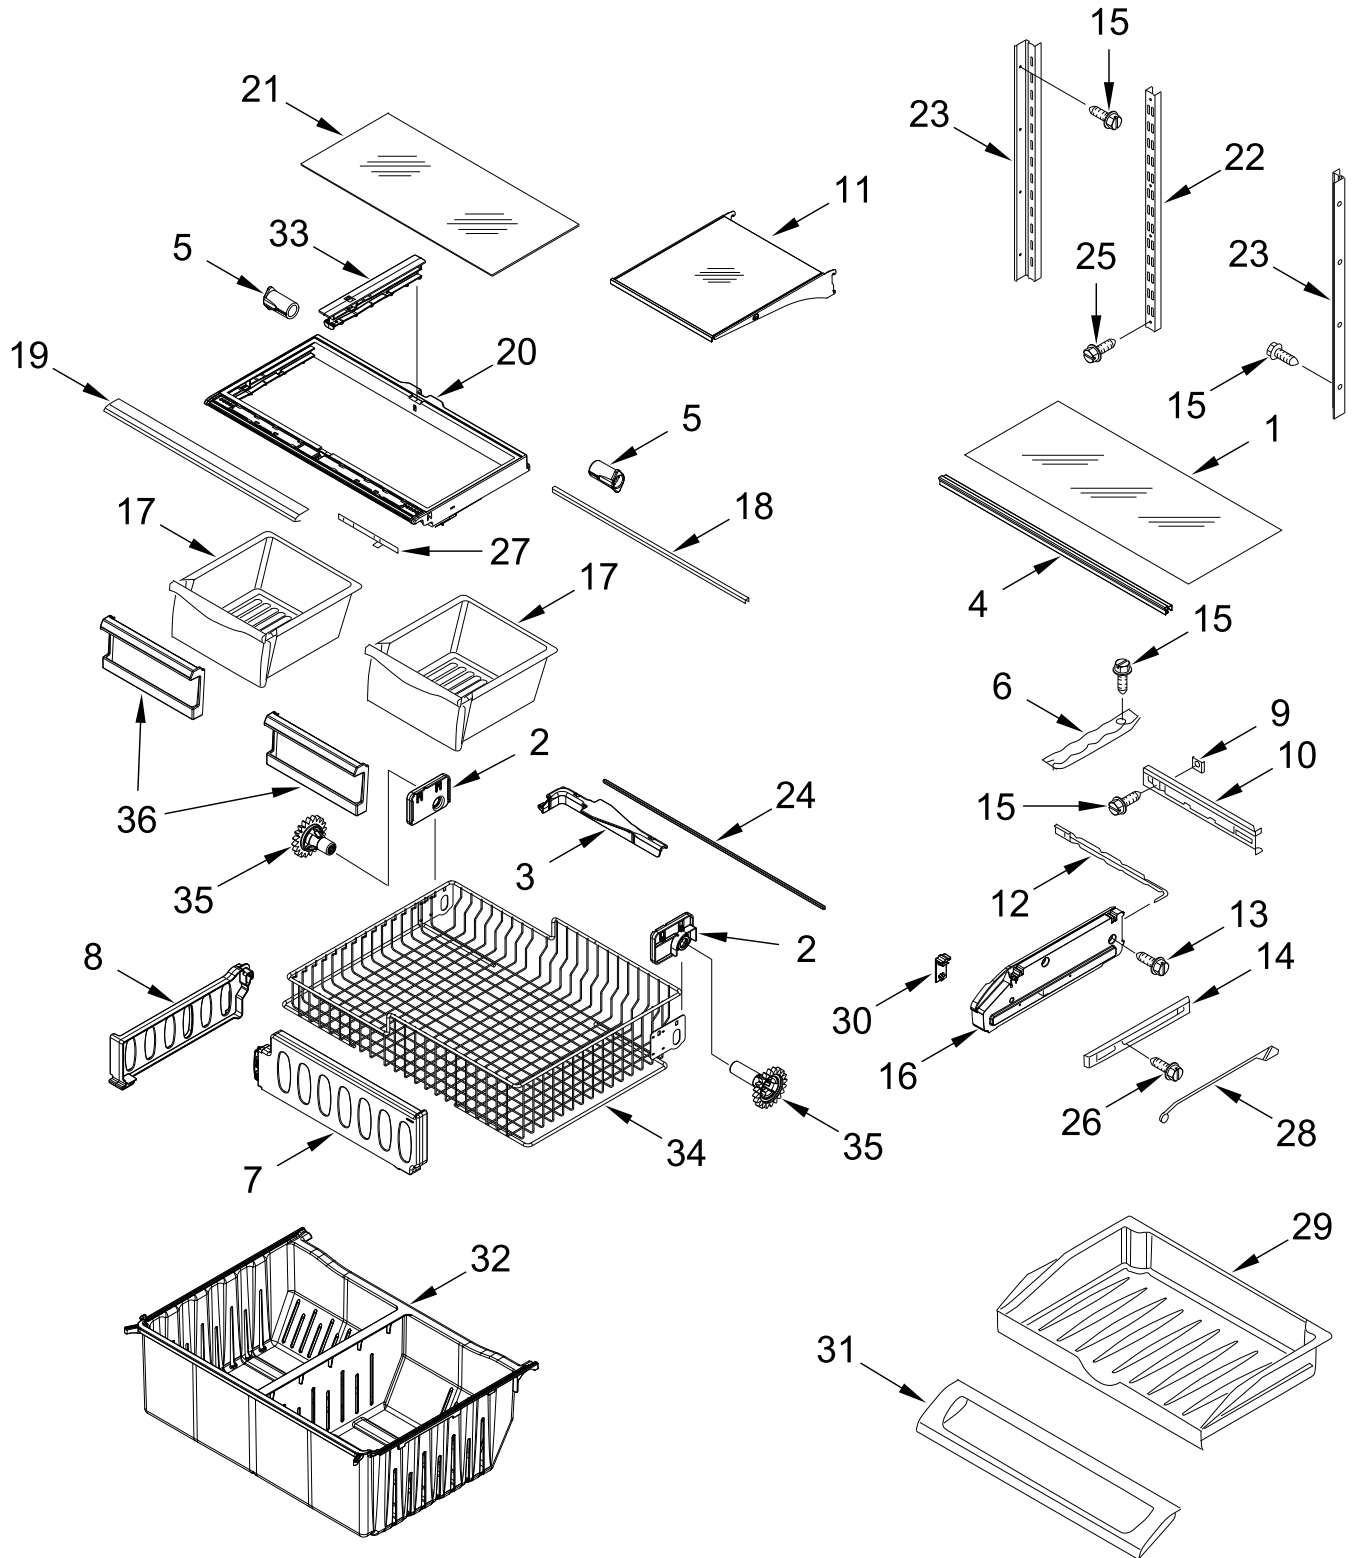

SHELF PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10893772	Glass, Shelf
2		Mount, Gear
	W10348259	Left Hand
	W10348260	Right Hand
3	W10149389N	Lift, Bail Arm
4	W10528933	Support, Glass (Includes Pantry Brace)
5	13062602	Support, Crisper Frame
6	12531901	Track, Deli Drawer
7	W10171558	Divider, Basket (Upper)
8	W10241046	Divider, Basket (Upper)
9	12656901	Gasket, Pantry
10	12656202	Housing, Control

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
11	W11350753	Assembly, Shelf
12	12655402	Slide, Temperature Control
13	12990512	Screw
14	W10235370	Glide, Pantry
15	12990513	Screw
16		Endcap, Pantry
	W10845509	Left Hand
	W10845508	Right Hand
17	12804601SP	Pan, Crisper
18	12642303WD	Brace, Crisper Cover
19	W10231345N	Trim, Crisper
20	W10329866	Frame, Crisper
21	12204824N	Glass, Shelf
22	W10273463	Ladder, Center
23	W10569182	Ladder, Side
24	W10802333	Shaft, Rack

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
25	W10215666	Screw
26	12990504	Screw
27	12530805SP	Slide, Humidity Control
28	12655304	Bar, Control
29	12731302	Drawer, Pantry
30	12655204	Knob, Temperature Control
31	12656813	Lid, Pantry
32	W10293682	Bin, Lower
33	W10326469N	Rail, Center Crisper
34	W11115256	Basket, Freezer (Upper)
35		Gear, Spur
	W10474716	Left Hand
	W10474715	Right Hand
36	12802602SP	Front, Crisper Pan

OPTIONAL PARTS

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	72032	Black
	W10134625	Apollo Grey
	W10917540	Midnight Grey
	511873	White Porcelain (2 oz.)
	4392899	Biscuit/Bisque

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	350939	Enamel, Black
	285006	Black
	350942	White Primer
	4392901	Biscuit/Bisque

PAINT, BULK (1 QT.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

MISCELLANEOUS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	212643	Sealer, Gum (4 Feet)
	479502	Tape, Vinyl (3/4 x 108")
	876370	Insulation (2 Pieces, 3" x 24" x 48")
	876305	Insulation Kit (14 Pieces, 3" x 24" x 48")
	978941	Insulation, Fiberglass (63 1/2" x 35 1/2" x 2 5/8")
	876029	Kit, Foam Slab (30" x 32 1/2" x 1 1/2")
	505587	Sealer, Mastic (1 Qt)
	503695	Cork, Sealer
	20000008	Cleaner, Stainless Steel
	542638	Grease, Silicone (1/2 Oz.)
	542639	Cement, Alumilastic (1 1/4 Oz.)
	833938	Kit, Terminal Connector
	8003RP	Kit, Water Inlet

TORX SCREW WRENCH

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	1117510	Torx Key