




REFRIGERATOR

MODELS:

KRFC302EBS08 (Black Stainless)


CABINET PARTS

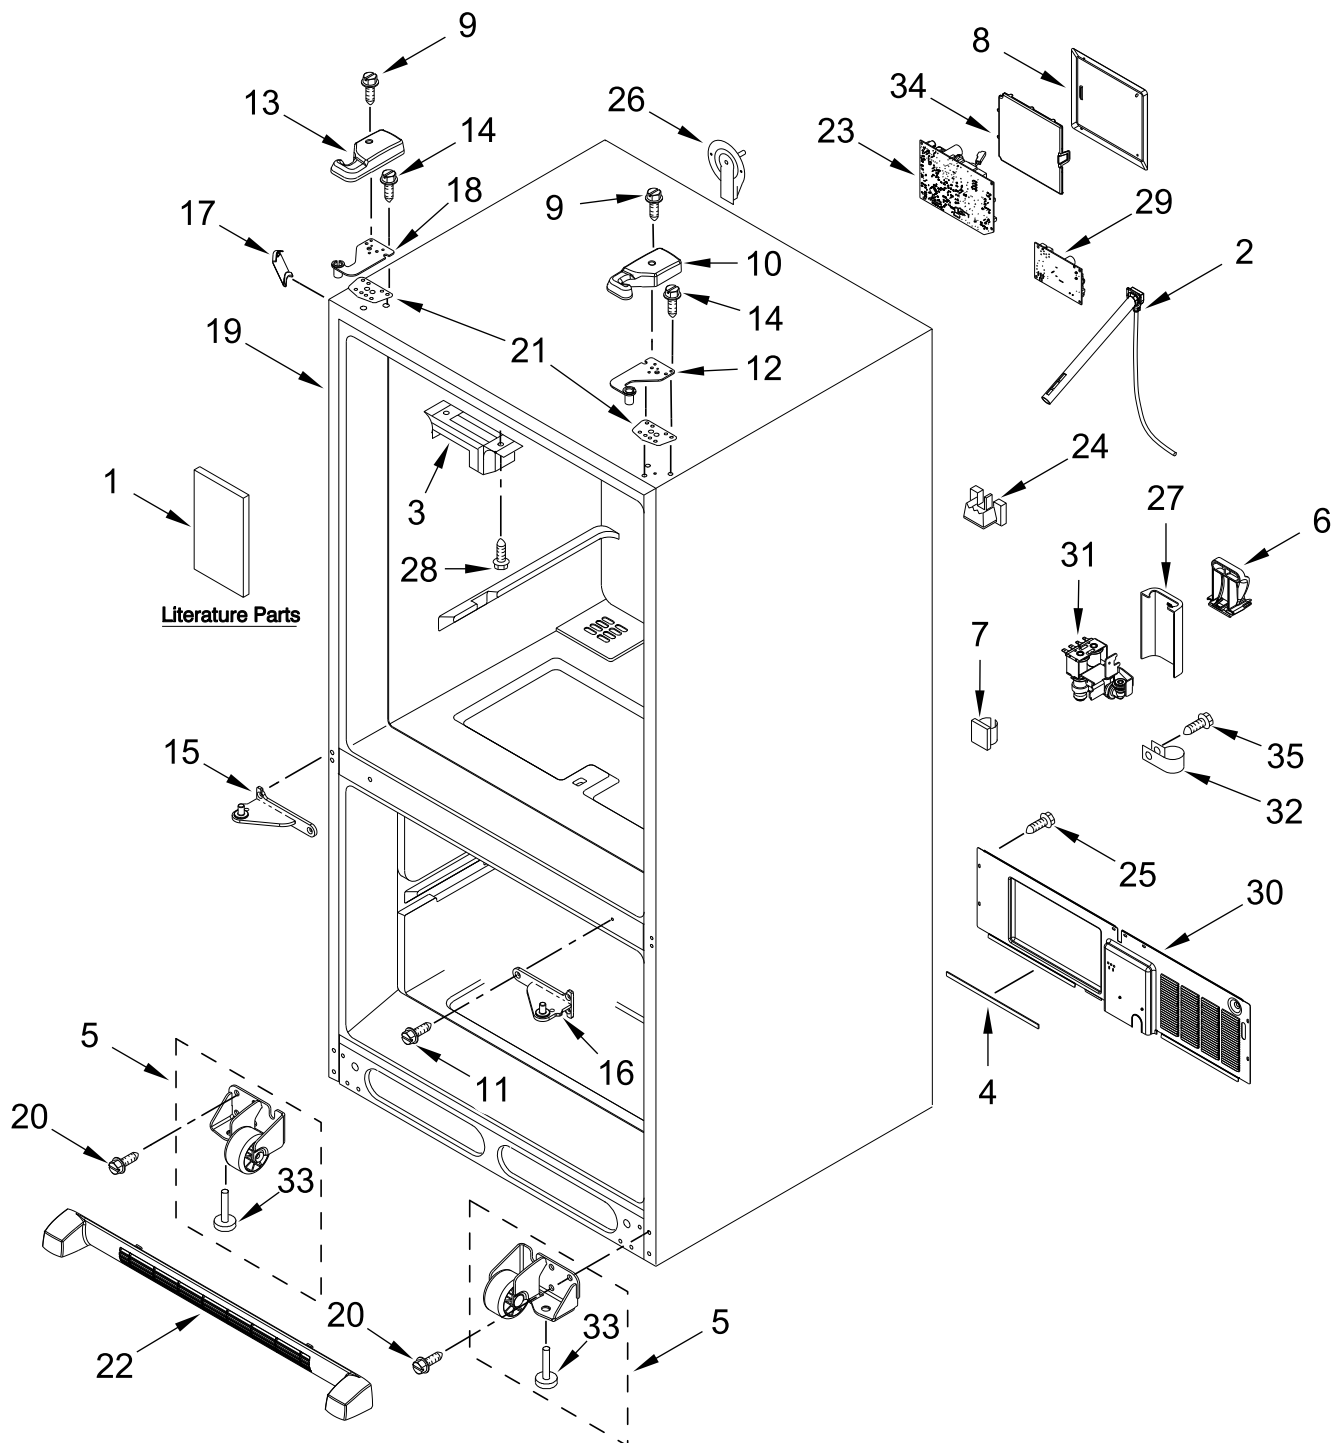

CABINET PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	12		Hinge, Top	22		Assembly, Grille (Includes Clips)
	W11468670	Use and Care Guide		W10210891	Right Hand		W10534153	Black
	W11647516	Energy Guide	13		Cover, Hinge	23	W10120827	Control, Electronic
	W11665551	Tech Sheet			Left Hand	24	W11651067	Block, Fill Tube
2	W11046934	Assembly, Fill Tube (Includes Tubing, Fill Tube Elbow, Tube Insert and Clamp)		W10892762	Black	25	W10141645	Screw
			14	12992403	Screw	26	12726003	Cover, Water Line
			15		Hinge, Center	27	W10208593	Guard, Dual Water Valve
3	W10120087	Block, Pivot			Left Hand			
4	W11534848	Gasket		W10210882	Black	28	688983	Screw
5		Assembly, Roller	16		Hinge, Center	29	W10356039	Control, Electronic (Power Supply)
	W10515763	Left Hand			Right Hand	30	W10211855	Cover, Unit
	W10515762	Right Hand		W10210883	Black	31	W11446816	Valve, Water Inlet
6	W10528513	Sweep, Dual Tube	17		Cover, Corner	32	M0108107	Clamp, Tube
7	M0104106	Clip, Cord		12587703B	Black	33	W10141622	Brake, Roller
8	12961602	Cover, Control Box	18		Hinge, Top	34	W10296541	Lid, HV Control Box
				W10892768	Left Hand	35	12990504	Screw
9	12992603	Screw	19		Cabinet (Not A Serviceable Part)			
10		Cover, Hinge	20	W10709365	Screw			
		Right Hand	21		Shim, Hinge			
	W10153131	Black		12999501	Left Hand			
11	W10673840	Screw (Stainless)		12999502	Right Hand			


REFRIGERATOR LINER PARTS

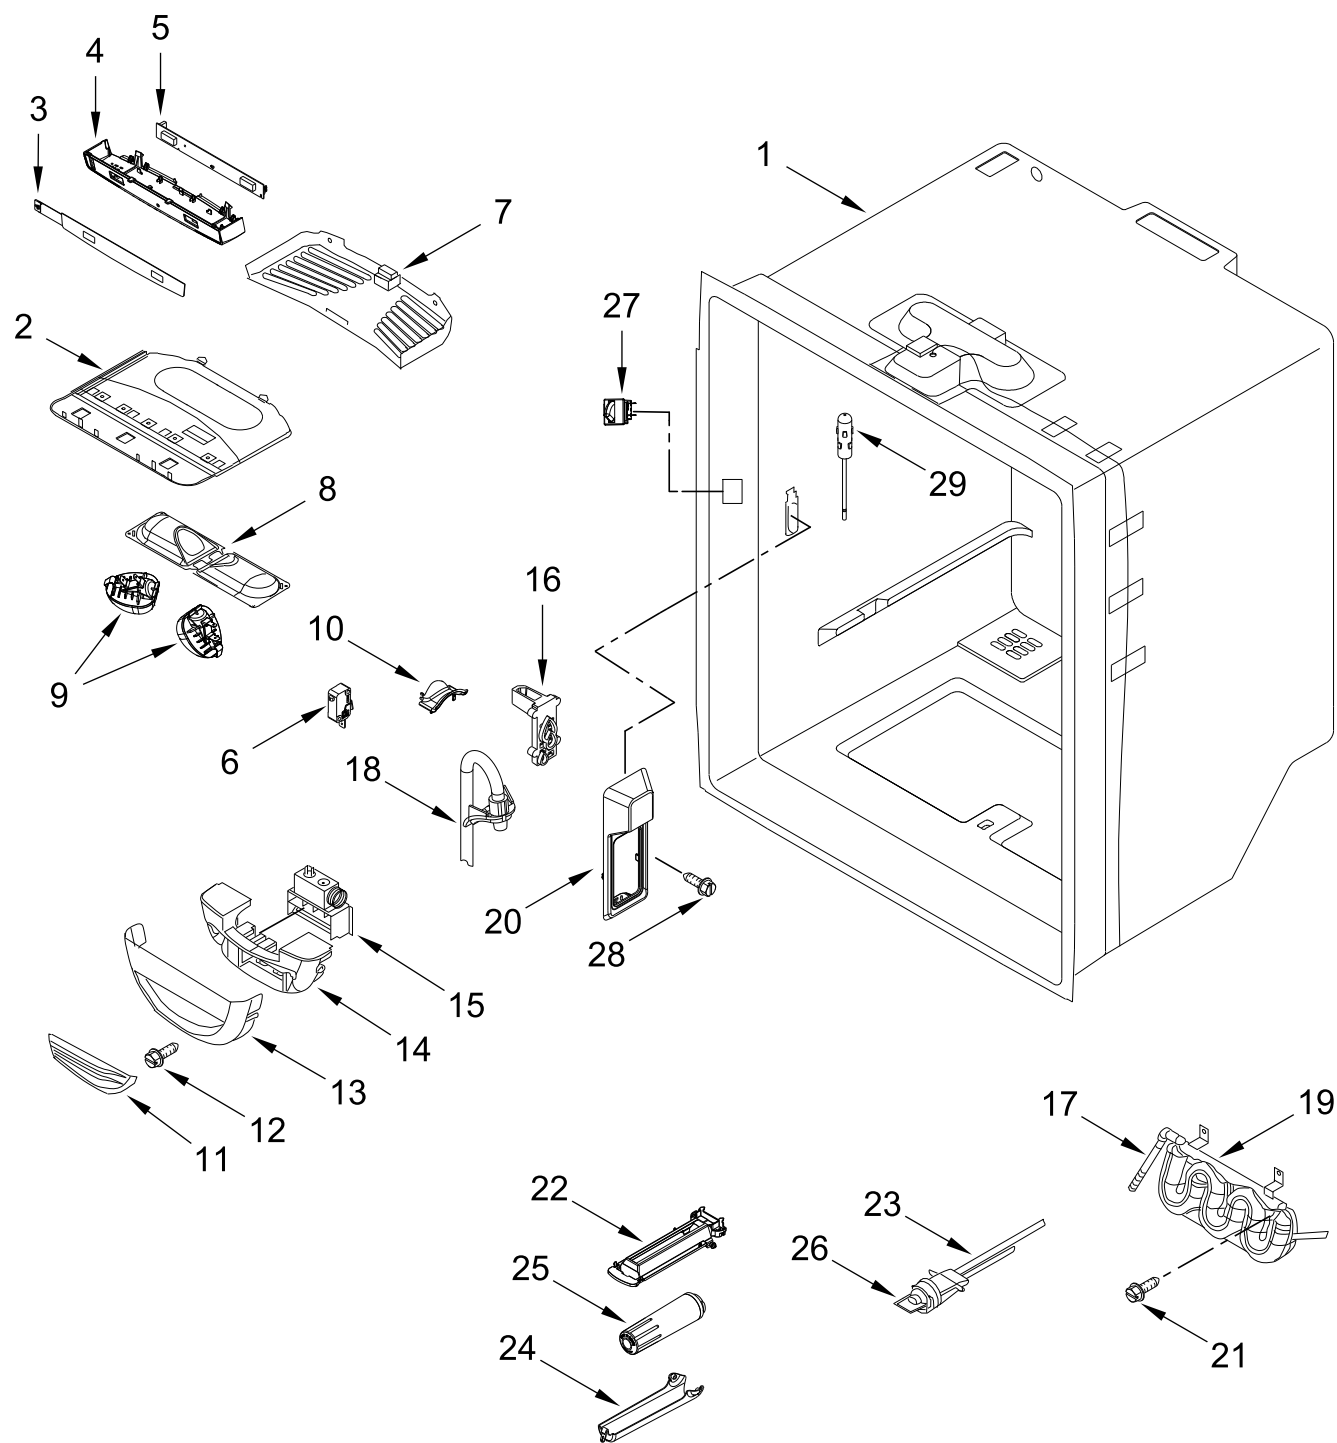

REFRIGERATOR LINER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Liner (Not A Serviceable Part)	14	13012402	Insulation, Damper	26	12664501SP	Cartridge, Bypass
2	W10464766	Module, Light	15	W10594329	Control, Damper	27	W10847852	Switch, Rocker
3	W10742010	Overlay	16	W10204289	Switch, Plunger	28	12990302	Screw
4	W10464767	Module, Control	17	61006182	Union, Water	29	12791416	Thermistor
5	W11593758	Board, Control	18	W10117324	Waterline, Dispenser			FOLLOWING PARTS NOT ILLUSTRATED
6	12575502	Switch, Limit	19	W11117106	Tank, Water			
7	W11132917	Cover, Light	20	W10204292	Facade, Dispenser	W10391289		Harness, Control (Refrigerator, Includes Thermistor)
8	W10443023	Housing, Light	21	12990504	Screw			
9	W11468934	Light Module, LED	22	12955901	Bracket, Filter Base			
10	W10116529	Cover, Waterline	23	W11308018	Head, Water Filter (Includes Bypass Cartridge)			
11	12806801	Insert, Damper Cover						
12	12990604	Screw	24	12960301	Cover, Filter			
13	12806701	Cover, Damper	25	W11256384	Filter, Water			


FREEZER LINER AND ICEMAKER PARTS

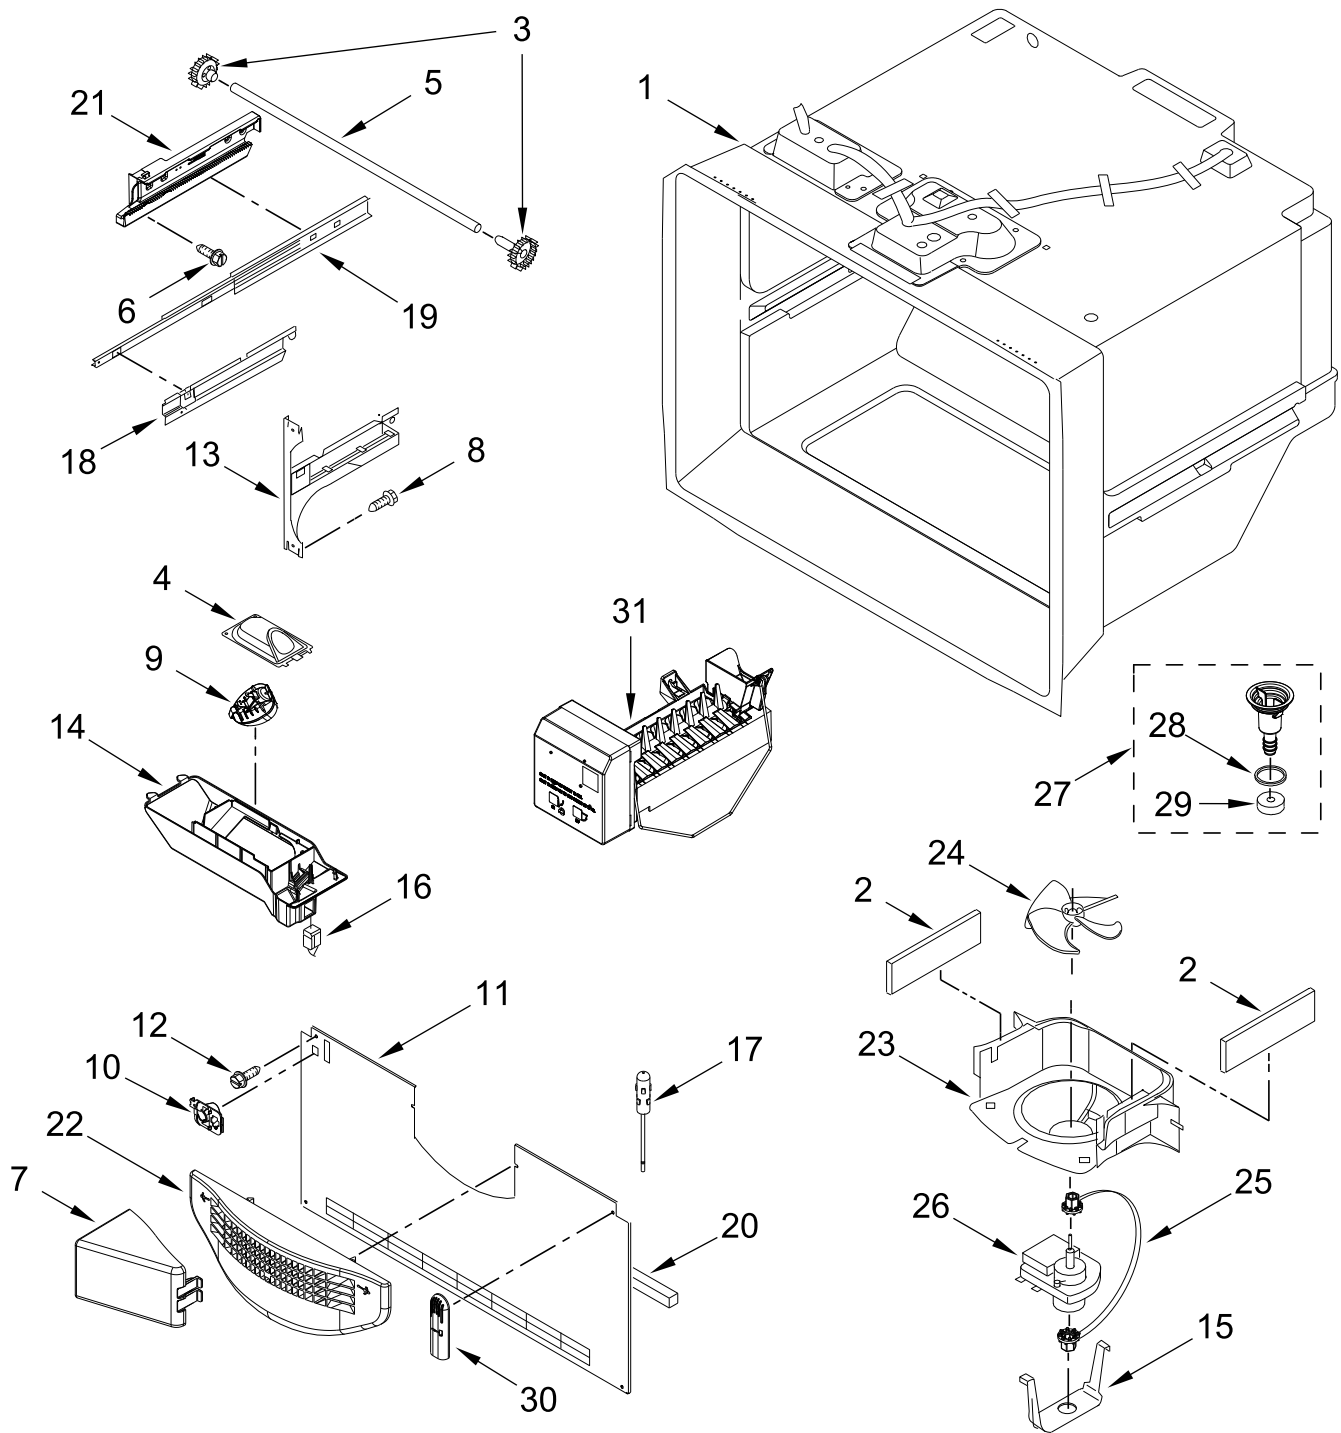

FREEZER LINER AND ICEMAKER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Liner (Not A Serviceable Part)	13		Bracket, Door	23	13057901	Shroud, Evaporator Fan
2	A3189392	Gasket, Foam		W10330994	Left Hand	24	2169142	Blade, Fan
3	12002497	Gear		W10330995	Right Hand	25	W10121318	Grommet
4	12476401V	Housing, Freezer Light	14	W10119832	Module, Freezer Light	26	W10128551	Motor, Evaporator
5	W10802332	Shaft, Rack	15	13058002	Clip, Evaporator Motor	27	W10662407	Assembly, Drain Funnel
6	12990501	Screw	16	W10847849	Switch, Light	28	M0500703	Seal
7	W10157765	Diverter, Air	17	12791419SP	Thermistor	29	B8381501	Gasket, Drain
8	12990521	Screw	18		Cradle, Basket	30	12815301	Cover, Thermistor
9	W11468934	Light Module, LED		W10119848	Left Hand	31	W11456888	Assembly, Icemaker (Complete)
10	W11412315	Guide, Fill Tube		W10119849	Right Hand			FOLLOWING PARTS NOT ILLUSTRATED
11	W11331291	Cover, Evaporator	19	W11643658	Slide, Door			
12	12990511	Screw	20	A3189396	Gasket			
			21		Adapter, Side			
				W10544403	Left Hand			
				W10544404	Right Hand			
			22	13024803	Grille, Freezer Air		W10196195	Harness, Lights (Freezer)


REFRIGERATOR DOOR PARTS

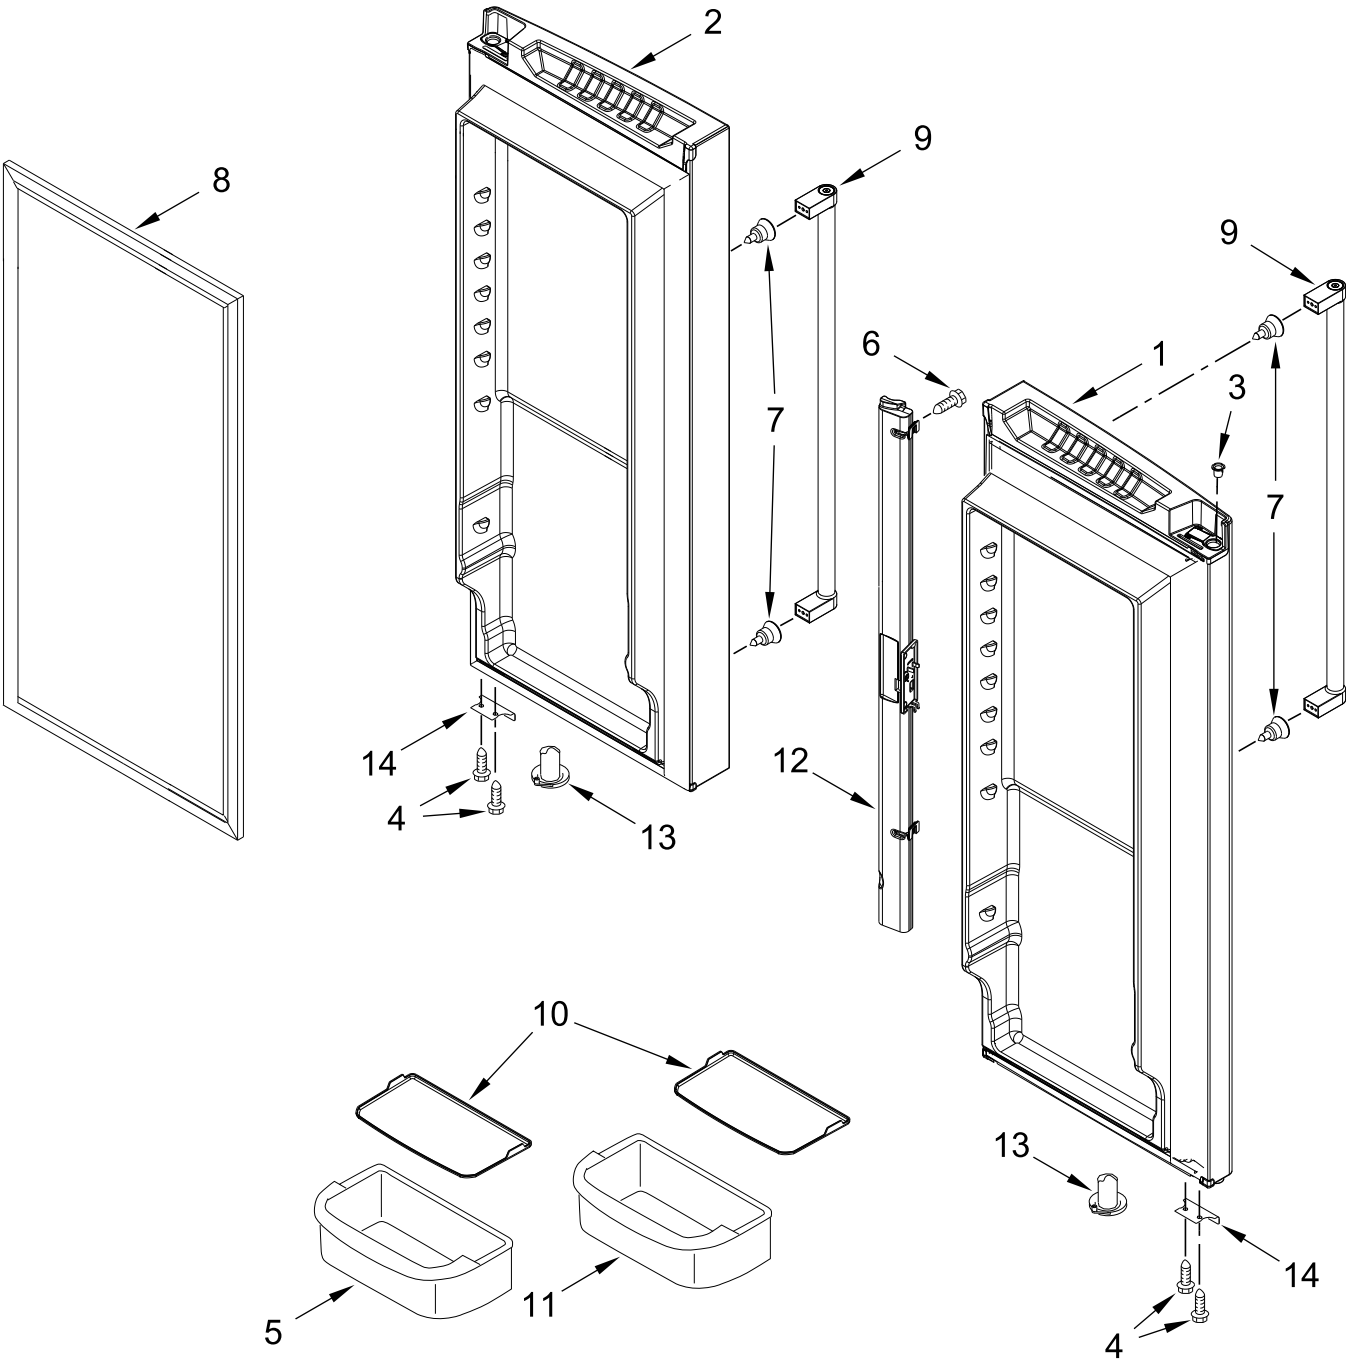

REFRIGERATOR DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Door, Left	7	W11328753	Screw	12		Mullion, Door
	13094754BLS	Black Stainless	8		Gasket, Door		W11128562	Black
2		Door, Right		W10830046	Grey	13		Closure, Door
	13094753BLS	Black Stainless	9		Handle, Door		12028505B	Black
3	12996601	Clip, Bushing		W11339136	Stainless	14		Stop, Door
4	12990518	Screw	10	W10450018	Gripper, Medium		W10153126	Black
5	W10119841	Bucket, Medium		W10450019	Gripper, Gallon			
6	12990204	Screw	11	W10119846	Bucket, Gallon			


FREEZER DOOR PARTS

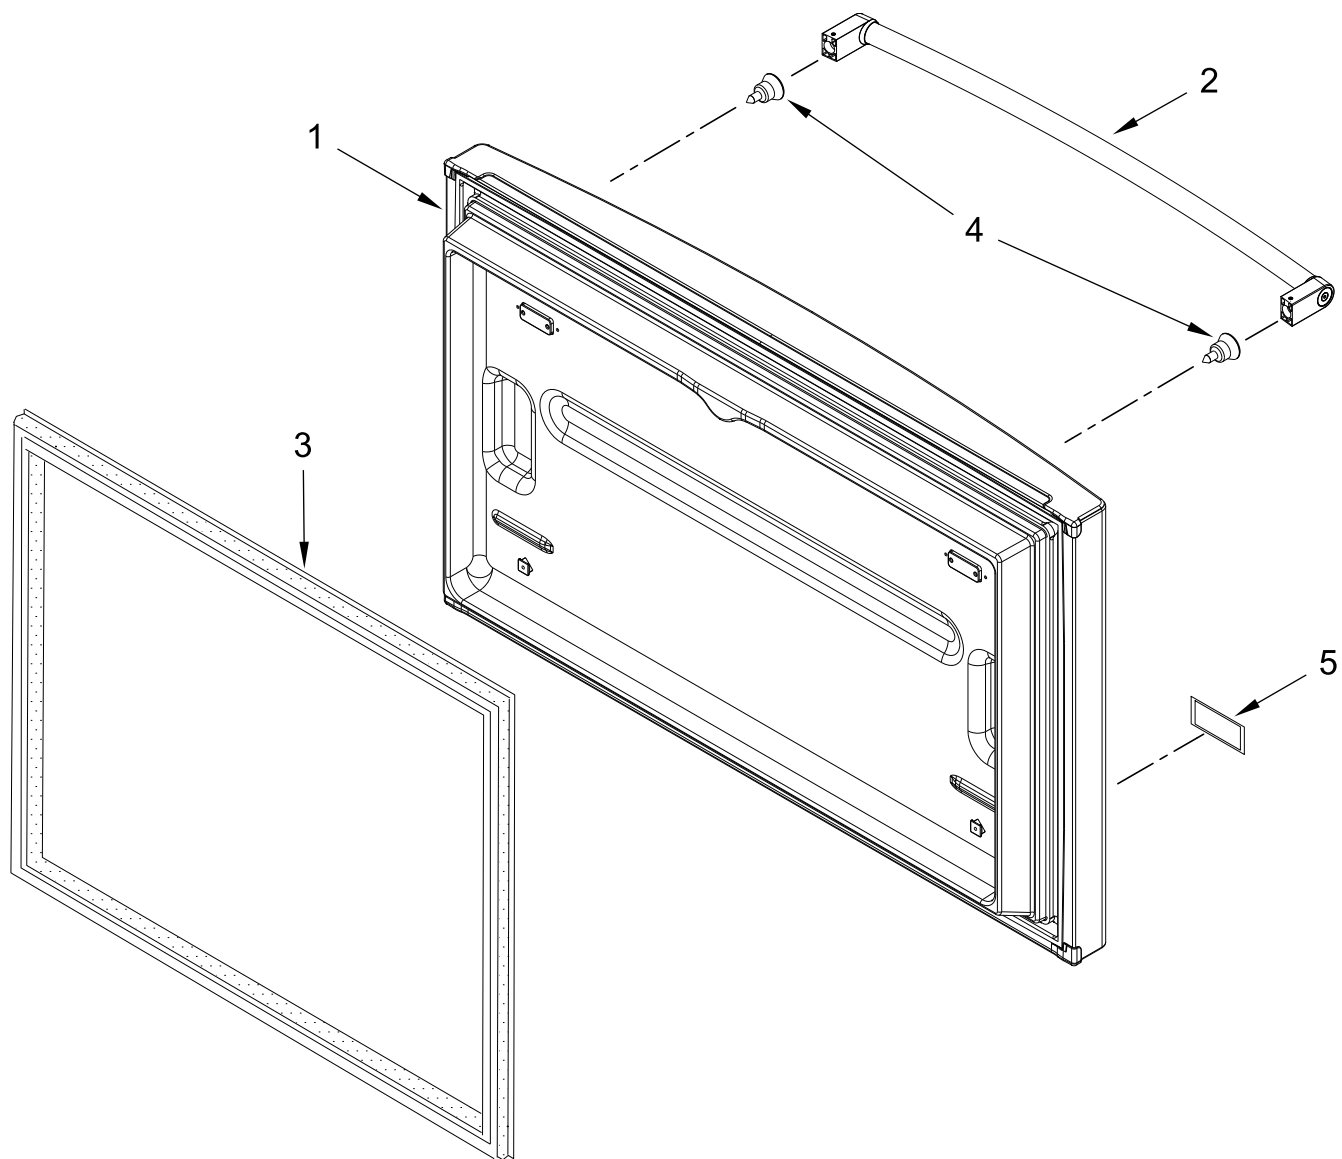

FREEZER DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Door, Freezer	3		Gasket, Door	4	W11328753	Screw
	13094918BS	Black Stainless		W10443320	Grey	5	W10518672	Badge
2		Handle, Door						
	W11339139	Stainless						


UNIT PARTS

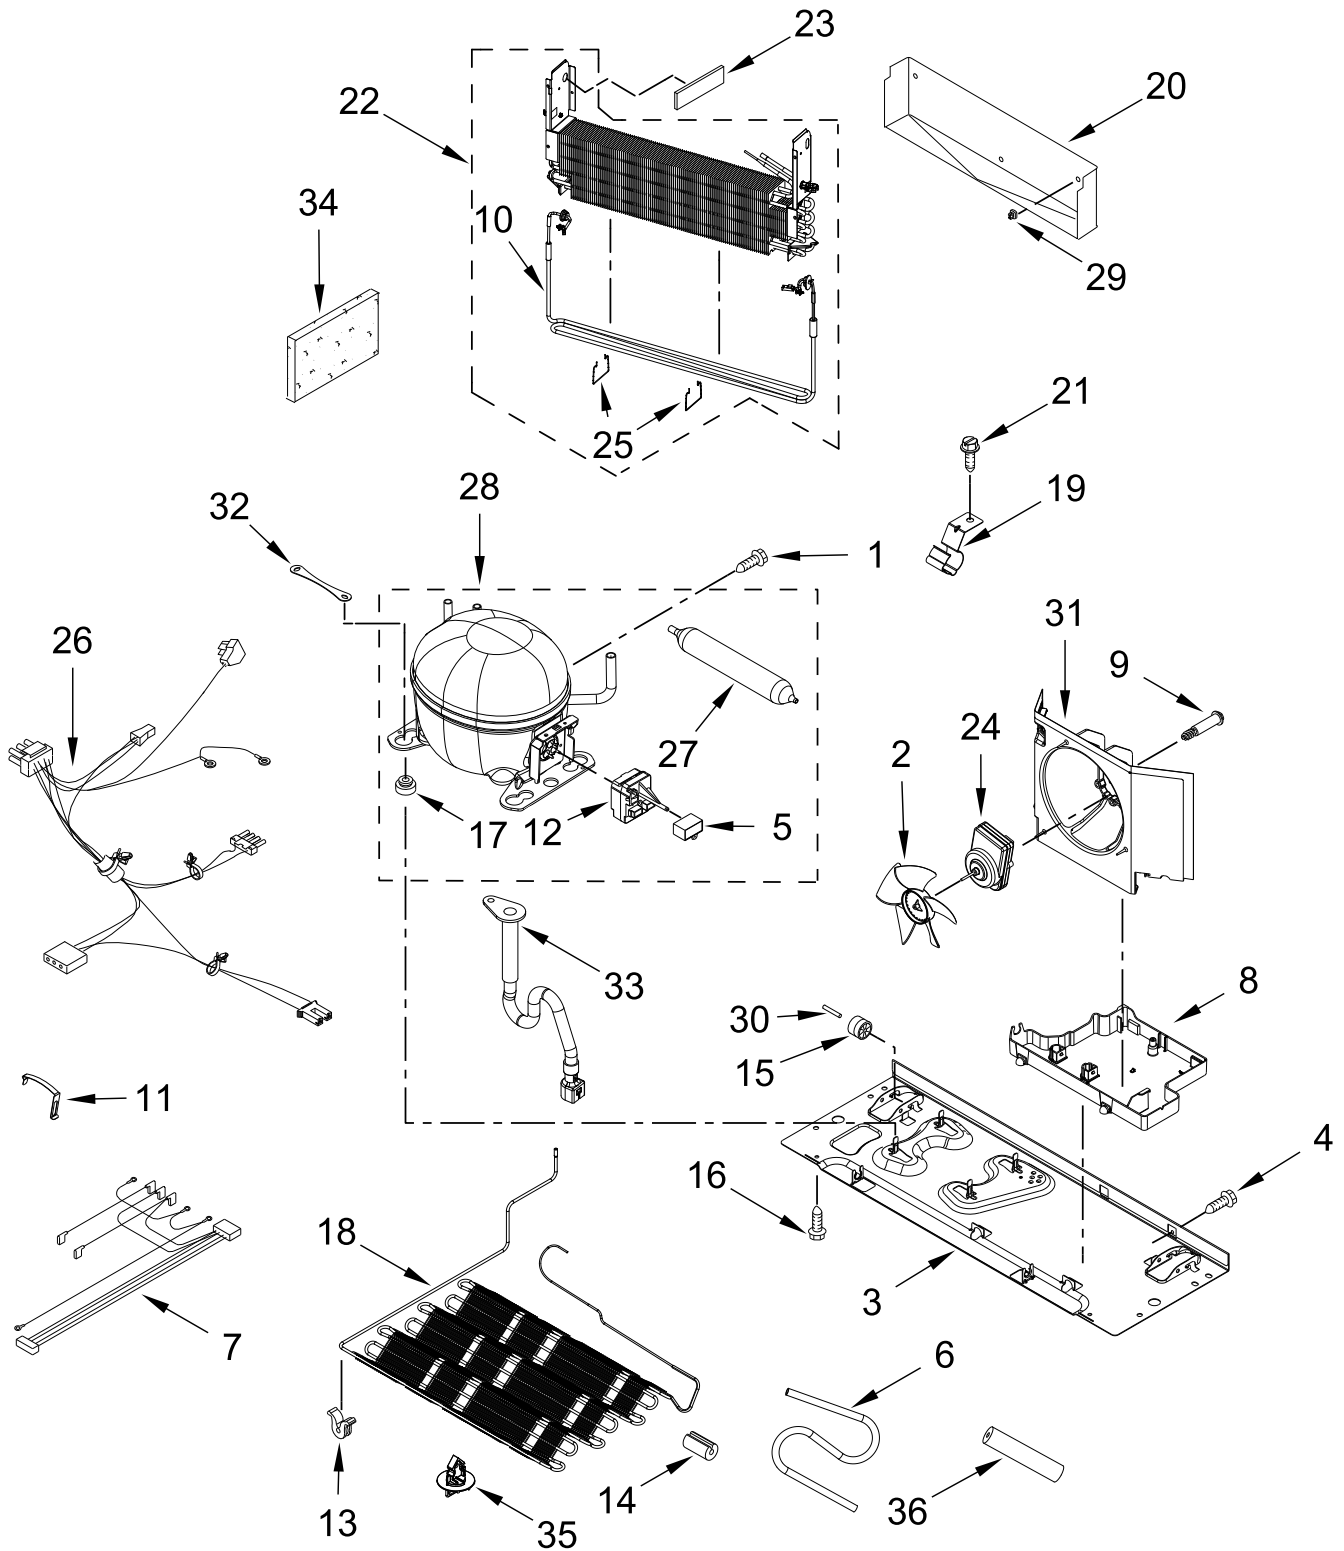

UNIT PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	12992301	Screw	19	W10281329	Clip, Drier	28	W11629397	Compressor
2	12825803	Blade, Fan	20	W11337767	Tray, Drip			(Also Order the Following Lokring Parts)
3	W10480111	Basepan	21	12990701	Screw			
4	12990511	Screw	22	W11515437	Assembly, Evaporator and Heater	W11504416	8.5/6 NR MS 00	(Suction Tube to Compressor)
5	W10350564	Capacitor			(Also Order the Following Lokring Parts)	W11504431	7/5 NR MS 00	(Discharge Tube to Compressor)
6	W11623085	Tube, Suction		W11504423	8/2 NR AL 00			
7	W11305543	Harness, Evaporator Heater			(Capillary Tube to Evaporator)	W11506621	6 NK MS 00	(Charging Tube to Compressor)
8	W10655368	Pan, Drain		W11504415	8.5/8 NR MS 00			
9	W10622701	Screw			(Suction Line to Evaporator)	W11506635	Tube, Charging (1/4 in w/ Schrader Valve)	
10	W11287565	Heater, Defrost	23	W11244122	Gasket, Foam	29	10623002	Clip, Evaporator
11	W11629200	Strap, Bale	24	W11505534	Motor, Condenser Fan	30	12477202	Axle, Roller
12	W11359985	Device, Start	25	W11380964	Clip, Heater	31	W11463236	Shroud, Condenser Fan
13	W10137529	Grommet, Condenser	26	W11654038	Harness, Unit (Includes Power Cord)	32	W10236396	Strap, Compressor
14	2319835	Grommet, Condenser	27	W10805035	Drier (Service Drier Without Dye)	33	W10622099	Extension, Drain Tube
15	12477102	Roller			(Also Order the Following Lokring Parts)	34	2169104	Insulation, Sound Deadening
16	12992101	Screw		W11504445	5/4 NR MS 00	35	W10815863	Clip, Condenser
17	W11631702	Grommet			(Heat Loop to Drier)	36	W10303521	Sleeve
18	W11540543	Condenser (Also Order the Following Lokring Parts)		W11504447	5/1.8 NR MS 00			REFRIGERANT CHARGE
	W11506623	5 NK MS 00 (Discharge Tube to Condenser)			(Capillary Tube to Drier)			51 grams (R600a)
	W11504432	6/5 NR MS 00 (Heat Loop to Condenser)						

SHELF PARTS

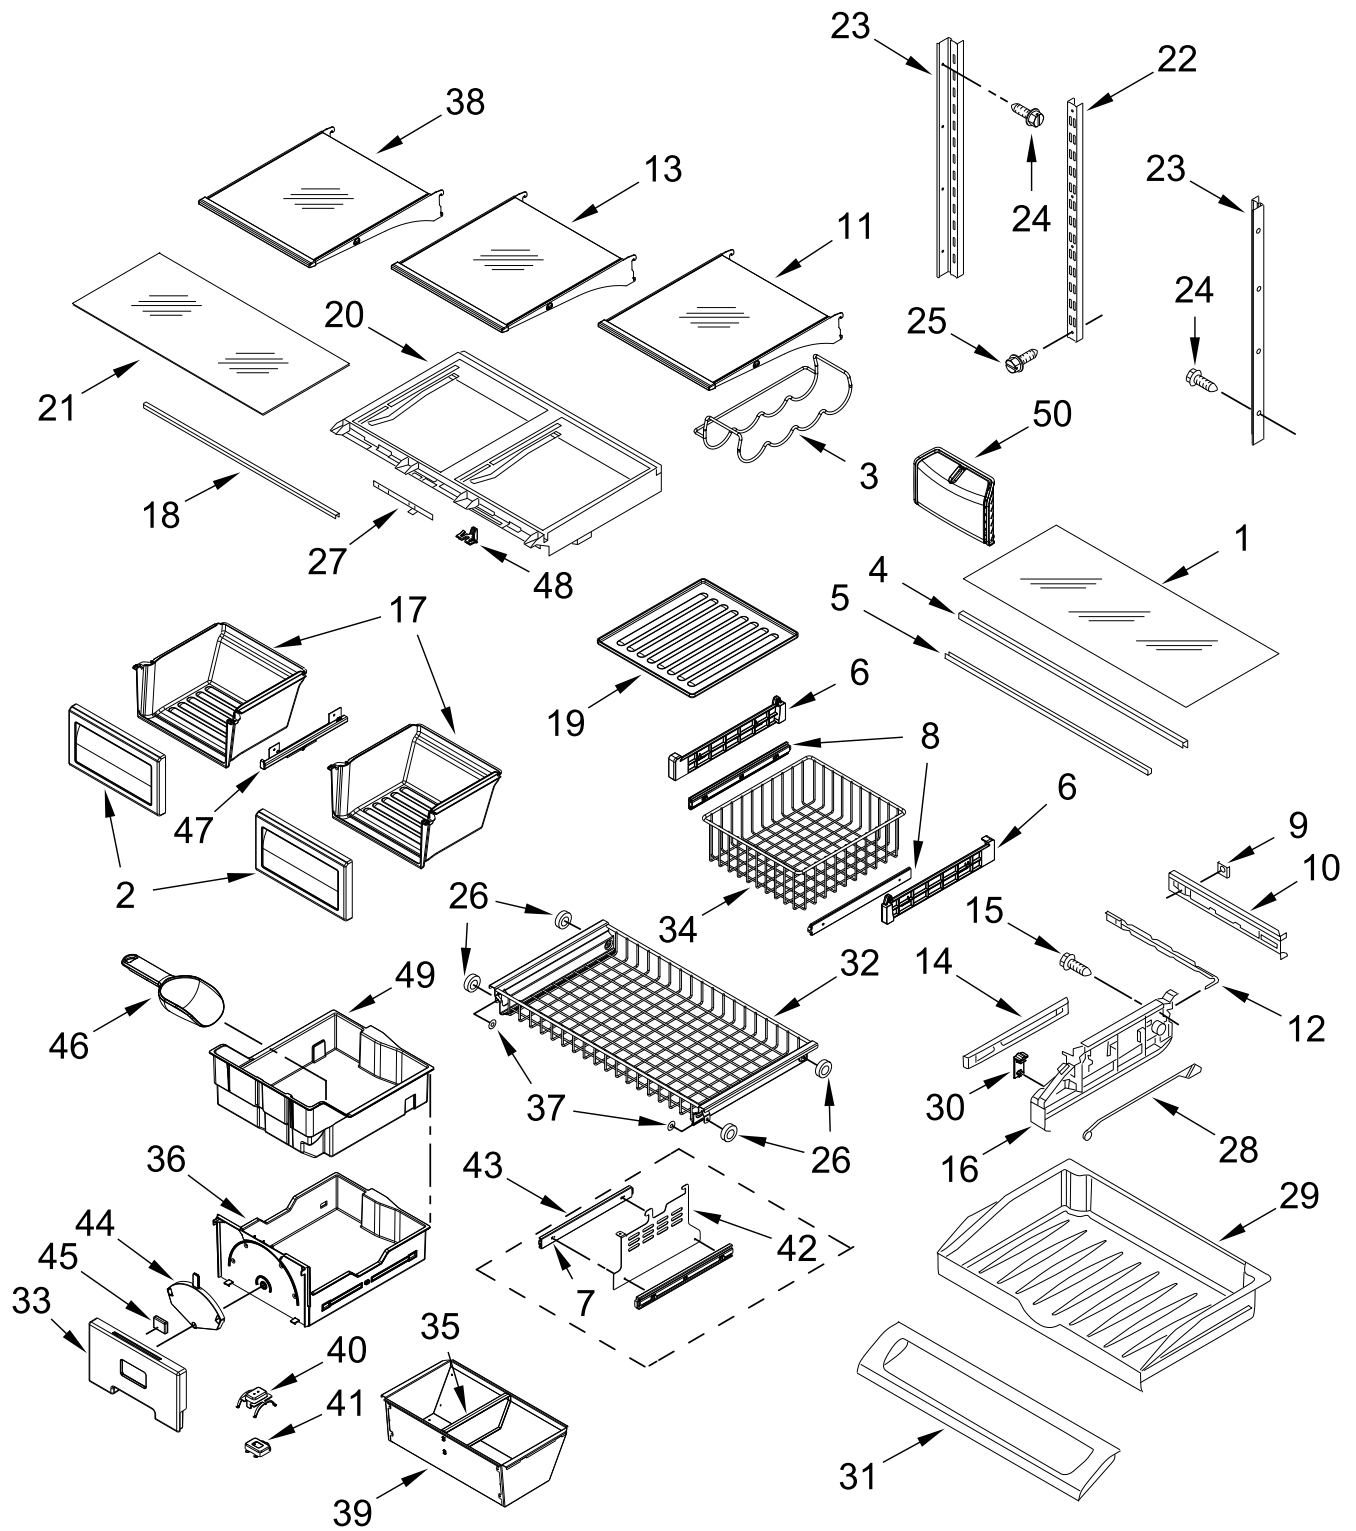

SHELF PARTS

Illus.

<u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	12204815	Glass, Pantry
2	W10119220	Front, Crisper
3	W10742811	Rack, Wine
4	12655902SP	Trim, Pantry Glass
5	12227305WH	Brace, Pantry
6		Adapter
	W10163087	Right Hand
	W10163084	Left Hand
7	W10170835	Glide, Ice Pan
8	W10170836	Glide, Upper Basket
9	12656901	Gasket, Pantry
10	12656202	Housing, Control
11	W10878955	Assembly, Shelf
12	12655402	Slide, Temperature Control
13	W10878945	Assembly, Shelf
14		Glide, Pantry
	W10132652	Right Hand
	W10132653	Left Hand
15	12990504	Screw
16		Track, Pantry
	W10122078	Left Hand
	W10121977	Right Hand

Illus.

<u>No.</u>	<u>Part No.</u>	<u>Description</u>
17	W10119219	Pan, Crisper
18	W10490807	Brace, Crisper Frame
19	W10451455	Mat, Upper Basket
20	W10119215	Frame, Crisper
21	12204827	Glass, Crisper Cover
22	W10273463	Ladder, Center
23	W10569182	Ladder, Side
24	12990513	Screw
25	W10215666	Screw
26	2204542	Roller, Basket
27	W10119217	Slide, Humidity Control
28	12655303	Bar, Temperature Control
29	12655703	Drawer, Pantry
30	12655204	Knob, Temperature Control
31	12656822	Lid, Pantry Drawer
32	W10119854	Basket, Middle
33	W10174720	Front, Ice Pan
34	W10120003	Basket, Upper Freezer
35	W10119851	Divider, Lower Bin

Illus.

<u>No.</u>	<u>Part No.</u>	<u>Description</u>
36	W10120008	Carrier, Ice Pan
37	2207415	Nut, Hex
38	W10905889	Assembly, Shelf
39	W10144706	Assembly, Bin
40	W10121002	Latch, Coupler
41	W10121004	Housing, Coupler
42	W10120014	Support, Freezer Door
43	W10170987	Assembly, Center Glide
44	W10184030	Lever, Ice Pan
45	W10720771	Magnet, Latch
46	W10182881	Scoop, Ice Pan
47		Slide, Crisper
	2302952	Left Hand
	2302953	Right Hand
48	W10119222	Knob, Humidity Control
49	W10120005	Pan, Ice
50	W10826105	Assembly, Produce Preserver

OPTIONAL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		TOUCH-UP PAINT
	72032	Black PAINT, PRESSURIZED SPRAY (12 oz.)
	350939	Enamel, Black
	285006	Black Important: The spray paint is not to be used where the paint may make contact with the door gaskets.
		MISCELLANEOUS
	212643	Sealer, Gum (4 Feet)
	479502	Tape, Vinyl (3/4 x 108")
	876370	Insulation (2 Pieces, 3" x 24" x 48")
	876305	Insulation Kit (14 Pieces, 3" x 24" x 48")
	978941	Insulation, Fiberglass (63 1/2" x 35 1/2" x 2 5/8")
	876029	Kit, Foam Slab (30" x 32 1/2" x 1 1/2")
	505587	Sealer, Mastic (1 Qt)
	503695	Cork, Sealer
	542638	Grease, Silicone (1/2 Oz.)
	542639	Cement, Alumilastic (1 1/4 Oz.)
	833938	Kit, Terminal Connector
	8003RP	Kit, Water Inlet TORX SCREW WRENCH
	1117510	Torx Key