




GAS RANGE

MODELS:

WFG550S0LB5 (Black)
WFG550S0LW5 (White)


COOKTOP PARTS

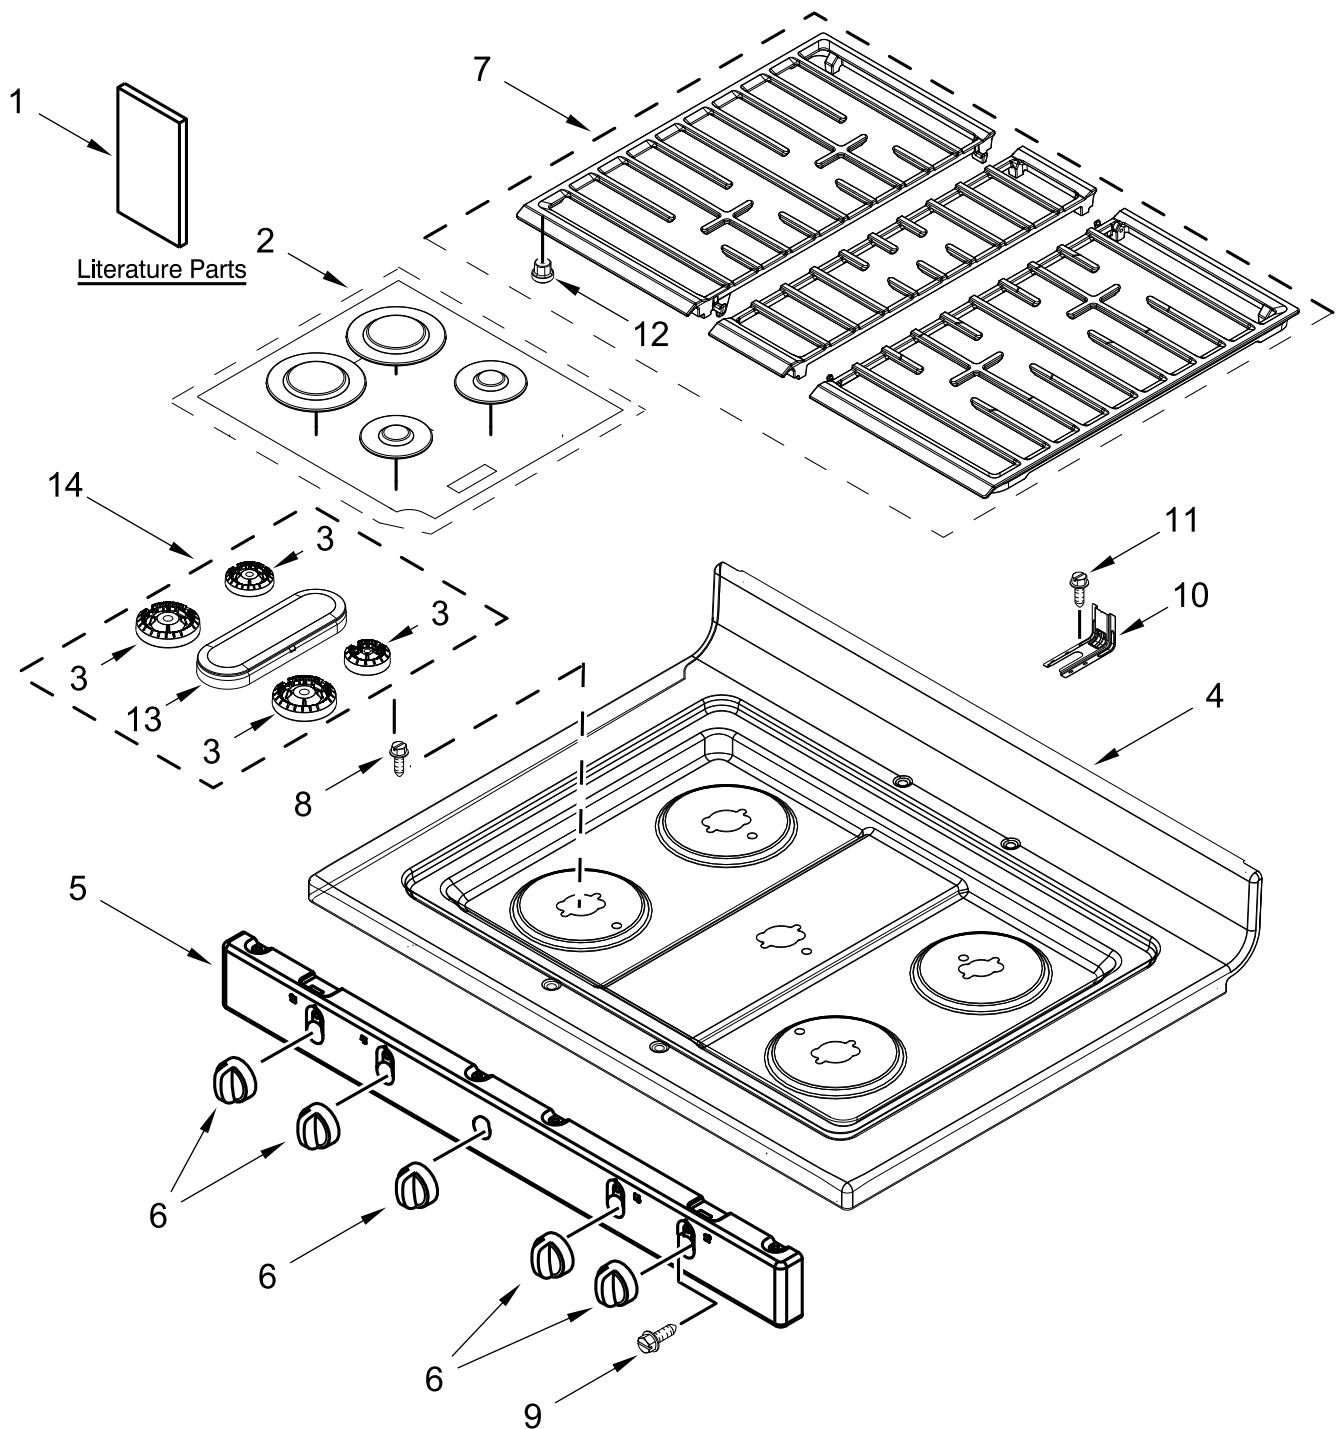

COOKTOP PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	5		Panel, Manifold	14	W11368533	Burner Kit
	W11524748	Quick Start Guide		W11089578	Black			FOLLOWING PARTS NOT ILLUSTRATED
	W11450808	Owners Manual		W11089577	White			
	W11508883	Wiring Diagram	6		Knob, Control		W11457191	Harness, Main
2		Burner Cap Kit		W11510457	Black		3196173	Screw
	W11498499	Black (Set of 4)		W11510458	White		W11450461	Harness, Bake and Broil
3	W11352018	Spreader, Flame (Left Front and Right Front)	7		Grate Kit		3196520	Clip, Wire
	W11352021	Spreader, Flame (Left Rear)		W11090908	Black (Set of 3)		W10334923	Clip, Gas Wiring
	W11352020	Spreader, Flame (Right Rear)	8	W10673618	Screw		313438	Clip, Harness
			9	3196557	Screw		3196896	Clip, Wire
			10	W11379945	Bracket, Anti-Tip			
			11	7101P485-60	Screw, Anti-Tip Kit			
4		Cooktop	12	W10465081	Grate, Bumper			
	W11418086	Black	13	W11367086	Spreader, Flame			
	W11418084	White						


CONTROL PANEL PARTS

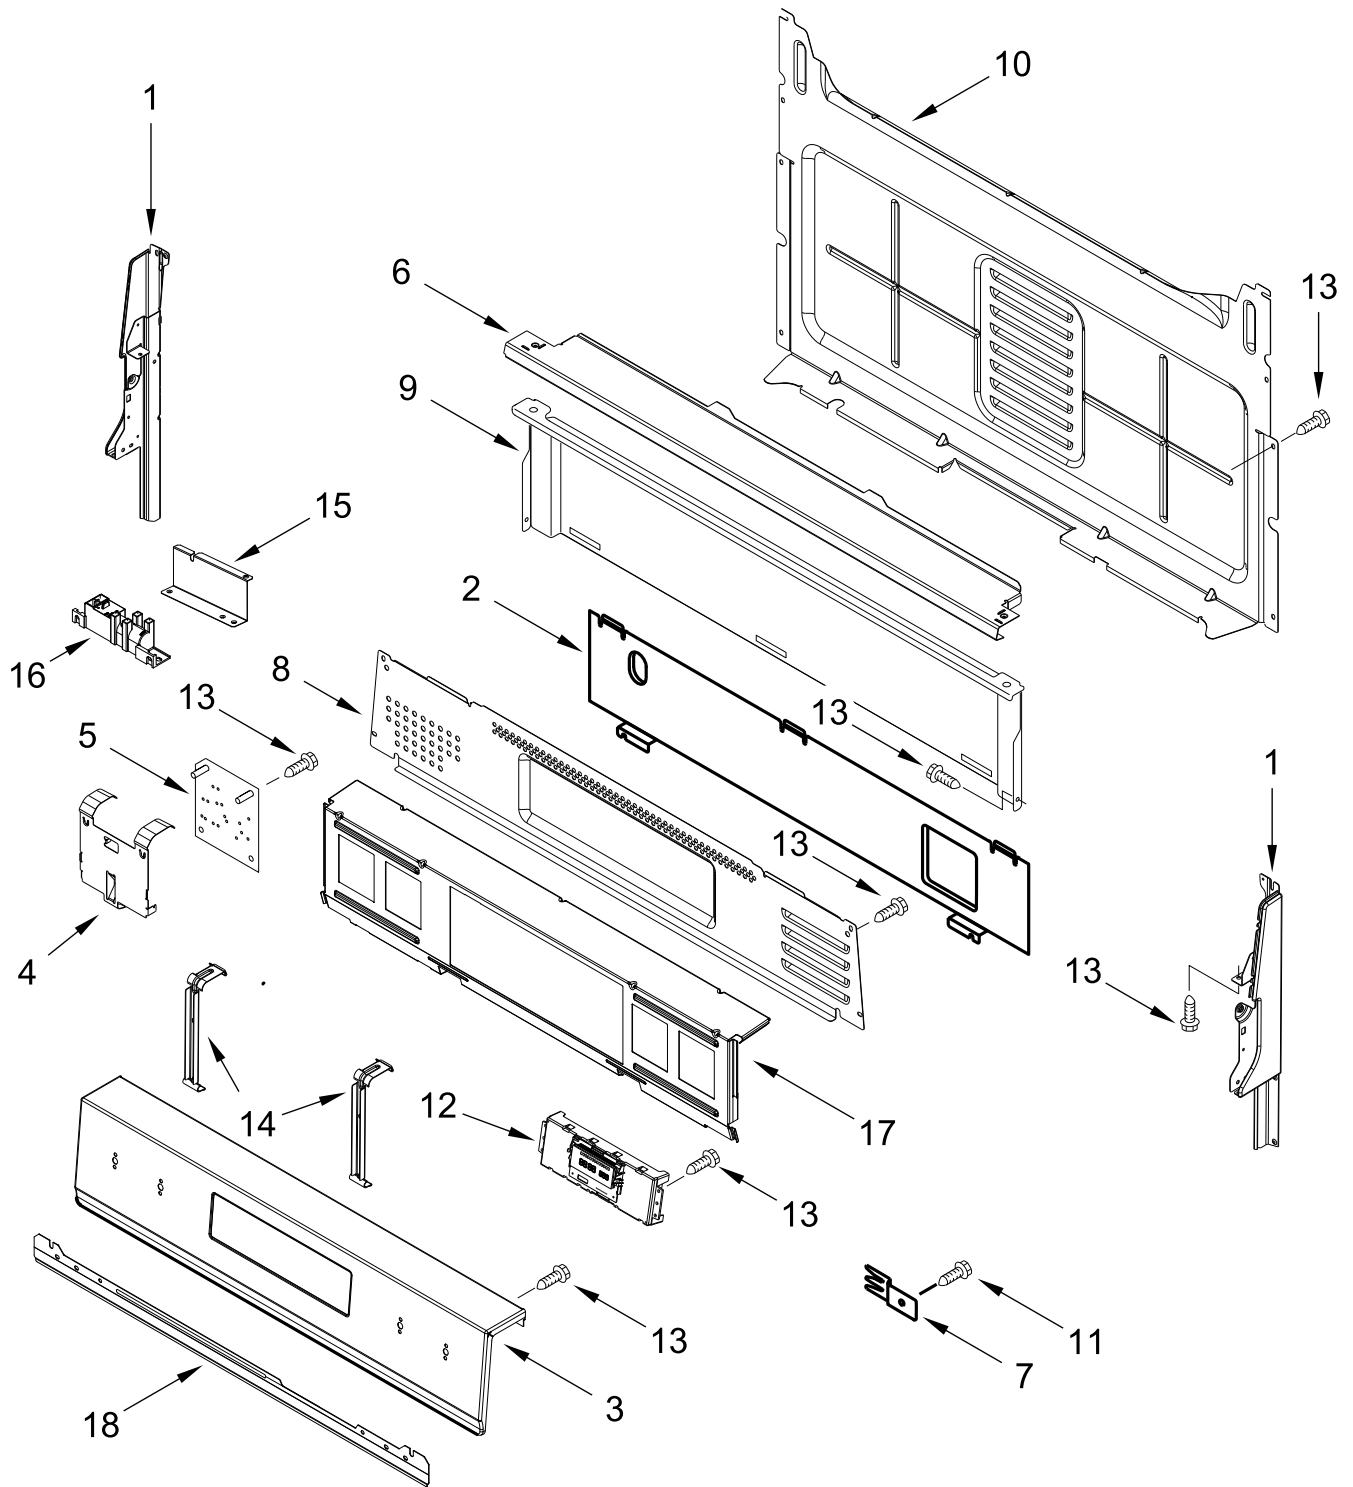

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Endcap	6	W10516123	Bracket, Console Mounting	14	W10856361	Bracket, Control
	W11213290	Black (Left)				15	W10797001	Bracket, Ignitor
	W11213292	Black (Right)	7	8523412	Bracket, Rear Cooktop	16	W11350452	Spark Module
	W11213291	White (Left)	8	W10198745	Cover, Upper	17	W10901802	Panel, Backer
	W11213293	White (Right)	9	W10192841	Shield, Heat	18		Bracket, Eye Brow
2	8053505	Shield, Heat	10	W10184251	Cover, Back		W11443964	Black
3		Panel, Control	11	3196165	Screw		W11443963	White
	W11448331	Black	12		Control, Electronic (LCX)			
	W11448330	White		W11520700	Black			
4	W10762981	Bracket, Mounting	13	3196178	Screw			
5	W10920631	Module, Spark DSI						


MANIFOLD PARTS

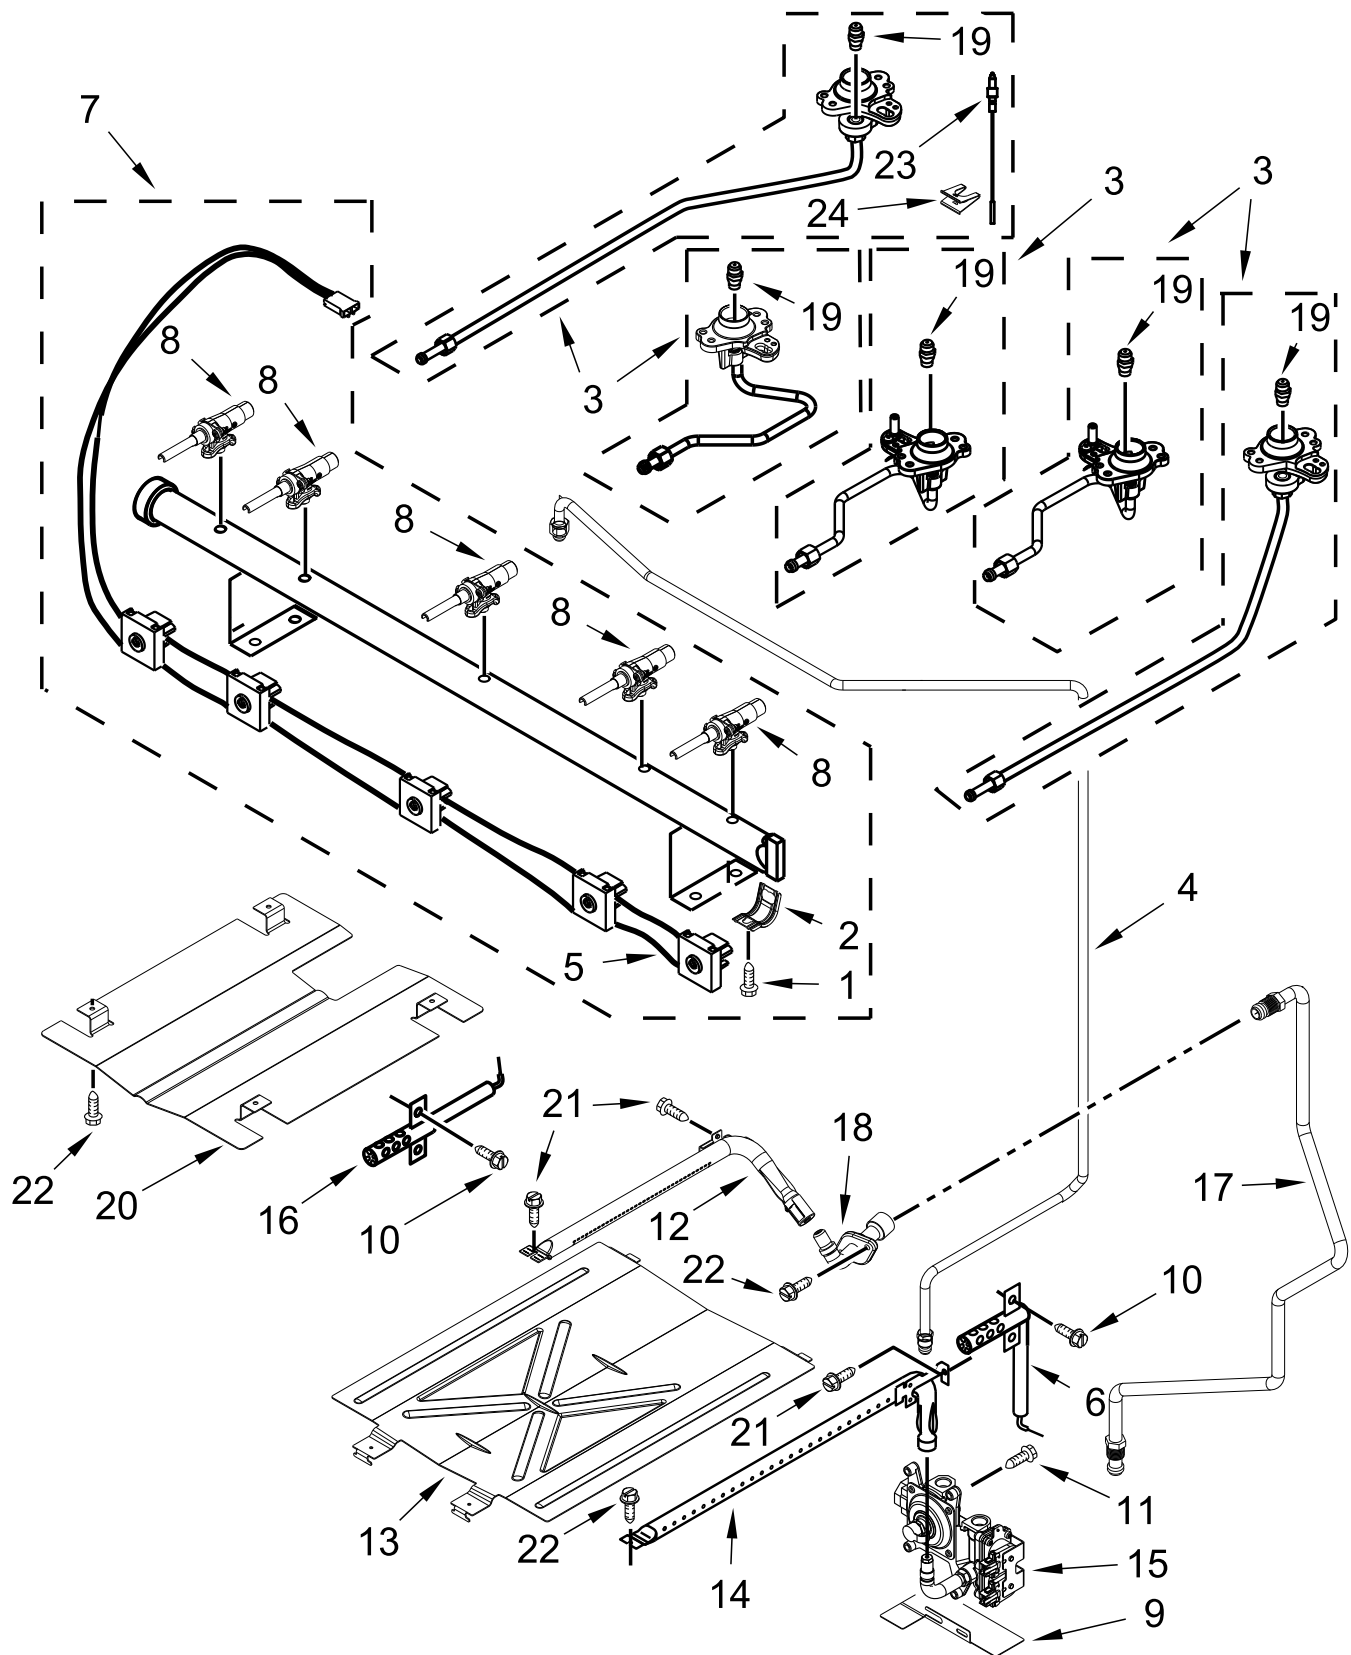

MANIFOLD PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11577792	Screw, Valve	9	W10224921	Bracket, Aegis	24	W10827923	Electrode, Spring
2	W10949105	Bracket, Saddle Valve	10	3196385	Screw			FOLLOWING PARTS NOT ILLUSTRATED
3	W11459257	Orifice Holder Assembly (15K)	11	3400016	Screw			
		(Left Front)	12	8054078	Burner, Broiler	W10566537		LP Bake and Broil Kit
	W11459258	Orifice Holder Assembly (9.5K)	13	W10184491	Spreader, Flame (Oven)	W10400495		Orifice, LP Bake
		(Left Rear)	14	9758078	Burner, Bake	W10465080		Orifice, LP Broil
	W11459260	Orifice Holder Assembly (15K)	15	W11370883	Regulator	W11489399		LP 5 Orifice Conversion Kit
		(Right Front)	16	W10333842	Electrode, Broil	W10182767		Tie, Manifold Wire
	W11459259	Orifice Holder Assembly (5K)	17	W10420040	Tube, Broiler Supply			
		(Right Rear)	18	W11435700	Fitting, Broiler			
	W11459261	Orifice Holder Assembly (8K)	19	W11485872	Orifice (15K) (Left Front and Right Front)			
		(Center)		W11485873	Orifice (9.5K) (Left Rear)			
4	W10215439	Tubing (Manifold to Regulator)		W11485871	Orifice (5K) (Right Rear)			
5	W11537754	Harness, Igniter (Includes Switches)		W11485874	Orifice (8K) (Center)			
6	W11450459	Electrode, Bake	20	W10137062	Spreader, Flame (Broiler)			
7	W11510000	Manifold Assembly	21	3196265	Screw			
8	W11509685	Valve, Gas (Left Front and Right Front)	22	W10362924	Screw			
			23	W11428831	Electrode (Left Front and Left Rear)			
	W11509686	Valve, Gas (Left Rear and Center)		W11428858	Electrode (Right Front, Right Rear, and Center)			
	W11509687	Valve, Gas (Right Rear)						


CHASSIS PARTS

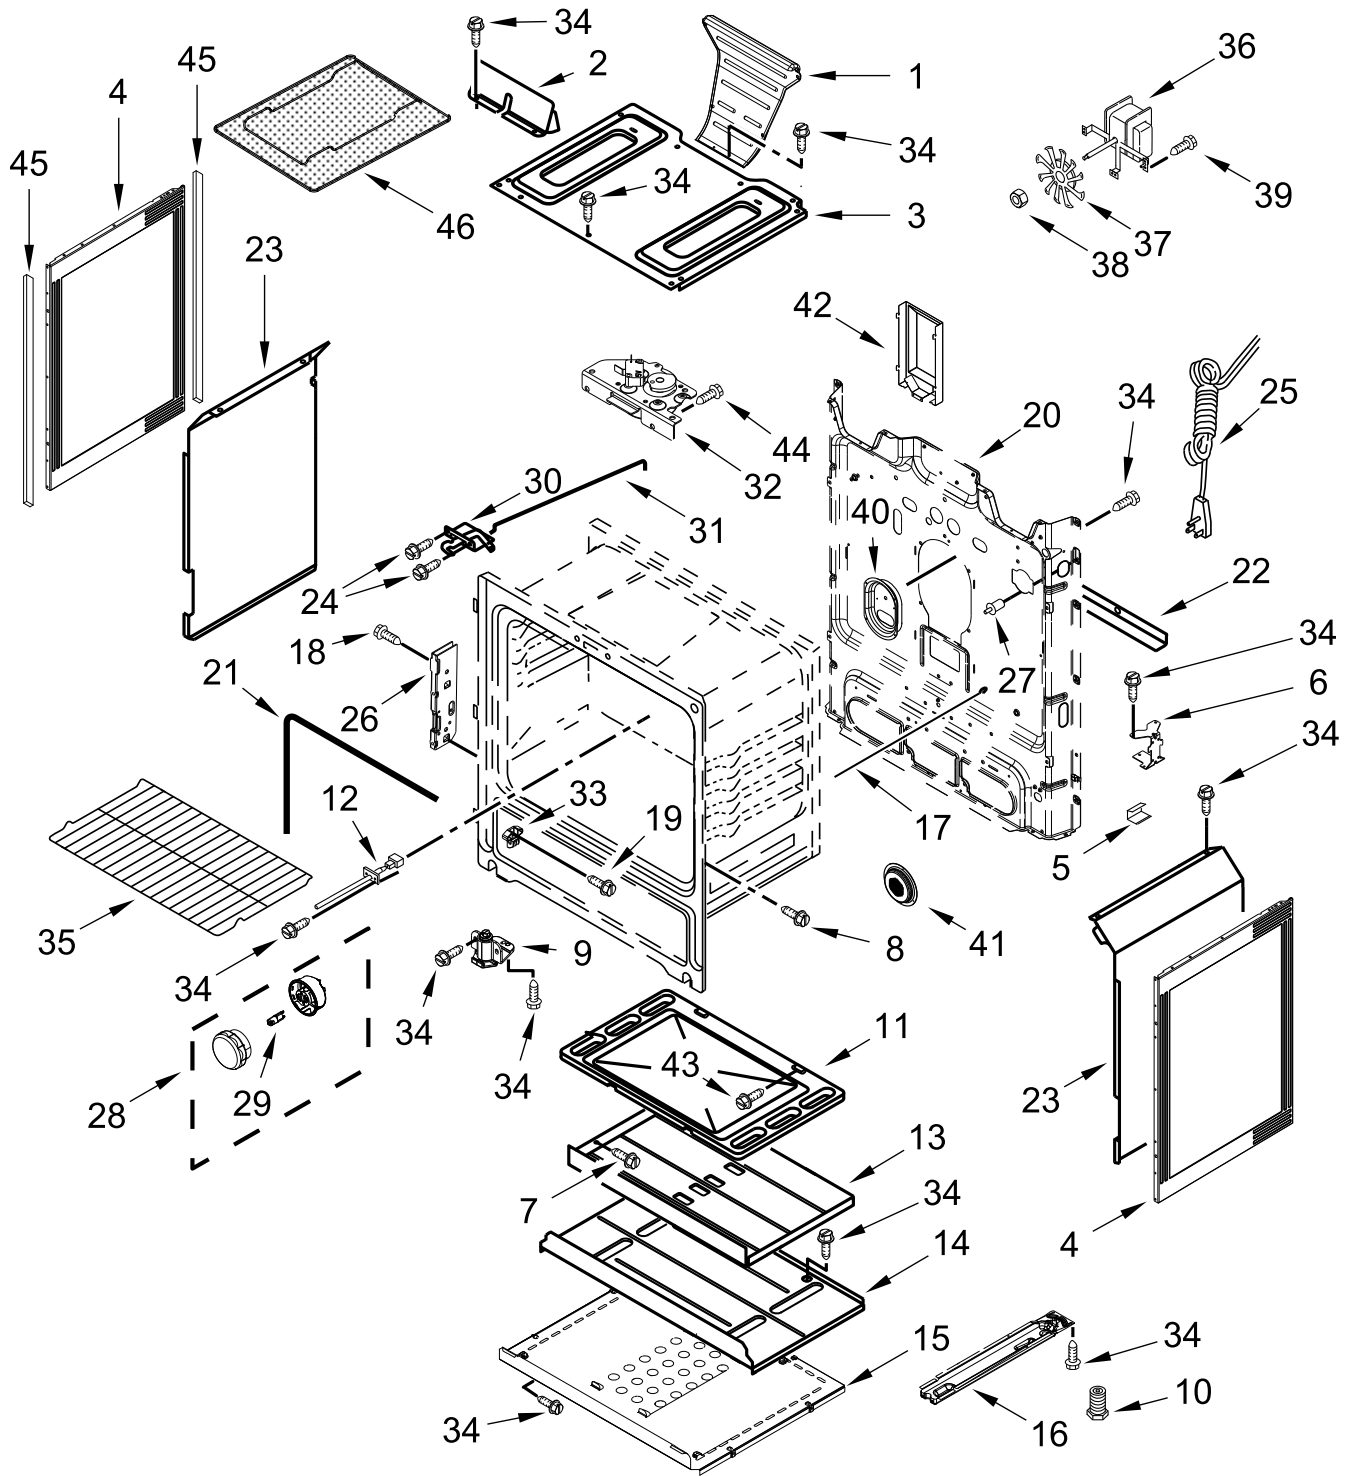

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11457094	Box, Flue	17	9757239	Rod, Door Switch	33	W10674705	Glide, Drawer Front
2	8272747	Shield, Flue	18	W10031780	Screw	34	3196178	Screw
3	W11379351	Box-Burner, Gas Sealed	19	3400080	Screw	35	W11173792	Rack, Oven
4		Panel, Side	20		Back, Main (Not Serviced)	36	W11403615	Fan Motor, Convection
	W10162245	Black	21	W11491751	Seal, Door	37	W11425715	Blade, Fan
	W10575396	White	22	W10435470	Brace, Main Back	38	W11433702	Nut, Acorn (LH)
5	W10137382	Clip, Panel	23	W11379353	Retainer, Insulation (Left)	39	4449809	Screw
6	8523249	Bracket, Manifold		W11379943	Retainer, Insulation (Right)	40	W10134126	Bracket, Fan
7	W10362924	Screw	24	3196560	Screw	41	W10134124	Cover, Conv Fan
8	3196560	Screw	25	W10910642	Cord, Power	42	W10158780	Cover, Rear Fan
9	W10341186	Front Foot Assembly	26	W10289077	Receiver, Hinge	43	W10379120	Screw
10	W10058460	Foot, Leveling	27	W11511828	Switch, Door	44	3196169	Screw
11	3195097	Bottom, Oven	28	W11634772	Light Assembly	45	W10919715	Gasket
12	W10586204	Sensor	29	W10571723	Bulb, Halogen 40 Watts	46	W11661815	Basket, Airfry
13	8053967	Baffle, Burner Oven						FOLLOWING PARTS NOT ILLUSTRATED
14	8053969	Shield, Heat	30	9761013	Front Door Latch Assembly		8524099	Insulation, Wrap
15	W11640074	Shield, Lower				W10180437		Insulation, Back
16	W10390008	Base Rail Assembly (Left)	31	W10078370	Rod, Push Latch			
	W10390007	Base Rail Assembly (Right)	32	W10107820	Rear Door Latch Assembly			


DOOR PARTS

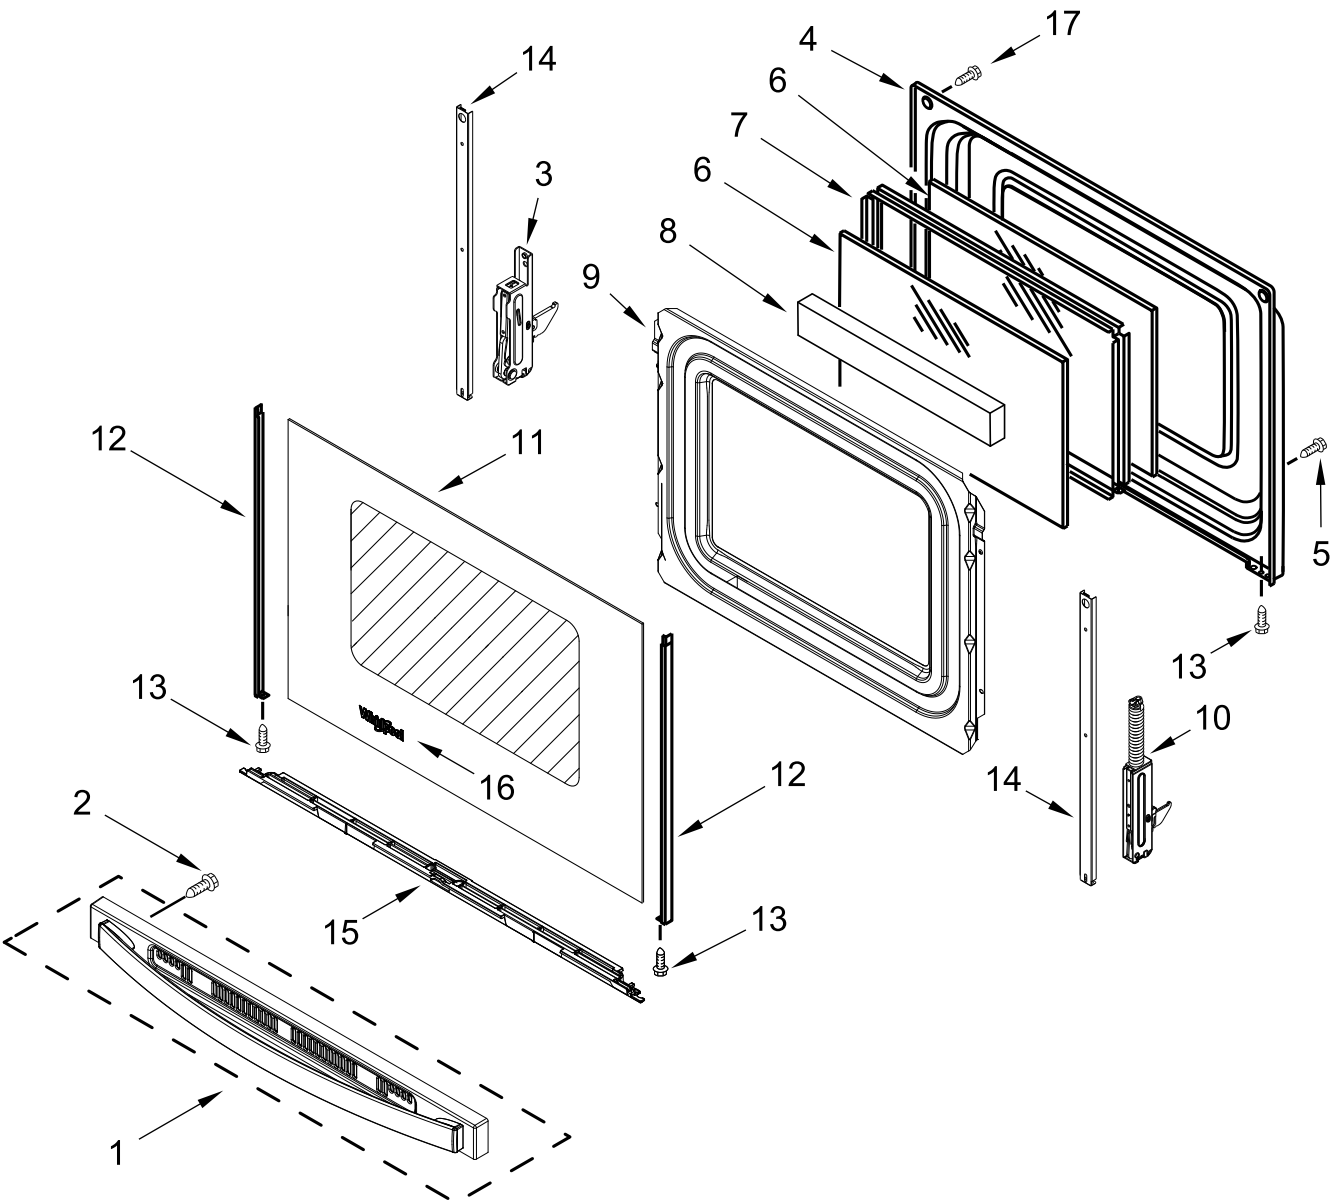

DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Handle and Vent Assembly	10	W10299226	Hinge, Active	15		Trim, Bottom
	W11242949	Black	11		Glass, Outer Door		W11444043	Black
	W11242947	White		W11687920	Black		W11444042	White
2	W10480830	Screw		W10409945	White	16	W10884775	Badge
3	W10299227	Hinge, Door (Passive)	12		Trim, Door	17	W10200660	Screw
4	9761344	Liner, Door		W10746436	Black (Left)			
5	W10031790	Screw		W10746435	Black (Right)			
6	W11044424	Glass, Inner		8523172	White (Left)			
7	W10316950	Frame, Glass		8523166	White (Right)			
8	W10278991	Insulation, Door Strip	13	W10327235	Screw			
9	W11380222	Retainer, Insulation	14	W11379944	Strap, Door			

DRAWER PARTS

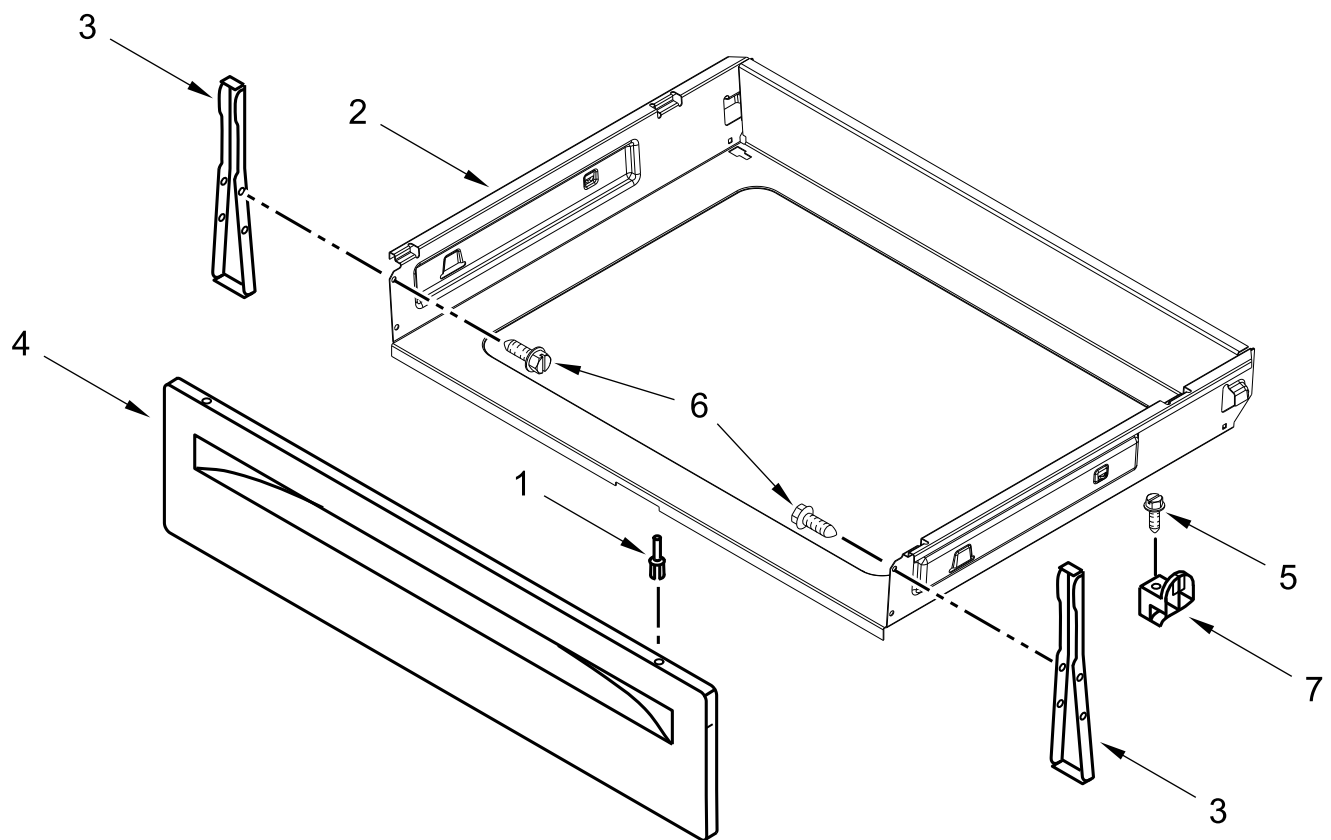

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Rivet, Push	3	W10462911	Bracket, Mounting	5	3196178	Screw
	3196813	Black	4		Panel, Drawer Front	6	3196169	Screw
	3196814	Rivet, Plastic (WHITE)		W11123976	Black	7	W10674708	Glide, Drawer Rear
2	W10688022	Drawer, Storage		W11123977	White			

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		FOLLOWING PARTS NOT ILLUSTRATED
		REFINISHING MATERIAL
	242756	Oven Liner Touch Up Paint
		INSULATION
	261514	Insulation (1-1/2 x 24 x 120 in)
	240132	Insulation (2-1/2 x 22 x 120 in)
		PAINT, TOUCH-UP (1/2oz.)
	4392899	Biscuit and Bisque
	72017	White
	511873	White Porcelain (2 oz.)
		PAINT, PRESSURIZED SPRAY (12 oz.)
	285006	Black
	350930	White
		PAINT, BULK (1 qt.)
	799344	White (Uncut)
		ACCESSORY PARTS
	30-48KITRC	Gas Range Connector Kit
	4396096RB	Griddle
	4396923	Broiler Pan and Grid