




French Door Bottom Mount Refrigerator

MODELS:

WRFA60SMHN00 (Sunset Bronze)

WRFA60SMHZ00 (Stainless Steel)


CABINET PARTS

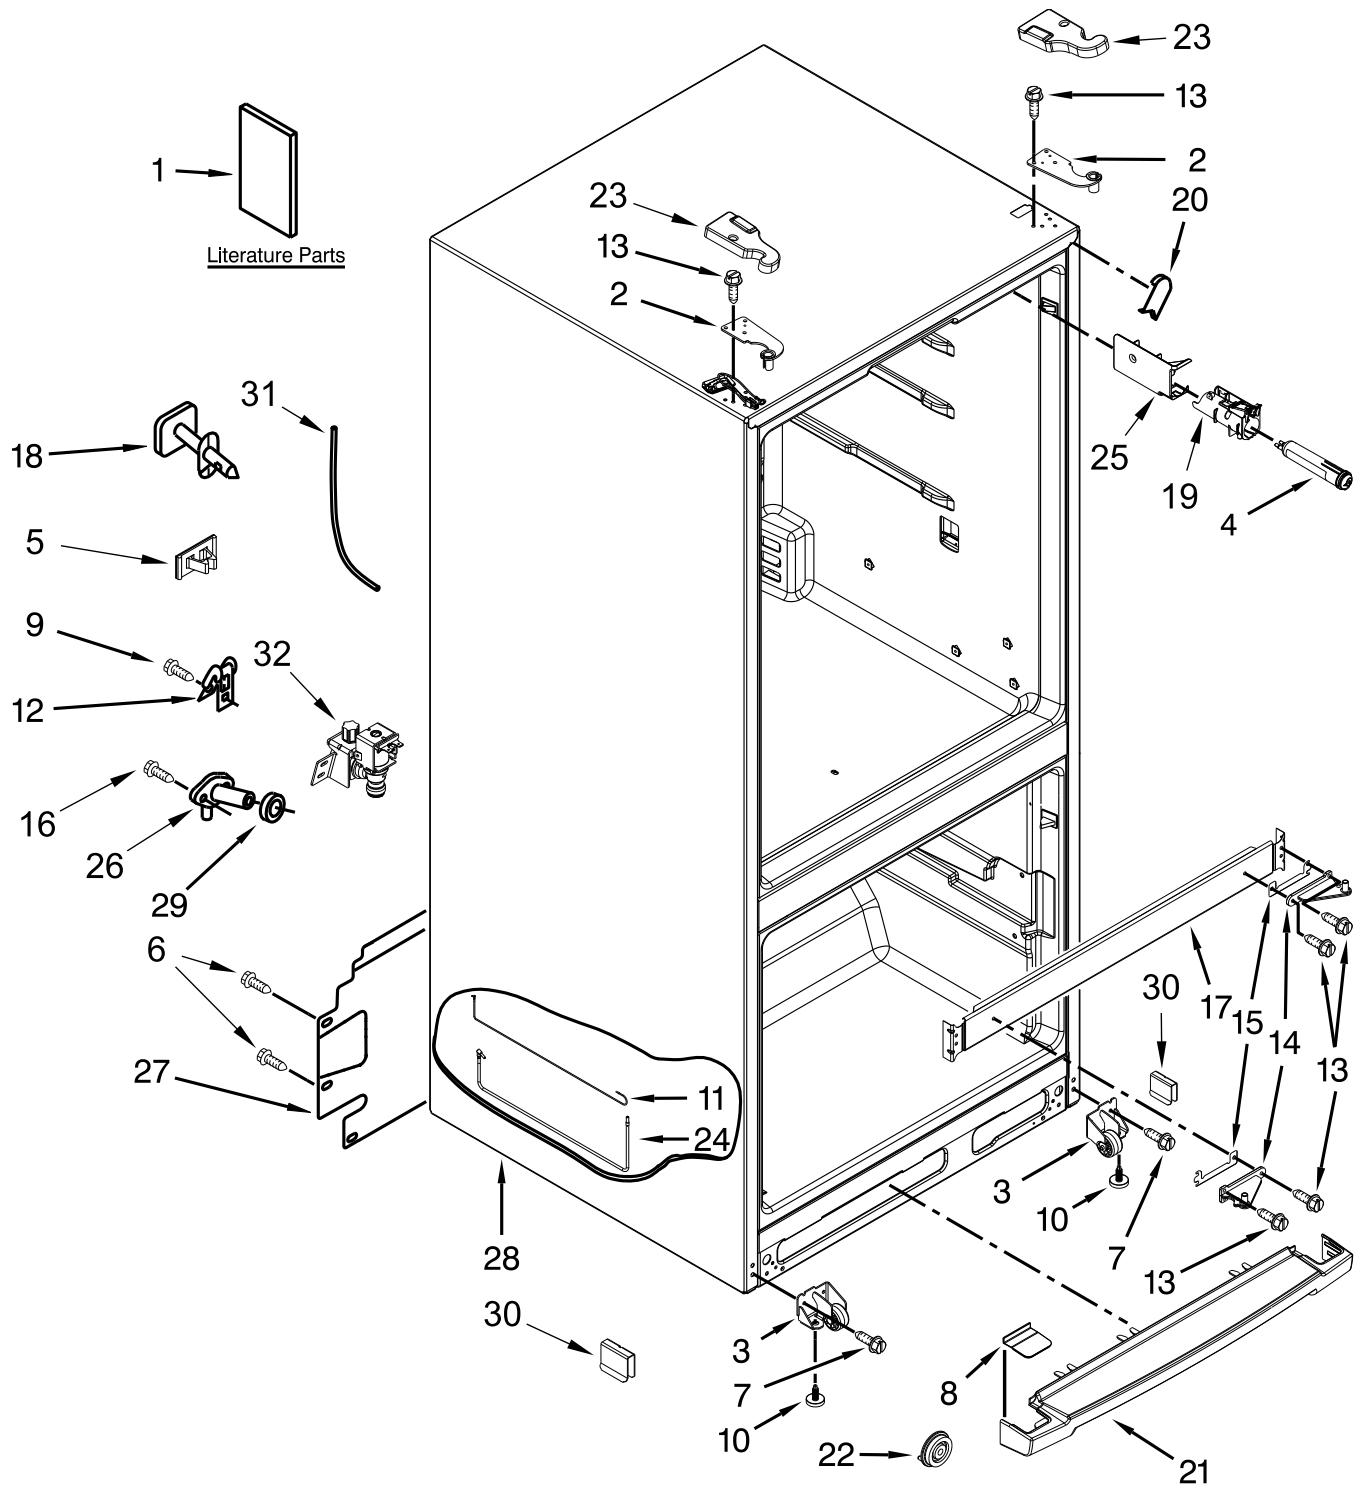

CABINET PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	10	W10141622	Brake, Roller	21		Grille
	W10641015	Tech Sheet	11	W10449880	Tube, Filter Inlet		W10353935	Grey
	W10360467	Use and Care Guide	12	549193	Clamp, Power Cord	22	W10331226	Drum, Toe Grille
	2225623	Icemaker Service Sheet	13	489497	Screw	23		Cover, Hinge
2		Hinge, Top	14		Hinge, Center		W10465768	Left Hand (Grey)
	W10546298	Left Hand		W10770878	Left Hand		W10465767	Right Hand (Grey)
	W10546299	Right Hand		W10770877	Right Hand	24	W10449611	Tube, Filter Outlet
3		Roller, Front	15	W10450363	Shim, Center Hinge	25	W10306392	Cover, Water Filter
	W10359256	Left Hand	16	W10001260	Screw	26	W10601149	Fitting, Water Tube
	W10359255	Right Hand	17		Rail, Center (Not Serviced)	27	W10636716	Cover, Unit
4	W10569758	Filter, Water	18		Fitting, Water Tube (Not Serviced)	28		Cabinet (Not a Serviceable Part)
5	W10352217	Clip, Tube	19	W10346257	Housing, Water Filter	29	1106508	Gasket, Seal
6	2262176	Screw	20		Corner Filler	30	2174706	Clip, Roller
7	489497	Screw		W10283961	Grey	31	W10496649	Tube, Water
8		Cover, Toe Grille				32	W10498995	Valve, Inlet
	W10353932	Grey						
9	489442	Screw						

LINER PARTS

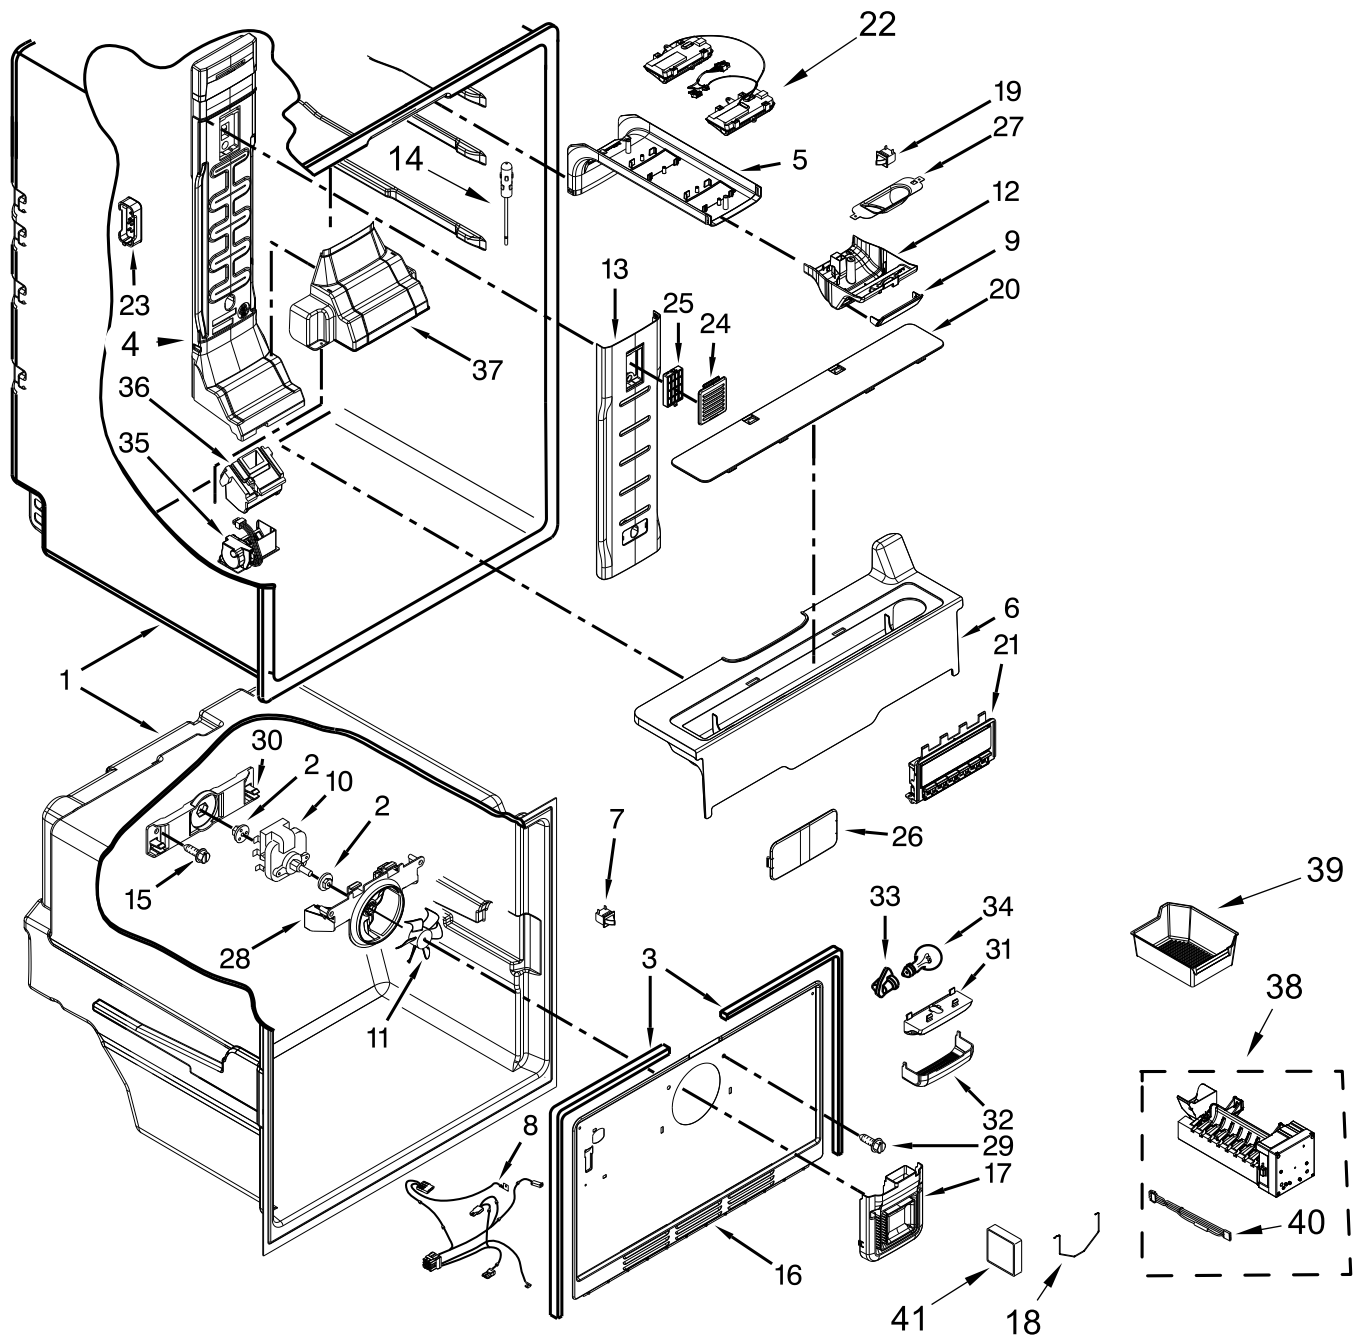


LINER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Liner (Not A Serviceable Part)
2	2197380	Grommet
3	W10468762	Gasket, Evaporator Cover
4	W10448448	Assembly, Multiflow
5	W10469878	Housing, Light
6	W10798439	Container, Water Reservoir
7	12466105	Switch, Light
8	W10487766	Assembly, Freezer Wire
9	W10360550	Cover, Control Housing
10	W10464673	Motor, Fan
11	2200509	Blade, Fan
12	W10435577	Housing, Control
13	W10356895	Tower, Multiflow Air
14	W10384183	Thermistor

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
15	488208	Screw
16	W10300900	Cover, Evaporator
17	W10317182	Tower, Freezer
18	W10474785	Arm, Shut Off
19	1118894	Switch, Rocker Arm
20	W10413160	Cover, Water Reservoir
21	W11027234	UI Assembly
22	W10536361	Assembly, LED Light
23	W10425252	Cover, Thermistor
24	W10330850	Grille, Air Filter Bottom
25	W10315189	Filter, Air
26	W10336009	Cup, Screw
27	W10314195	Shield, Heat
28	W10321162	Bracket, Fan Motor
29	489478	Screw
30	2254454	Bracket, Evaporator Fan Rear

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
31	W10313917	Housing, Freezer Lighting
32	W10313918	Lens, Light
33	W10440814	Socket, Light
34	W10809513	Bulb, Light
35	W10745484	Damper, Electronic Control
36	W10474774	Cover, Damper Housing
37	W10314204	Housing, Damper
38	W10632400	Assembly, Icemaker
39	W10378263	Pan, Ice
40	W10309400	Assembly, Ice Maker Wire
41	W10289690	Cover, Icemaker


REFRIGERATOR DOOR PARTS

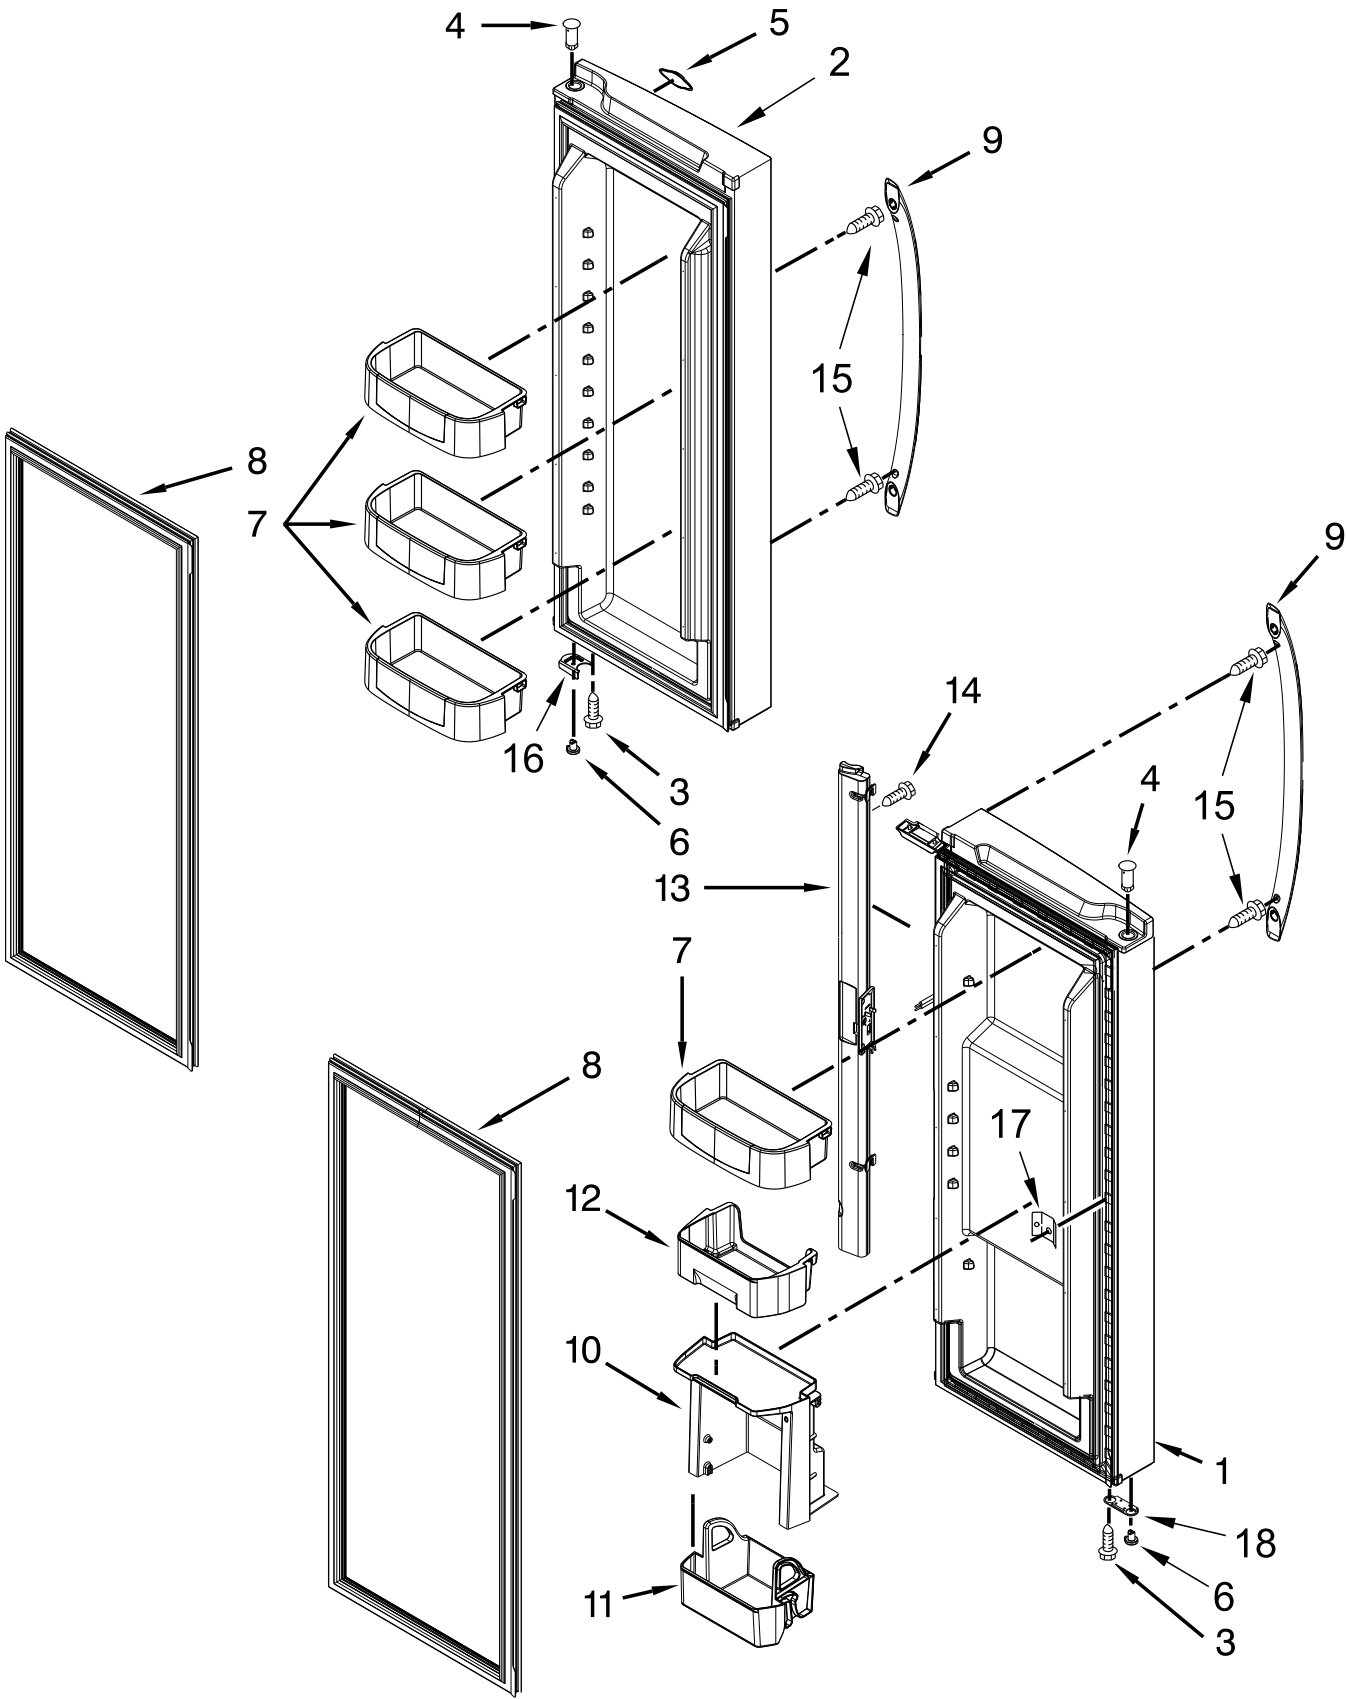

REFRIGERATOR DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Door, Left (Includes #8)	5	W10884775	Nameplate	13		Flipper Mullion Assembly
	W11040559	Sunset Bronze	6	W10470155	Closure, Door		W10624450	Grey
	W10858415	Stainless	7	W10308869	Bin, Medium	14	12990302	Screw
2		Door, Right (Includes #8)	8		Gasket	15	W10170540	Screw
	W11040554	Sunset Bronze		W10413468	Grey	16	W10397055	Bracket, Door Stop
	W10858417	Stainless	9		Handle Assembly	17	939101	Screw Anchor
3	489276	Screw		W10874780	Stainless	18	2189202	Bracket, Door Stop
4	W10366270	Thimble	10	W10317224	Compartment, Utility			
			11	W10462299	Caddy, Condiment			
			12	W10326335	Bin, Shallow			


FREEZER DOOR PARTS

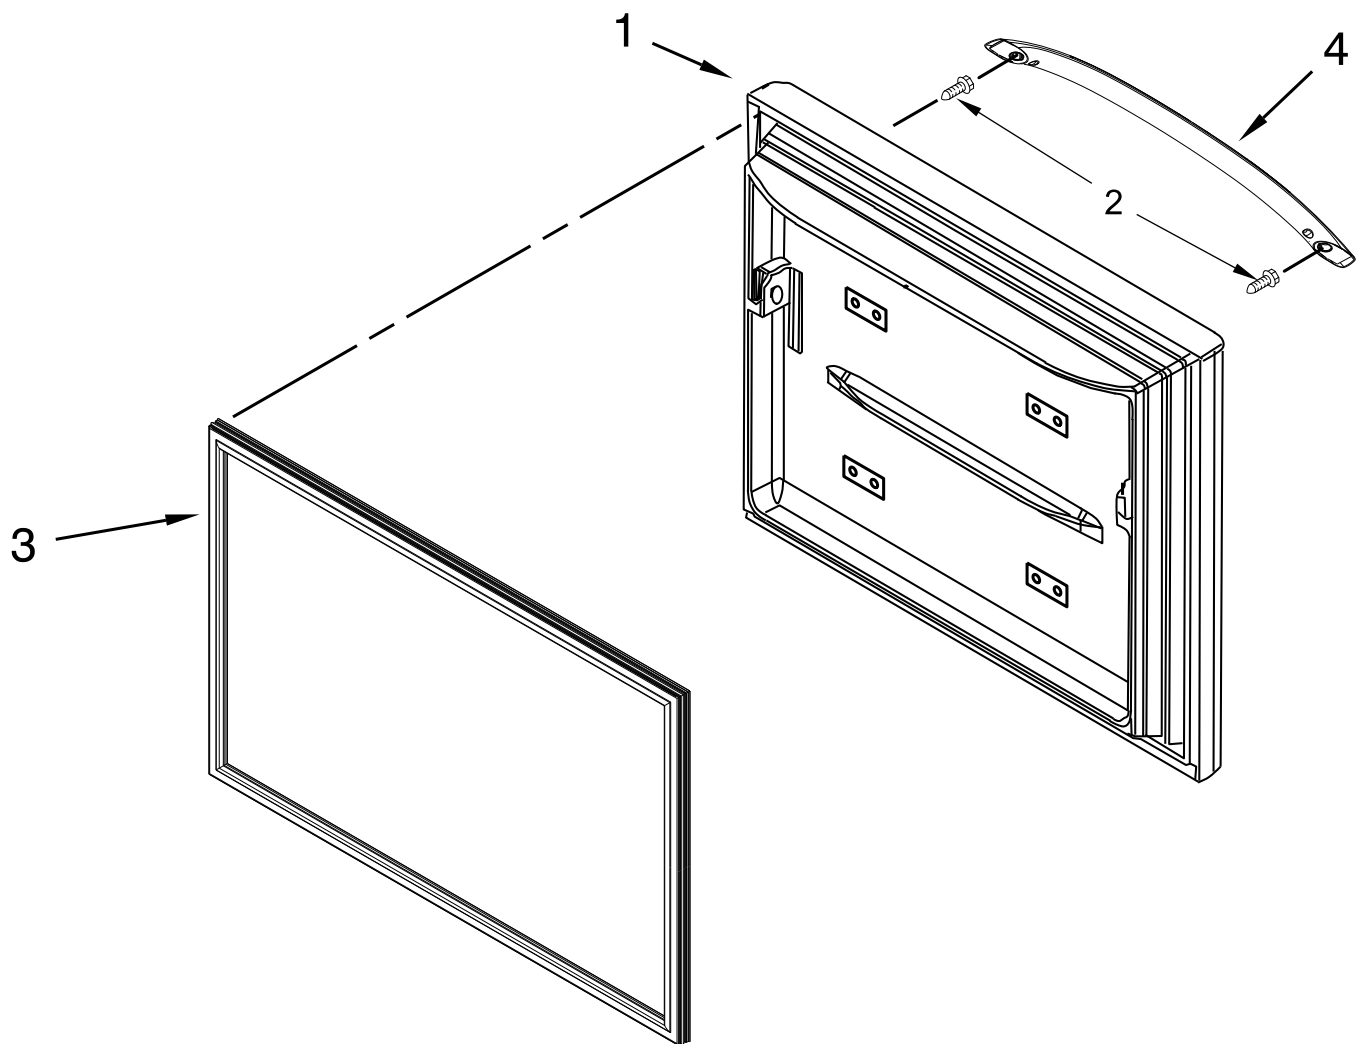

FREEZER DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Freezer Door (Includes Items 2 & 3)	3		Gasket
	W11040557	Sunset Bronze	W10465762		Grey
	W10858419	Stainless	4		Handle Assembly
2	W10170540	Screw	W10874781		Stainless

UNIT PARTS

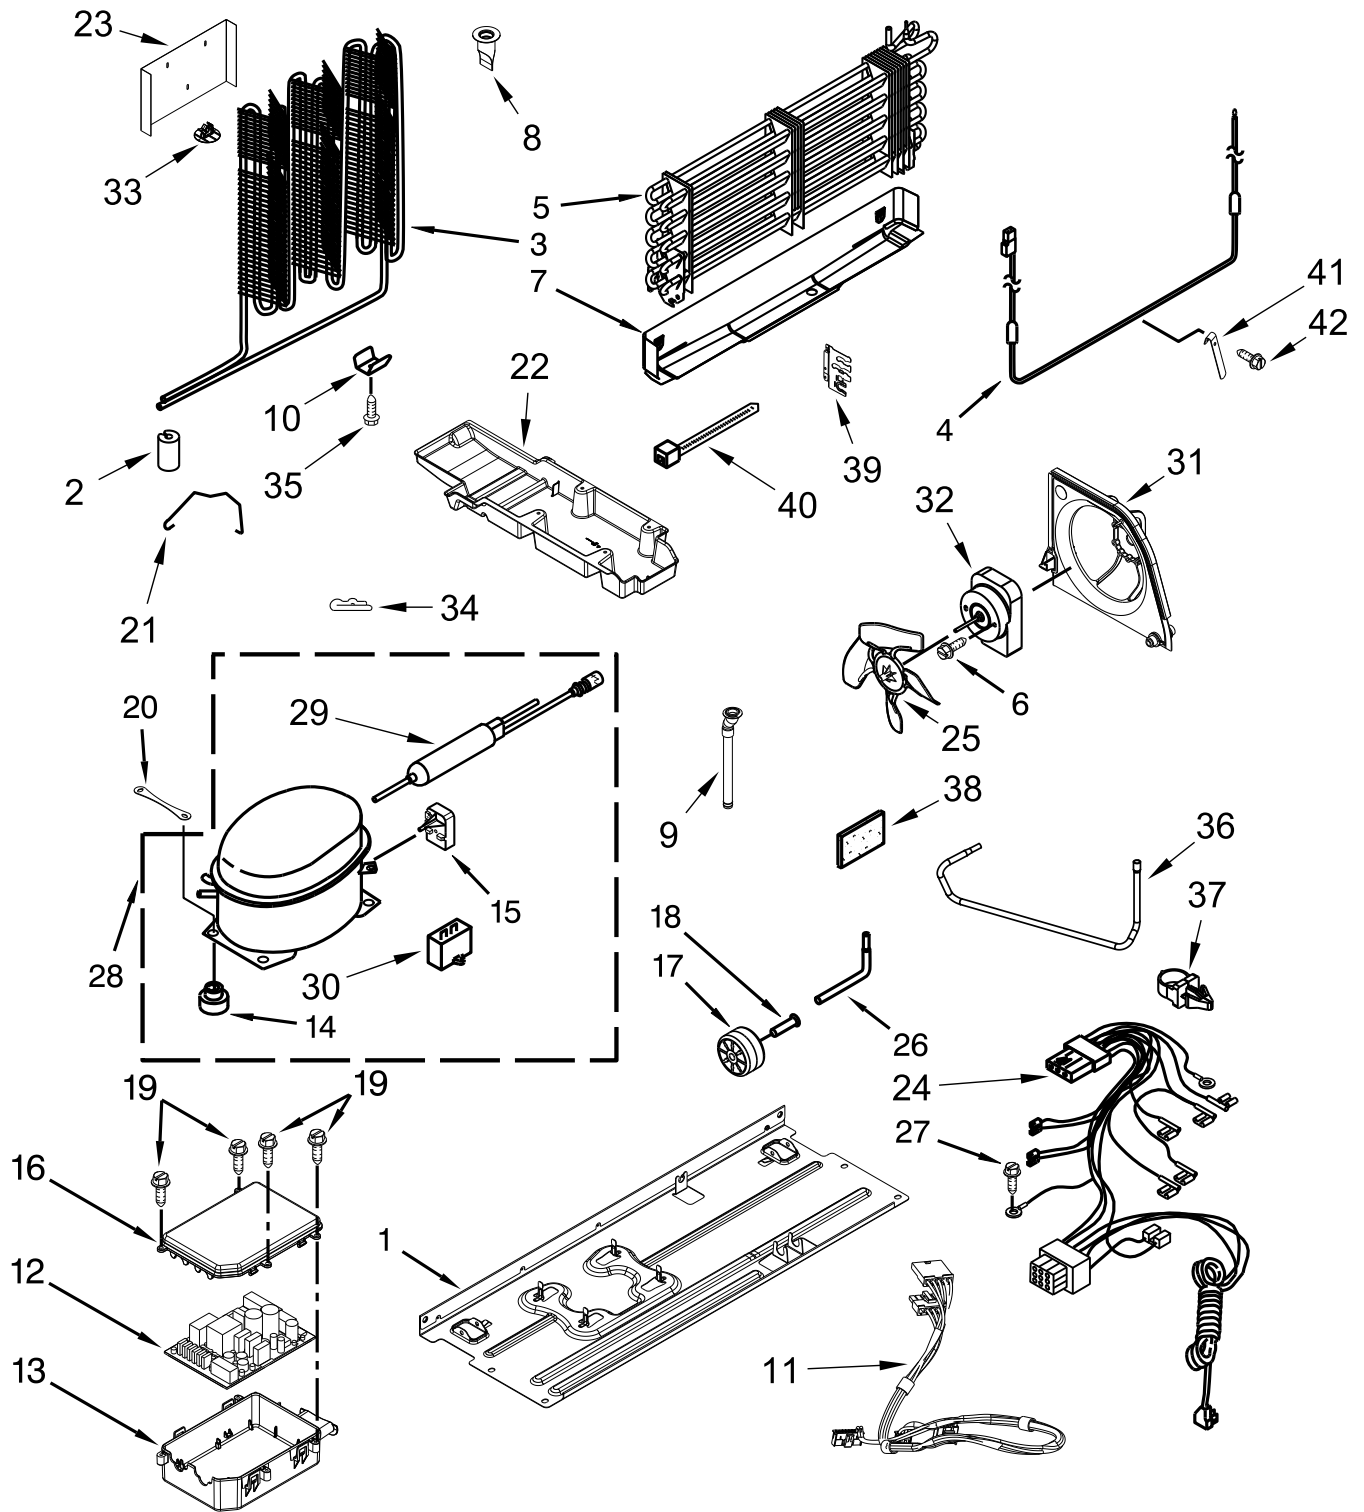


UNIT PARTS


<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10300116	Baseplate	20	W10236396	Strap, Compressor	40	2263990	Tie, Wire
2	2319835	Grommet, Condenser	21	W10174384	Strap, Bale	41	2258429	Heat Probe
3	W10342567	Condenser	22	W10802027	Tray, Drain	42	489478	Screw
4	W10436849	Heater, Defrost	23	W10349514	Cover, Condenser Bottom			FOLLOWING PARTS NOT ILLUSTRATED
5	W10321158	Assembly, Evaporator	24	W10637509	Assembly, Unit Wire		978025	Valve, Access (1/4")
6	8533961	Screw	25	W10817071	Blade, Fan		978026	Valve, Access (5/16")
7	W10314195	Shield, Heat	26	VS20001	Tube, Process		978027	Valve, Access (3/8")
8	W10519112	Valve, Drain	27	488500	Screw		978029	Valve, Access (5/8")
9	W10314199	Tube, Drain	28	W10445423	Compressor		978030	Valve, Access (3/4")
10	W10248621	Clip, Condenser	29	W10669573	Drier		876764	Valve, Access (3/16")
11	W10424230	Assembly, Low Voltage Wire	30	W10590083	Capacitor			REFRIGERANT CHARGE
12	W10892333	Control, Electronic	31	2315541	Bracket, Condenser Fan			4.25 oz (R-134A)
13	2323186	Box, Control	32	W10530280	Motor, Condenser			
14	10835903SP	Grommet, Compressor	33	W10815861	Clip, Bottom Cover			
15	W10448874	Device, Start	34	1114718	Clip, Wiring			
16	W10313215	Cover, Electronic Control	35	8281232	Screw			
17	W10475495	Roller	36	W10510988	Tube, Suction			
18	2179826	Axle, Rivet	37	2219077	Clip, Harness			
19	8533859	Screw	38	2215468	Insulation, Sound			
			39	W10314197	Bracket, Evaporator			

SHELF PARTS

REFRIGERATOR

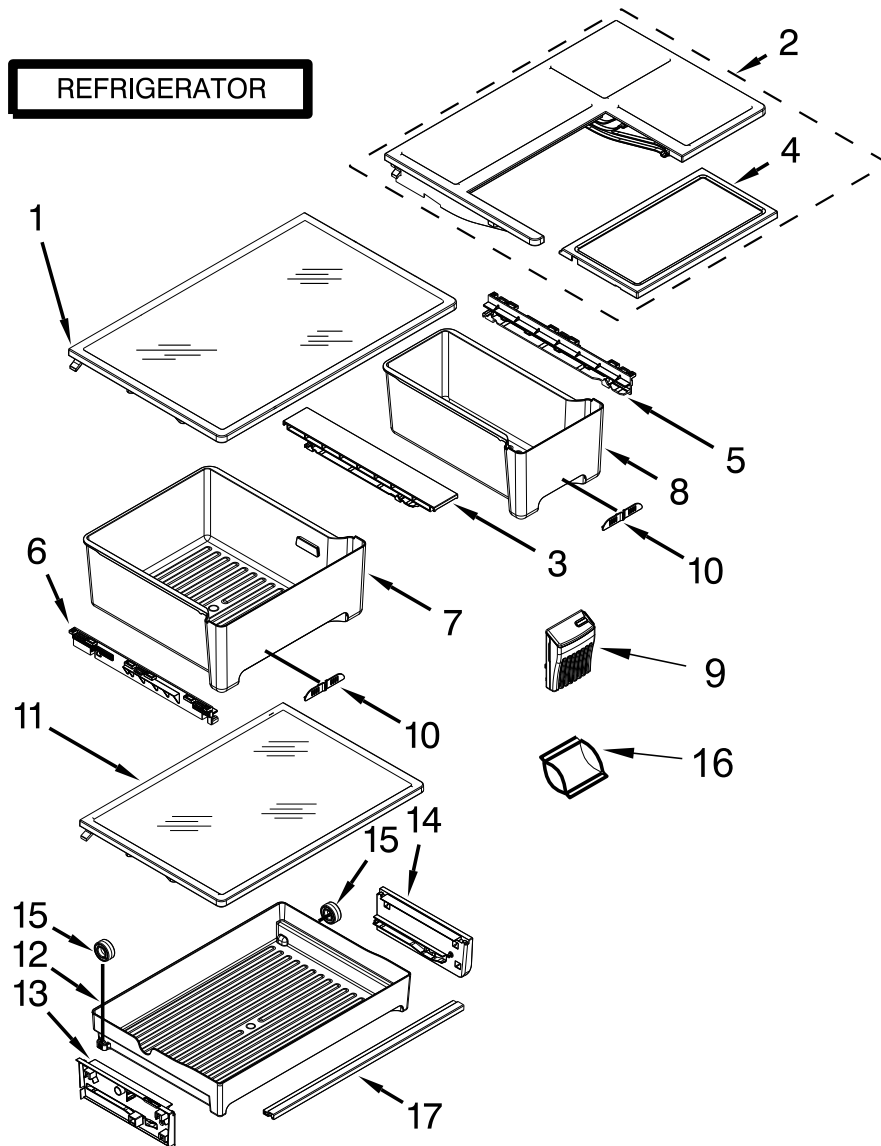

FREEZER

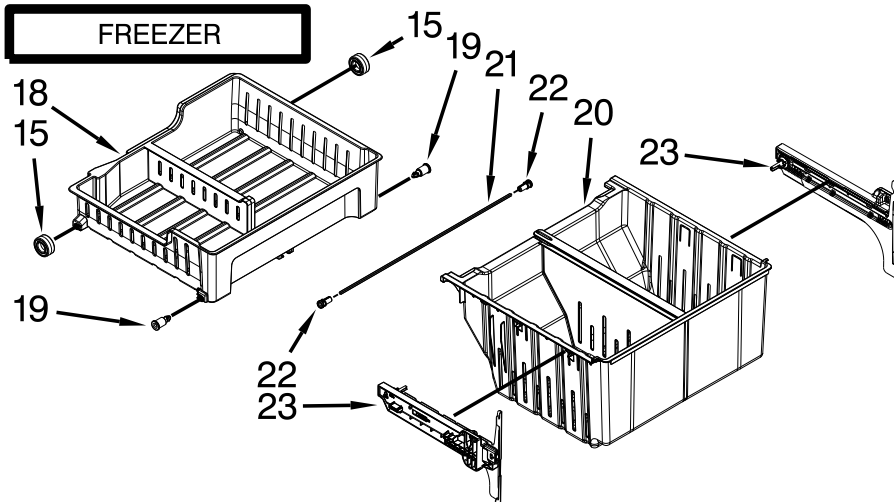

SHELF PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10486290	Assembly, Full Shelf (30")	10	W10356844	Control, Humidity	18	W10554330	Bin, Upper Freezer
2	W10502933	Assembly, 2/3 Flip Shelf	11	W10513681	Glass, Pantry Cover	19	W10628712	Axle, Roller
3	W10468557	Rail, Track (Center)	12	W10397907	Assembly, Pantry Deli Pan	20	W10317289	Basket, Lower Freezer
4	W10313893	Shelf, 2/3 Flip	13	W10397908	Rail, Pantry (Left Hand)	21	W10802342	Shaft, Rack
5	W10468556	Rail, Track (Right Hand)	14	W10414530	Rail, Pantry (Right Hand)	22	W10277361	Collar, Gear
6	W10468555	Rail, Track (Left Hand)	15	W10628713	Roller, Pan	23		Adaptor, Freezer
7	W10370327	Pan, Crisper (16")	16	W10346771	Filter, Produce Preserver		W10397636	Left Hand
8	W10317184	Pan, Crisper (8")	17	W10507470	Assembly, Pantry Cover Support		W10397635	Right Hand
9	W10408748	Holder, Produce Filter						

OPTIONAL PARTS

FOLLOWING PARTS NOT ILLUSTRATED

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	W10413645A	Filter, Water (1/4 turn)
	978941	Insulation, Fiberglass (63 1/2" x 35 1/2" x 2 5/8")
	212643	Sealer, Gum (4 Feet)
	479502	Tape, Vinyl (3/4 x 108")
	876305	Insulation Kit (14 Pieces, 3" x 24" x 48")
	876370	Insulation (2 Pieces, 3" x 24" x 48")
	876029	Kit, Foam Slab (30" x 32 1/2" x 1 1/2")
	505587	Sealer, Mastic (1 Qt)
	511873	White Porcelain (2 oz.)
	542638	Grease, Silicone (1/2 Oz.)
	542639	Cement, Alumilastic (1 1/4 Oz.)
	606755	Bag
	503695	Cork, Sealer
	8003RP	Kit, Water Inlet

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	350942	White Primer
	350939	Enamel, Black
	350930	White
	4392901	Biscuit/Bisque

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	72032	Black
	4392899	Biscuit/Bisque

PAINT, BULK (1 QT.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)
	4392900	Biscuit/Bisque

TORX SCREW WRENCH

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	1117510	Torx Key