




GAS RANGE
Fingerprint Resistant

MODELS:

MGR7700LZ4 (Stainless)


COOKTOP PARTS

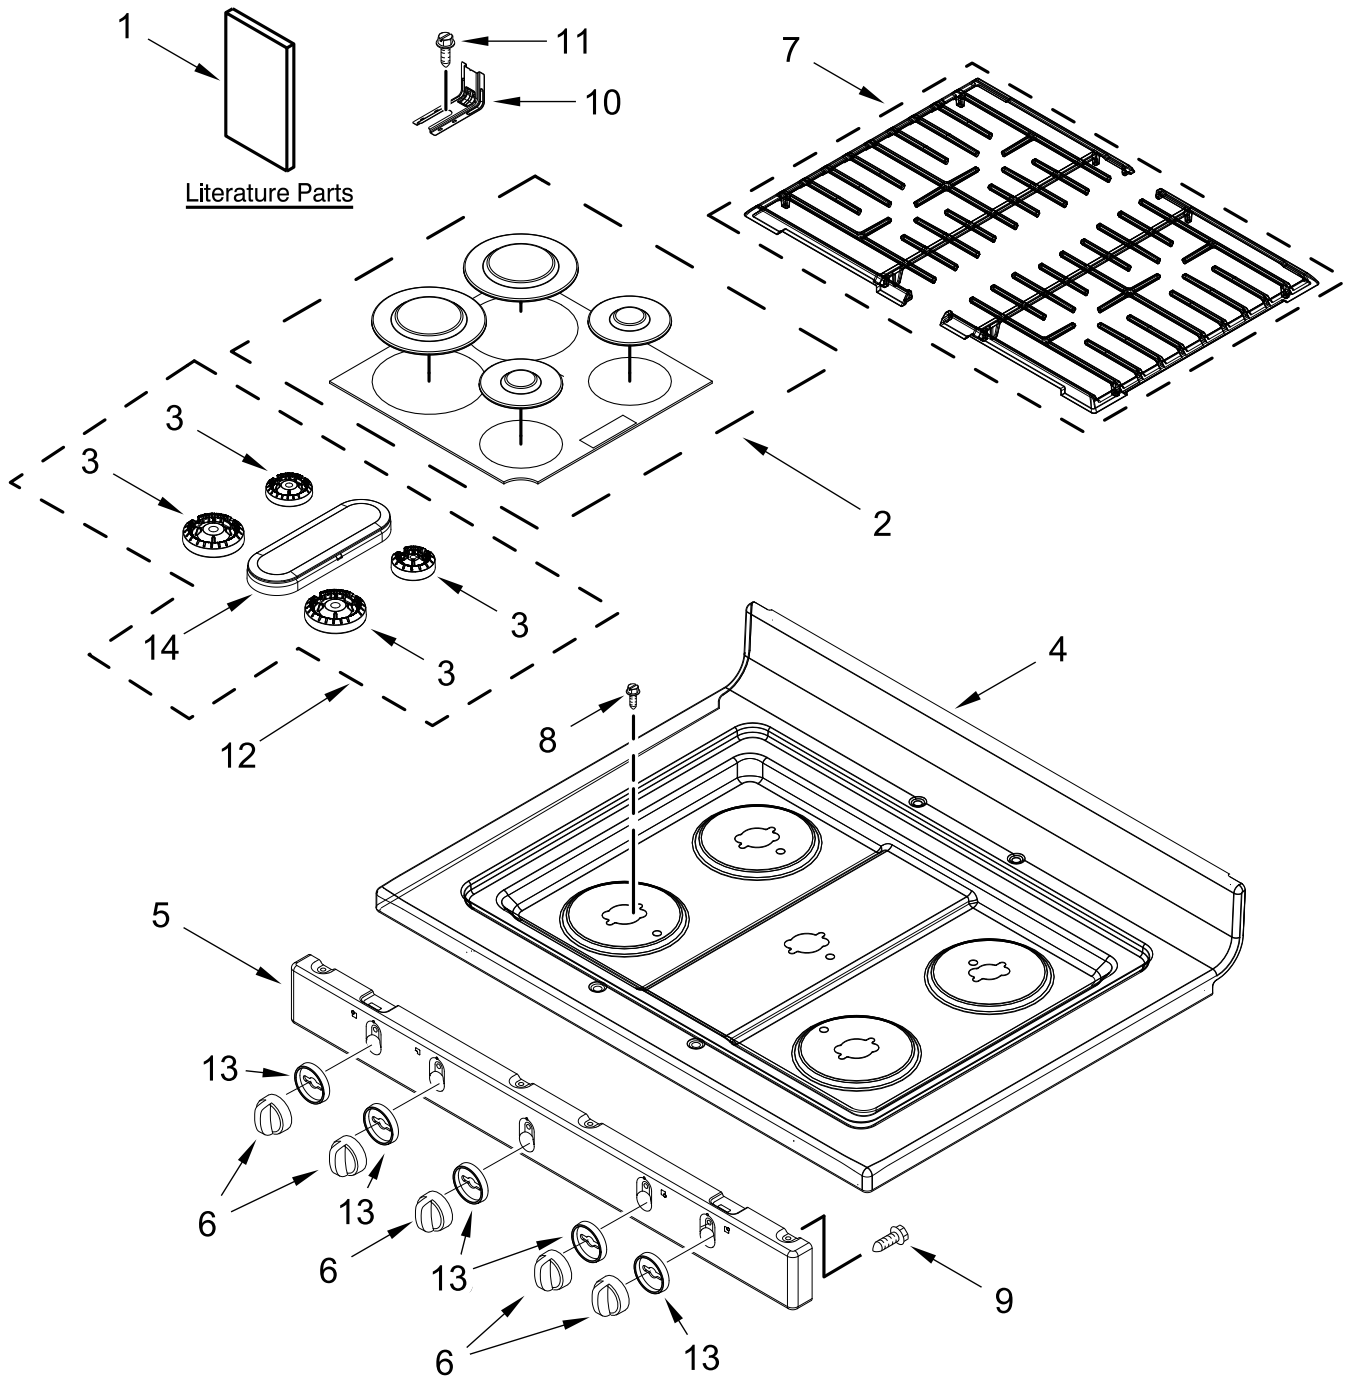

COOKTOP PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	4		Cooktop	13		Bezel
	W11426600	Owner's Manual		W11418086	Black		W11042485	Stainless
	W11523146	Quick Start Guide	5		Panel, Manifold	14	W11367086	Spreader, Flame
	W11597687	Tech Sheet		W10861559	Stainless			FOLLOWING PARTS NOT ILLUSTRATED
2		Burner Cap Kit	6		Knob, Control		W11457191	Harness, Main
	W11498499	Black (Set of 4)		W11510310	Stainless		W11450461	Harness, Bake and Broil
3	W11352018	Spreader, Flame (Left Front and Right Front)	7		Grate Kit			
				W10911970	Black		3196520	Clip, Wire
	W11352020	Spreader, Flame (Right Rear)	8	W10673618	Screw		3196896	Clip, Wire
	W11352021	Spreader, Flame (Left Rear)	9	3196557	Screw		W10334923	Clip, Gas Wiring
			10	W11379945	Bracket, Anti-Tip		313438	Clip, Harness
			11	7101P485-60	Screw, Anti-Tip Kit			
			12	W11368533	Burner Kit			


CONTROL PANEL PARTS

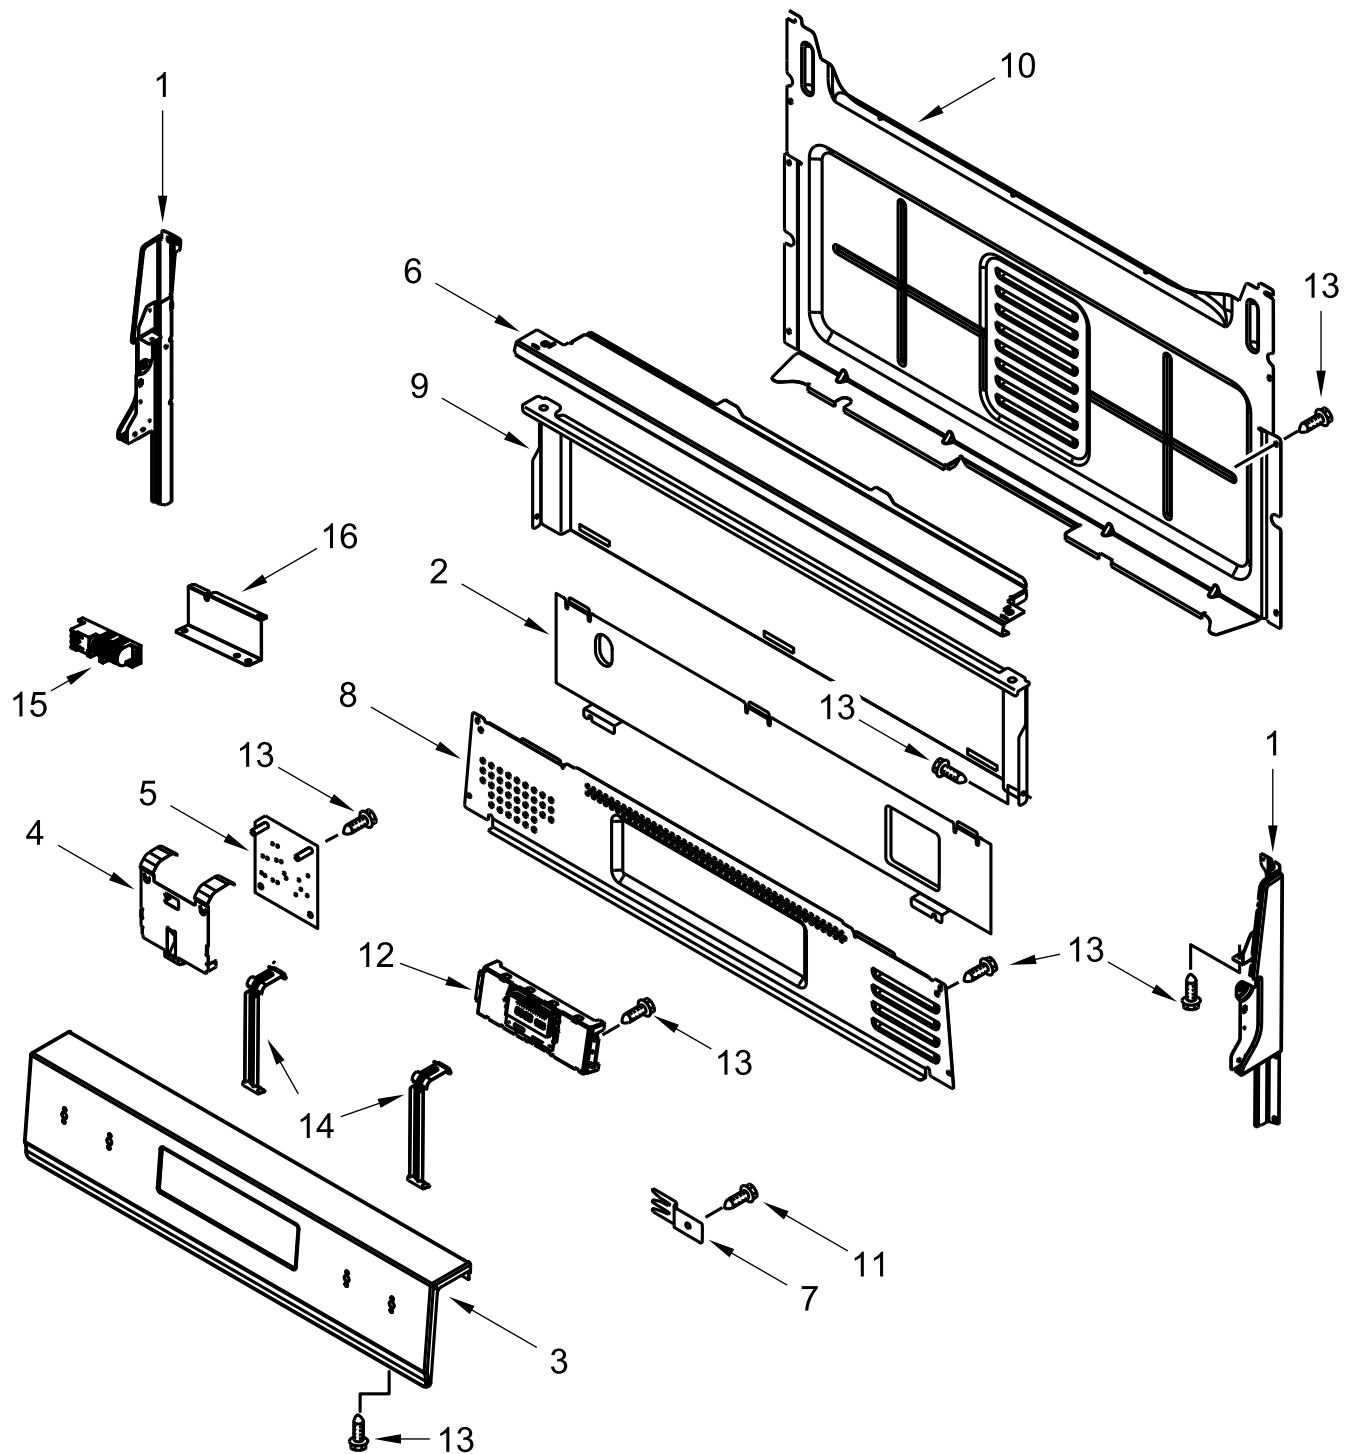

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Endcap	5	W10920631	Module, Spark DSI	11	3196169	Screw
	W11130372	Black (Left)	6	W10516123	Bracket, Console Mounting	12		Control, Electronic (LCX)
	W11130379	Black (Right)					W11568216	Black
2	8053505	Shield, Heat	7	8523412	Bracket, Rear Cooktop	13	3196178	Screw
3		Panel, Control	8	W10198745	Cover, Upper	14	W10695491	Bracket, Control
	W10835288	Stainless	9	W10192841	Shield, Heat	15	W10475149	Module, Spark
4	W10762981	Bracket, Mounting	10	W10158780	Cover, Rear Fan	16	W10797001	Bracket, Ignitor


MANIFOLD PARTS

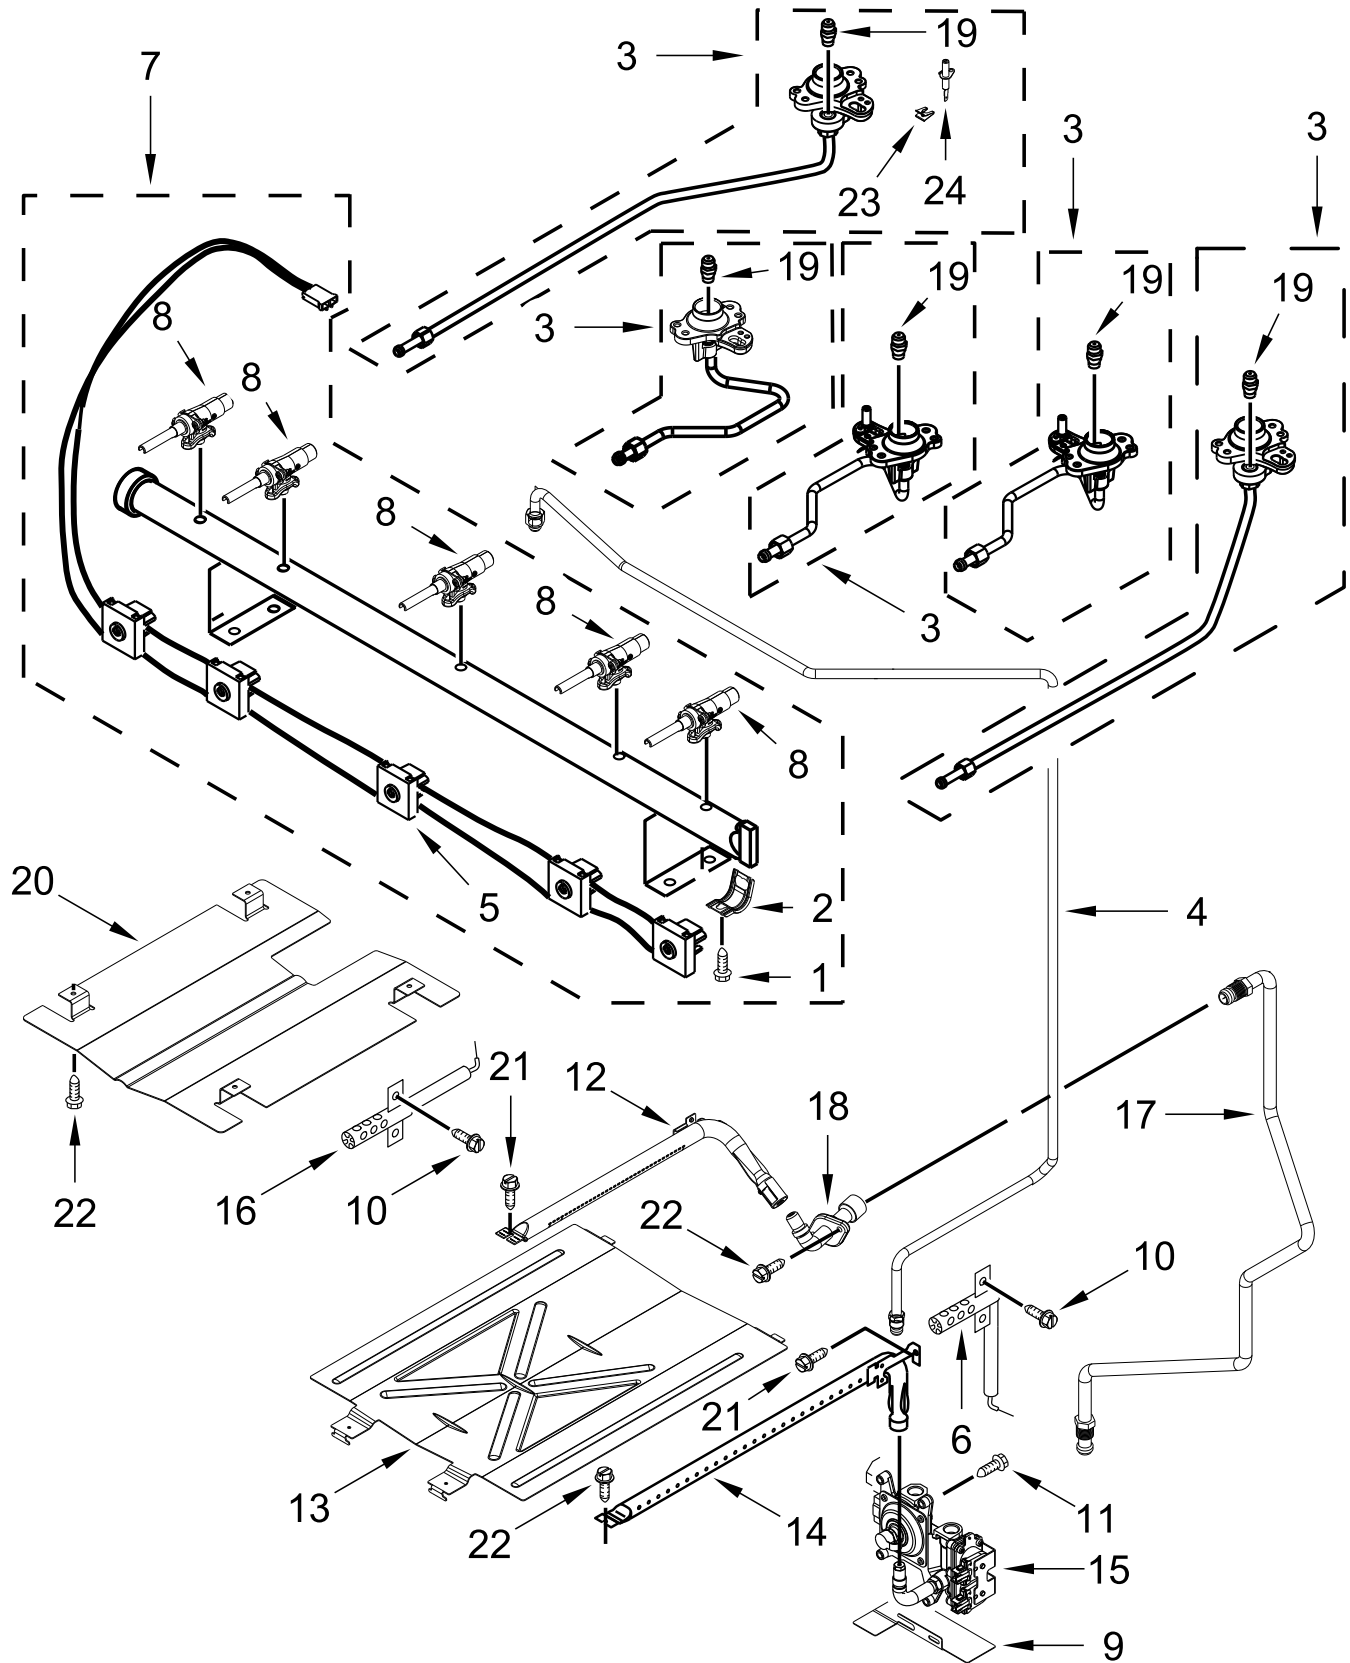

MANIFOLD PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11577792	Screw, Valve	9	W10224921	Bracket, Aegis	24	W11428858	Electrode
2	W10949105	Bracket, Saddle Valve	10	3196385	Screw			(Left Front, Right Front, Right Rear)
3	W11459257	Orifice Holder Assembly (15K)	11	3400016	Screw			(Center)
		(Left Front)	12	8054078	Burner, Broiler	W11428831	Electrode	(Left Rear)
	W11459258	Orifice Holder Assembly (9.5K)	13	W10184491	Spreader, Flame (Oven)			FOLLOWING PARTS NOT ILLUSTRATED
		(Left Rear)	14	9758078	Burner, Bake	W11489399	LP 5 Orifice Conversion Kit	
	W11459260	Orifice Holder Assembly (15K)	15	W11370883	Regulator	W10566537	LP Bake and Broil Kit	
		(Right Front)	16	W10333842	Electrode, Broil	W10400495	Orifice, LP Bake	
	W11459259	Orifice Holder Assembly (5K)	17	W10420040	Tube, Broiler Supply	W10465080	Orifice, LP Broil	
		(Right Rear)	18	W11435700	Fitting, Broiler	W10182767	Tie, Manifold Wire	
	W11459261	Orifice Holder Assembly (8K)	19	W11485872	Orifice (15K)			
		(Center)		W11485873	Orifice (9.5K)			
					(Left Rear)			
				W11485871	Orifice (5K)			
					(Right Rear)			
4	W10215439	Tubing (Manifold to Regulator)		W11485874	Orifice (8K)			
					(Center)			
5	W11537754	Harness, Igniter (Includes Switches)	20	W10137062	Spreader, Flame (Broiler)			
6	W11450459	Electrode, Bake	21	3196265	Screw			
7	W11510000	Manifold Assembly	22	W10362924	Screw			
8	W11509685	Valve, Gas (Left Front and Right Front)	23	W10827923	Electrode, Spring			
	W11509686	Valve, Gas (Left Rear and Center)						
	W11509687	Valve, Gas (Right Rear)						


CHASSIS PARTS

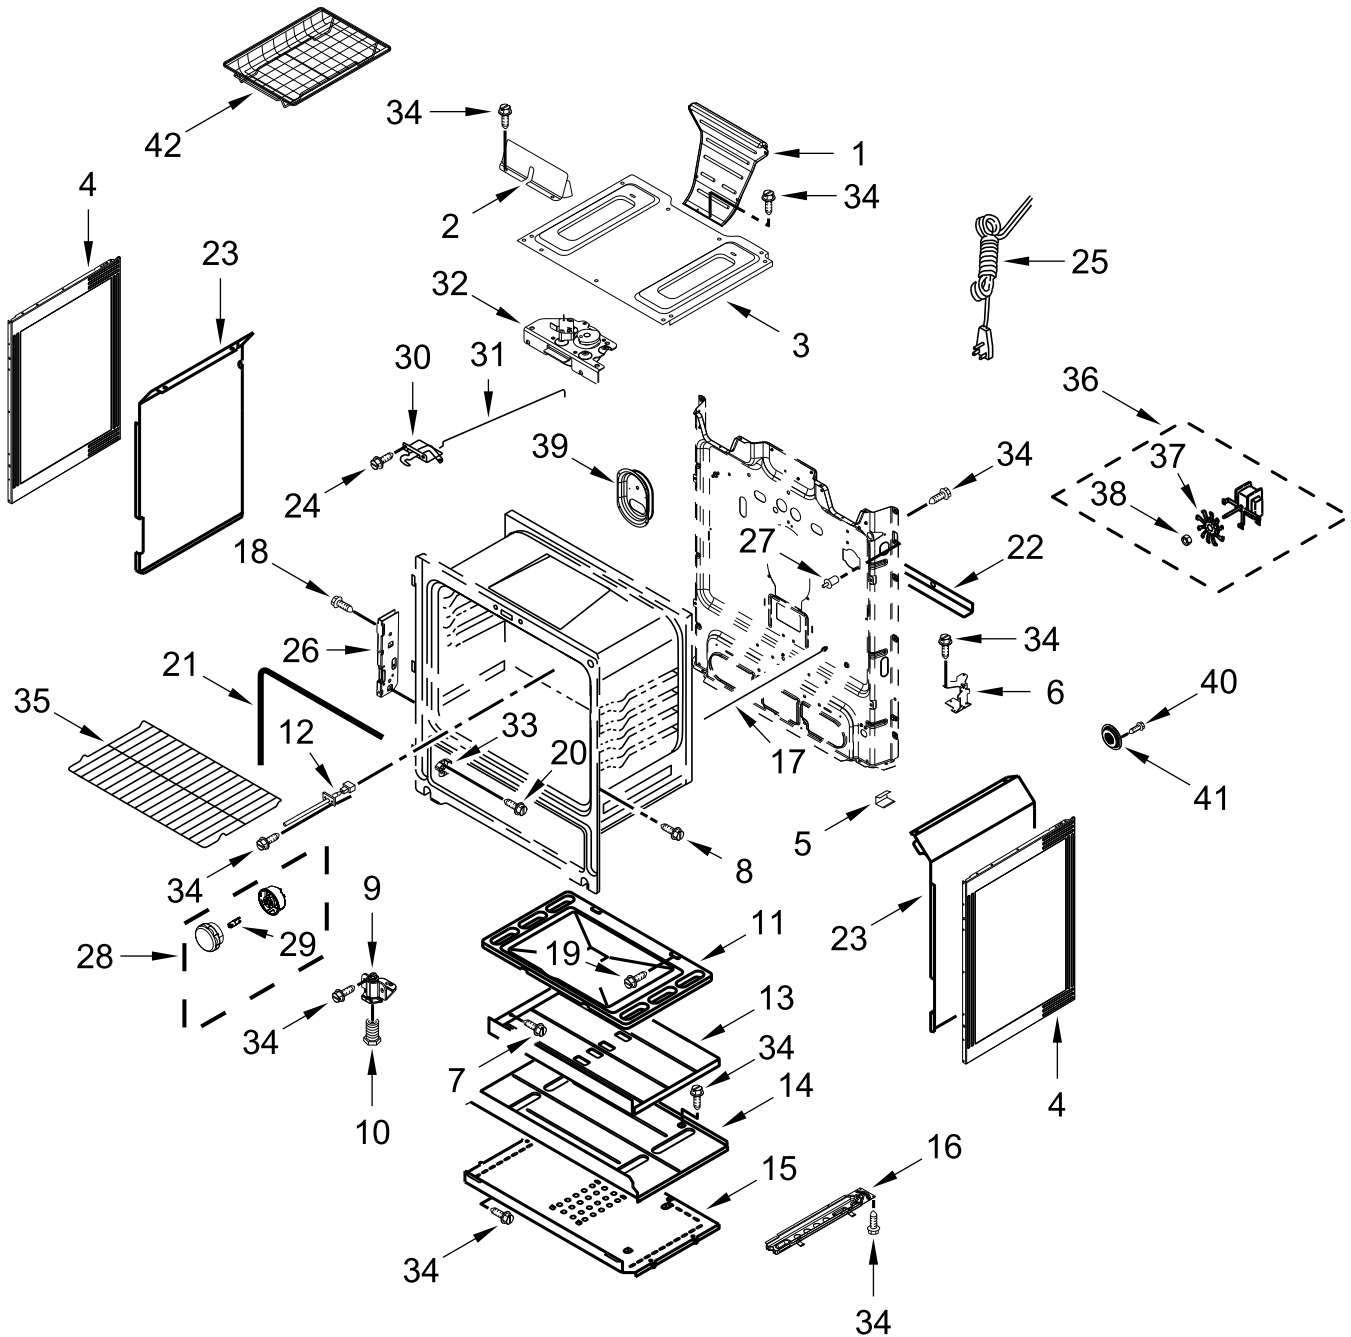

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11457094	Box, Flue	17	9757239	Rod, Door Switch	33	W10674705	Glide, Drawer Front
2	8272747	Shield, Flue	18	W10031780	Screw	34	3196178	Screw
3	W11379351	Box-Burner, Gas Sealed	19	W10379120	Screw	35	W11173792	Rack, Oven
4		Panel, Side	20	3400080	Screw	36	W11403615	Fan Motor, Convection
	W10162245	Black	21	W11491751	Seal, Door	37	W11425715	Blade, Fan
5	W10137382	Clip, Panel	22	W10435470	Brace, Main Back	38	W11433702	Nut, Acorn (LH)
6	8523249	Bracket, Manifold	23	W11379353	Retainer, Insulation (Left)	39	W10134126	Bracket, Fan
7	W10362924	Screw		W11379943	Retainer, Insulation (Right)	40	4449809	Screw
8	3196560	Screw	24	3196560	Screw	41	W10134124	Cover, Conv Fan
9	W10341186	Front Foot Assembly	25	W10910642	Cord, Power	42	W11526015	Basket, Air Fry
10	W10058460	Foot, Leveling	26	W10289077	Receiver, Hinge			FOLLOWING PARTS NOT ILLUSTRATED
11	3195097	Bottom, Oven	27	W11511828	Switch, Door		8524099	Insulation, Wrap
12	W10586204	Sensor	28	W11544377	Light Assembly		W10180437	Insulation, Back
13	8053967	Baffle, Burner Oven	29	W10571723	Bulb, Halogen 40 Watts			
14	8053969	Shield, Heat	30	9761013	Front Door Latch Assembly			
15	8053968	Shield, Lower	31	W10078370	Rod, Push Latch			
16	W10390008	Base Rail Assembly (Left)	32	W10107820	Rear Door Latch Assembly			
	W10390007	Base Rail Assembly (Right)						


DOOR PARTS

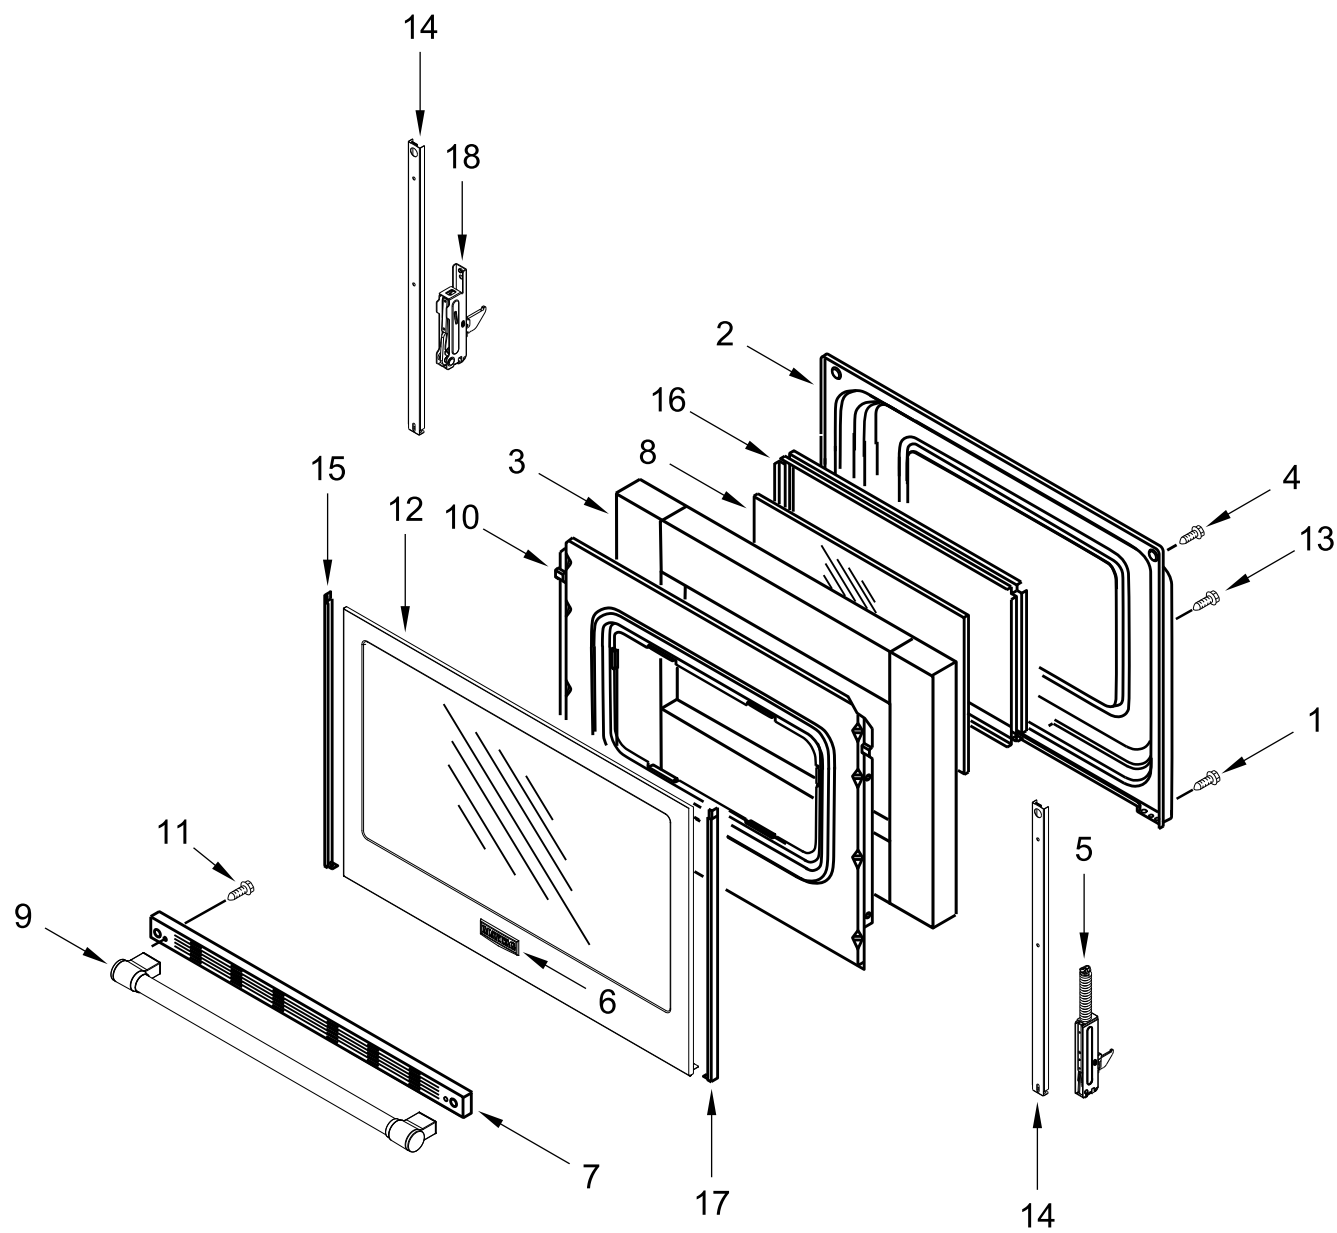

DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10031780	Screw	8	9758162	Glass, Inner	14	W11379944	Strap, Door
2	9761344	Liner, Door	9		Handle, Oven Door	15		Trim, Door
3	W10278991	Insulation, Door Strip		W10834521	Stainless		W10746436	Black (Left)
4	W10200660	Screw	10	9761357	Retainer, Insulation	16	W10316950	Frame, Glass
5	W10299224	Hinge, Active (With Spring)	11	W10480830	Screw	17		Trim, Door
6	W10612925	Badge	12		Glass Assembly, Outer Door		W10746435	Black (Right)
7		Trim, Oven Door Vent		W11167878	Stainless	18	W10299227	Hinge, Door (Passive)
	W11047800	Stainless	13	W10031790	Screw			

DRAWER PARTS

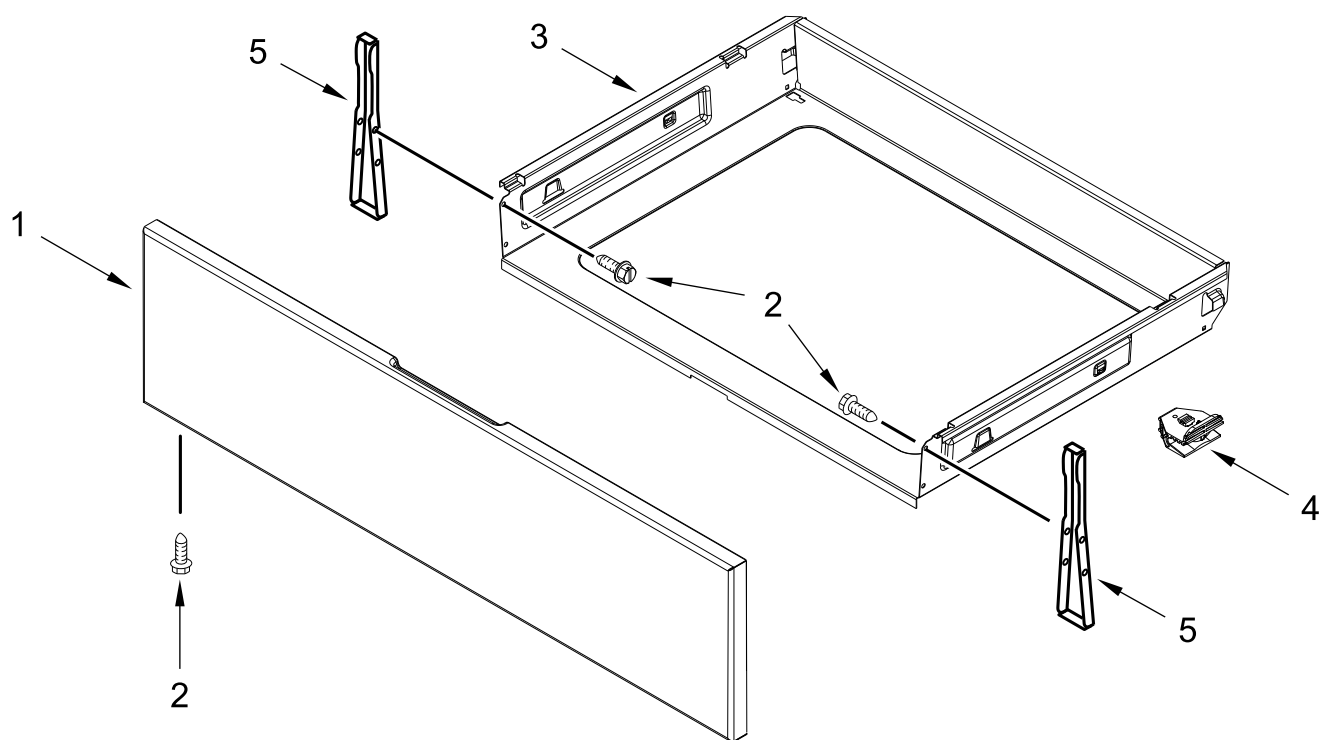

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
-----------------------------	-----------------	--------------------

1		Panel, Drawer
	W11190210	Stainless

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
-----------------------------	-----------------	--------------------

2	3196165	Screw
3	W10688022	Drawer, Storage

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
-----------------------------	-----------------	--------------------

4	W10674708	Glide, Drawer Rear
5	W10462909	Bracket, Mounting

OPTIONAL PARTS (NOT INCLUDED)

REFINISHING MATERIAL

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

INSULATION

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2 x 24 x 120 in)
	240132	Insulation (2-1/2 x 22 x 120 in)

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	4392899	Biscuit and Bisque
	511873	White Porcelain (2 oz.)

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black

PAINT, BULK (1 QT.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

ACCESSORY PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	W10355016	Cleaner, Stainless Steel
	4396096RB	Griddle
	4396923	Broiler Pan and Grid
	W10123240	Rack, Broiler Pan and Roasting