




REFRIGERATOR

MODELS:

WRFF5333PW02 (White)


CABINET PARTS

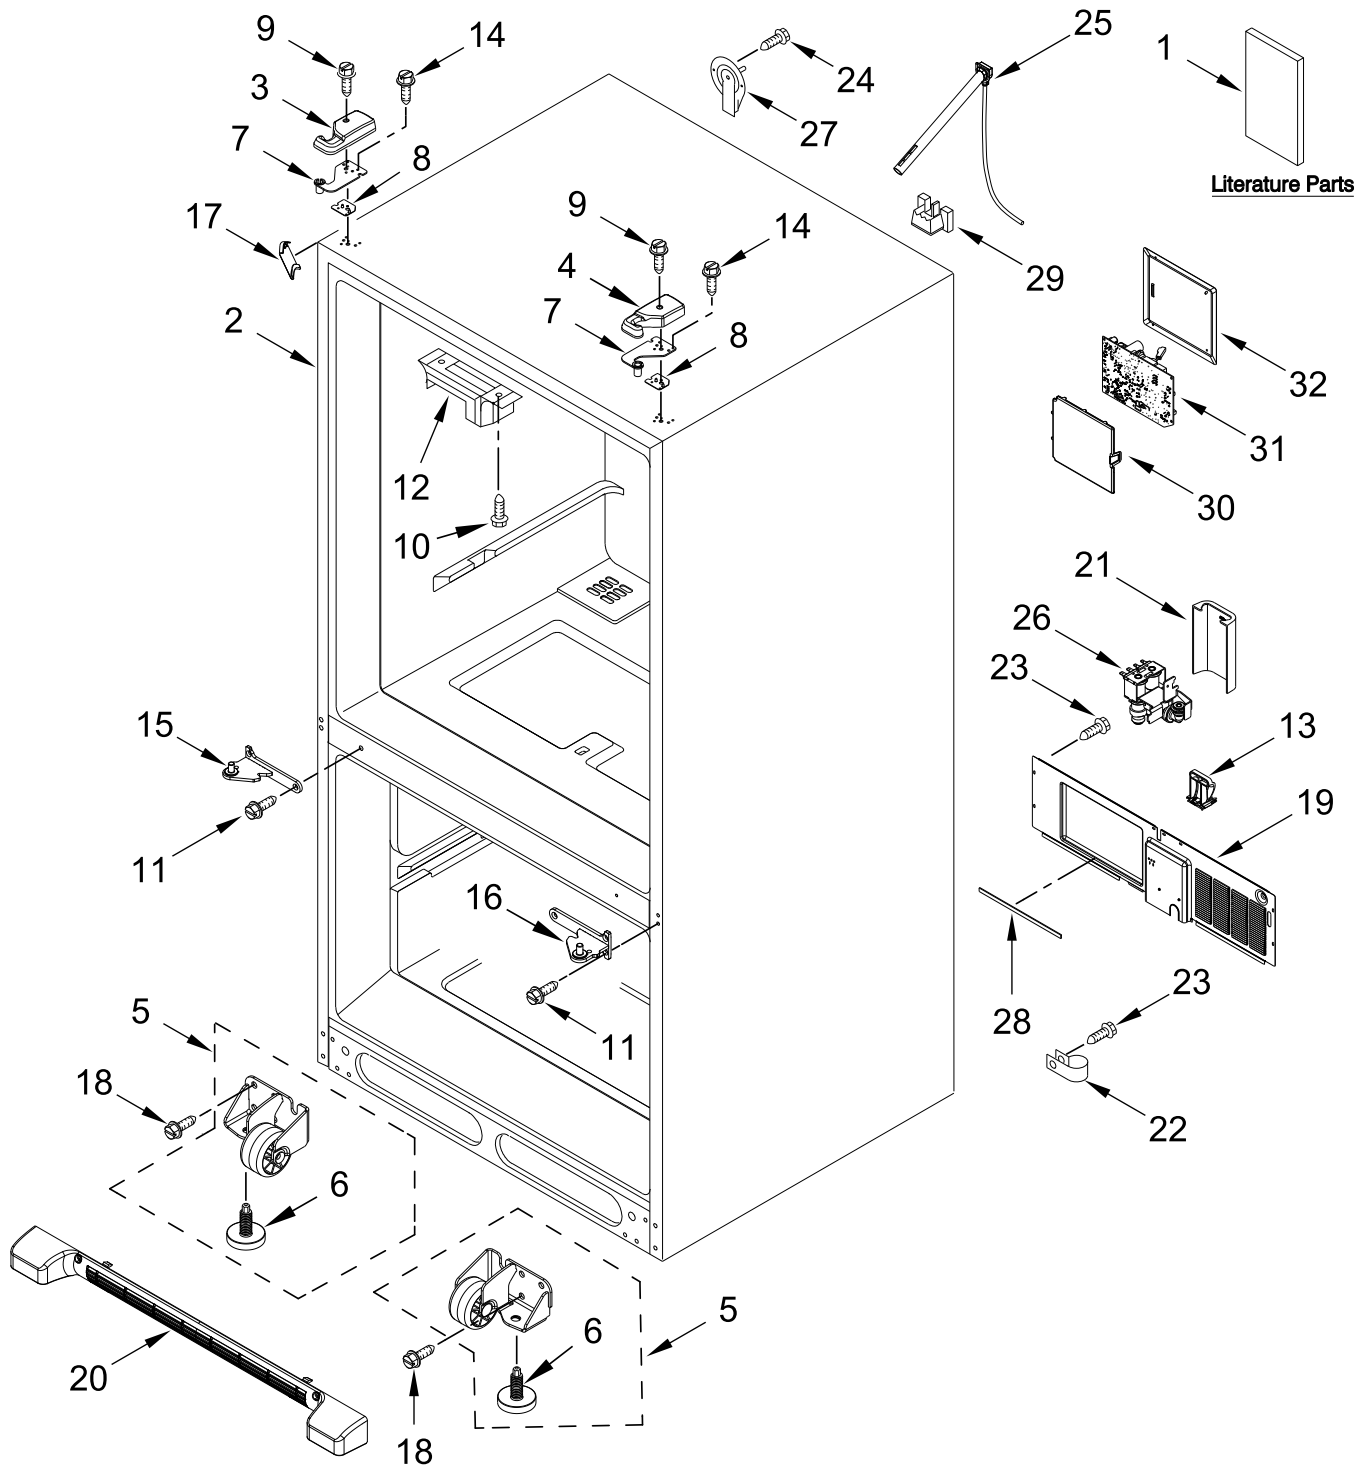

CABINET PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	8		Shim, Top Hinge	21	W10208593	Guard, Dual Water Valve
	W11580822	Owners Manual		12999501	Left Hand	22	M0108107	Clamp, Tube
	W11651386	Energy Guide		12999502	Right Hand	23	12990702	Screw
	W11623340	Tech Sheet	9	12992602	Screw	24	12990504	Screw
2		Cabinet (Not a Servicable Part)	10	688983	Screw	25	W11046934	Assembly, Fill Tube (Includes Tubing, Fill Tube Elbow, Tube Insert and Clamp)
3		Cover, Top Hinge	11	W10673840	Screw (Stainless)			
		Left Hand	12	12698403	Plate, Pivot	26	W11446816	Valve, Water Inlet
	W10337634	White	13	W10528513	Sweep, Dual Tube	27	12726003	Cover, Water Line
4		Cover, Top Hinge	14	12992403	Screw	28	W11534847	Gasket
		Right Hand	15		Hinge, Center	29	W11651067	Block, Fill Tube
	12962302W	White		W11610757	Left Hand	30	W10296541	Lid, HV Control Box
5		Assembly, Roller	16		Hinge, Center	31	W10317076	Board, HV Control
	W10515763	Left Hand		W11610758	Right Hand	32	12961602	Cover, Control Box
	W10515762	Right Hand	17		Cover, Corner			
6	W10141622	Brake, Roller		12587703W	White			
7		Hinge, Top	18	W10709365	Screw			
	W11456626	Left Hand	19	W10210980	Cover, Unit			
	W11456625	Right Hand	20		Grille, Toe			
				W10534161	White			


REFRIGERATOR LINER PARTS

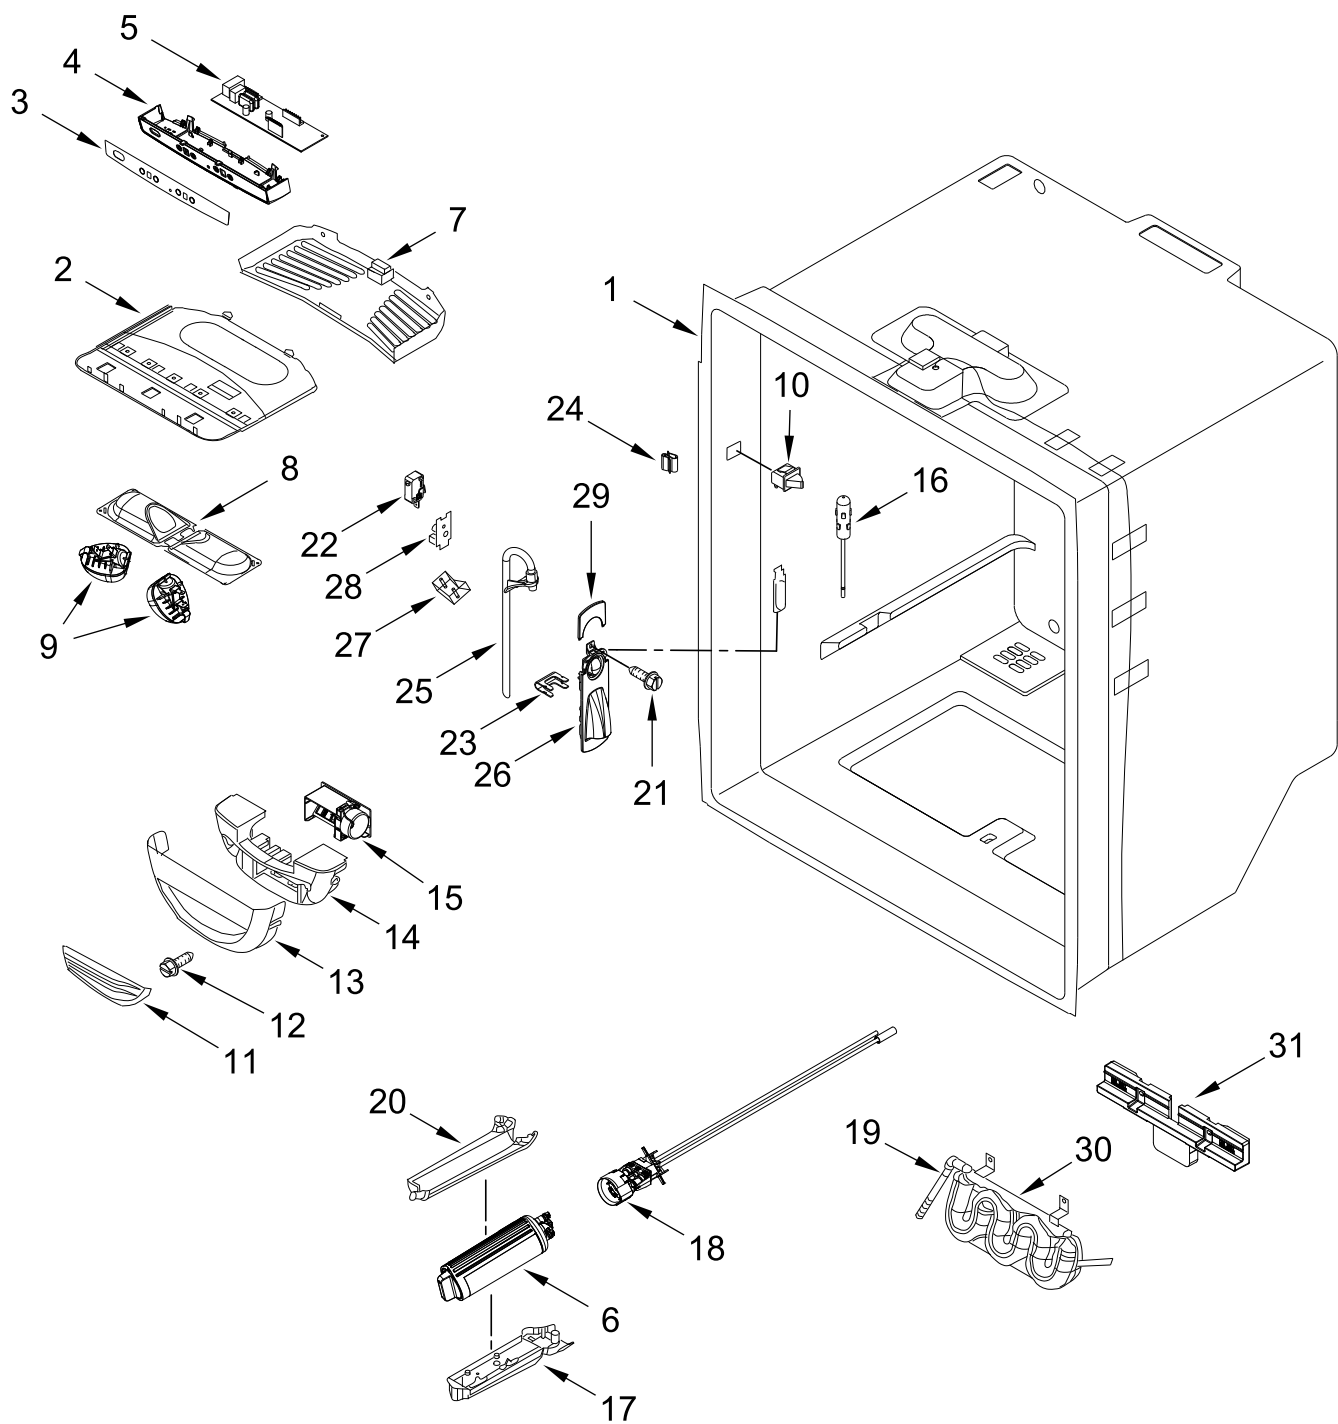

REFRIGERATOR LINER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Liner (Not A Serviceable Part)	15	W10594329	Control, Damper	29	W11437003	Facade, Dispenser (Top)
2	W10464766	Module, Light	16	12791416	Thermistor	30	W11097710	Tank, Water
3	W10746278	Overlay	17	W11510657	Plate, Filter	31	W11657840	Insulation, Water Tank
4	W10464767	Module, Control	18	W11519957	Manifold, Water System			FOLLOWING PARTS NOT ILLUSTRATED
5	W11593757	Board, Control	19	61006182	Union, Water			
6	W11536439	Filter, Water	20	W11510654	Cover, Filter	W11609496		Harness, Control (Includes Thermistor)
7	W11132917	Cover, Light	21	12990302	Screw			
8	W10443023	Housing, Light	22	W11495787	Switch, Limit			
9	W11468934	Light Module, LED	23	12251001	Clip, Water Tube			
10	W10847852	Switch, Rocker	24	B8390302	Clip, Facade			
11	12806801	Insert, Damper Cover	25	W11031909	Guide, Waterline			
12	12990604	Screw	26	W11551461	Facade, Dispenser			
13	12806701	Cover, Damper	27	W11437004	Foam, Plate Switch			
14	W11657832	Insulation, Damper	28	W11437528	Plate, Switch			


FREEZER LINER AND ICEMAKER PARTS

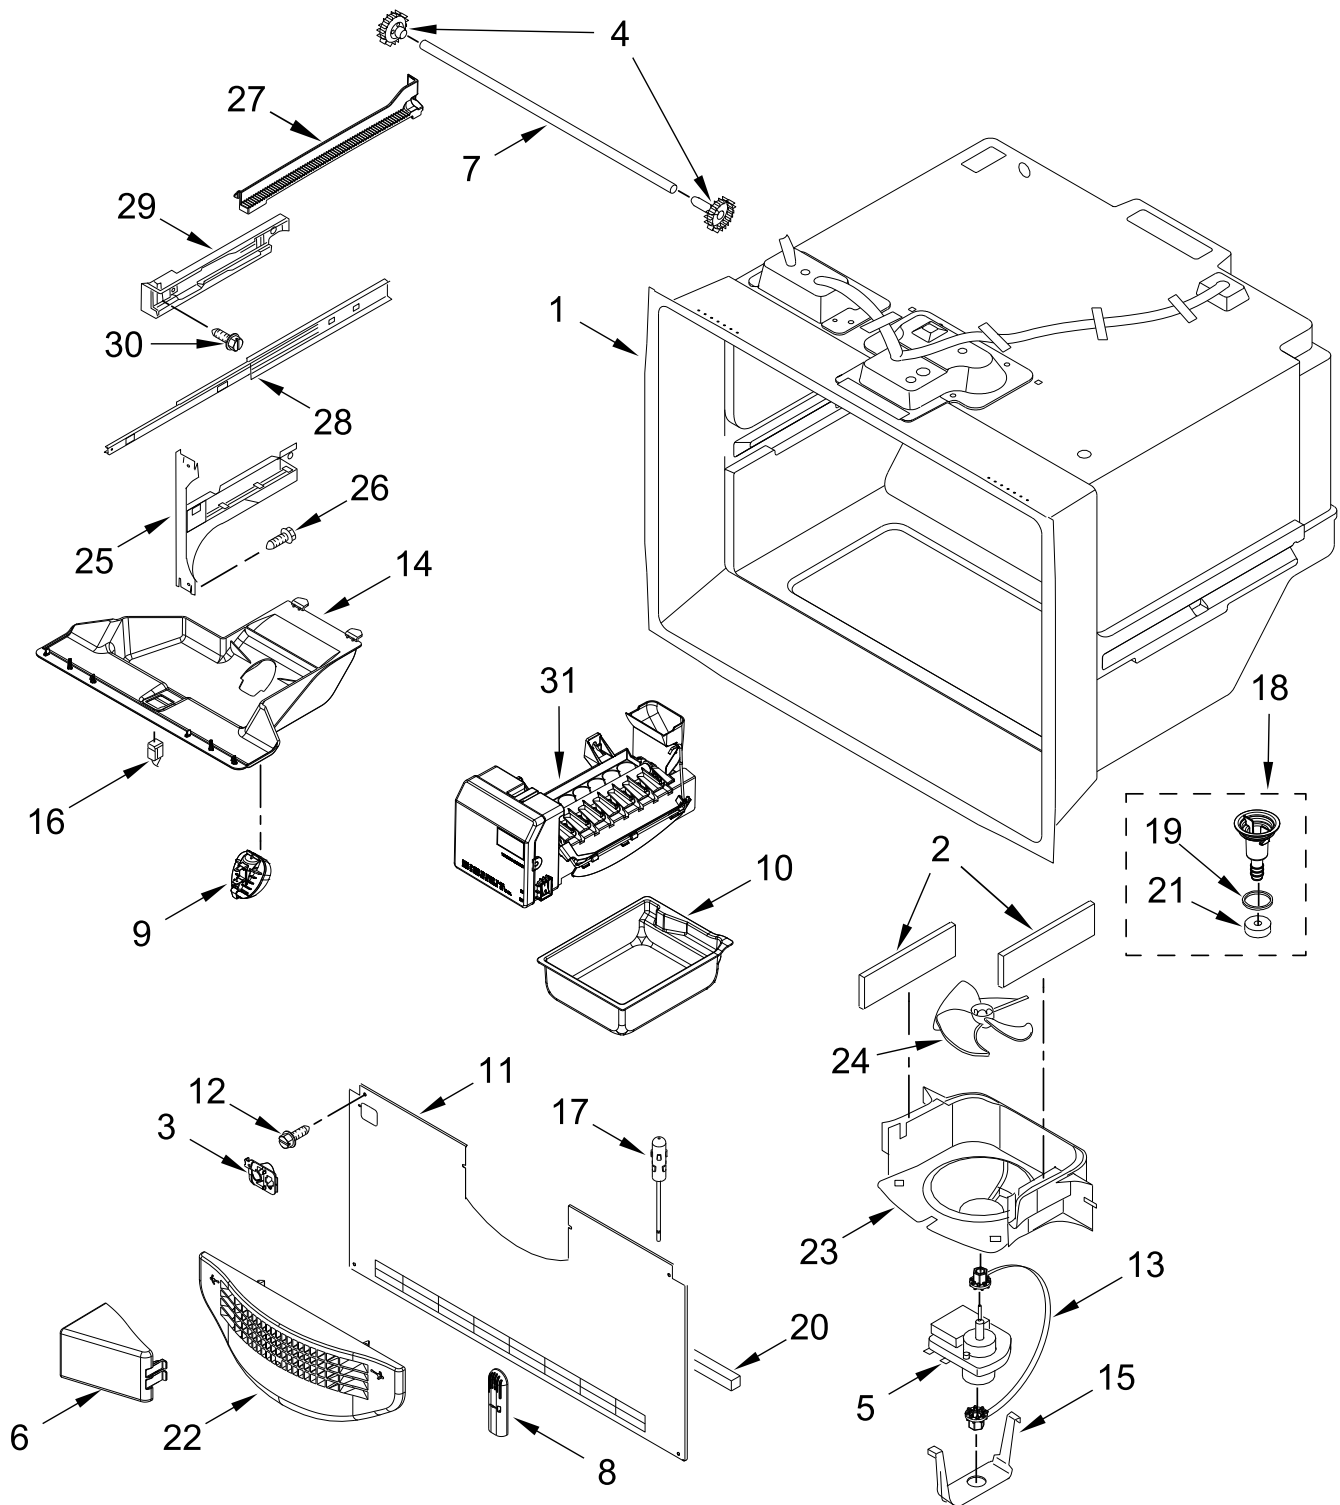

FREEZER LINER AND ICEMAKER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Liner (Not A Serviceable Part)	14	W10277025	Module, Light	25		Bracket, Door
2	A3189392	Gasket, Foam	15	13058002	Clip, Evaporator Motor		W10330991	Left Hand
3	W11341630	Guide, Fill Tube	16	W10847849	Switch, Light		W10330993	Right Hand
4	12002497	Gear	17	12791419SP	Thermistor	26	12990521	Screw
5	13062901	Motor, Evaporator	18	W10662407	Assembly, Drain Funnel	27		Rail, Side
6	W10157765	Diverter, Air	19	M0500703	Seal		W11309374	Left Hand
7	W10802331	Shaft, Rack	20	A3189395	Gasket, Foam		W11309377	Right Hand
8	12815301	Cover, Thermistor	21	B8381501	Gasket, Drain	28	W11644400	Slide, Door
9	W11468934	Light Module, LED	22	13024803	Grille, Freezer Air	29		Adapter, Slide
10	W10171529N	Pan, Ice	23	13057901	Shroud, Evaporator Fan		W10284684	Left Hand
11	W10308415	Cover, Evaporator					W10284685	Right Hand
12	12990511	Screw	24	2169142	Blade, Fan	30	12990501	Screw
13	W10150583	Grommet, Fan Motor				31	W11525253	Assembly, Complete Icemaker


REFRIGERATOR DOOR PARTS

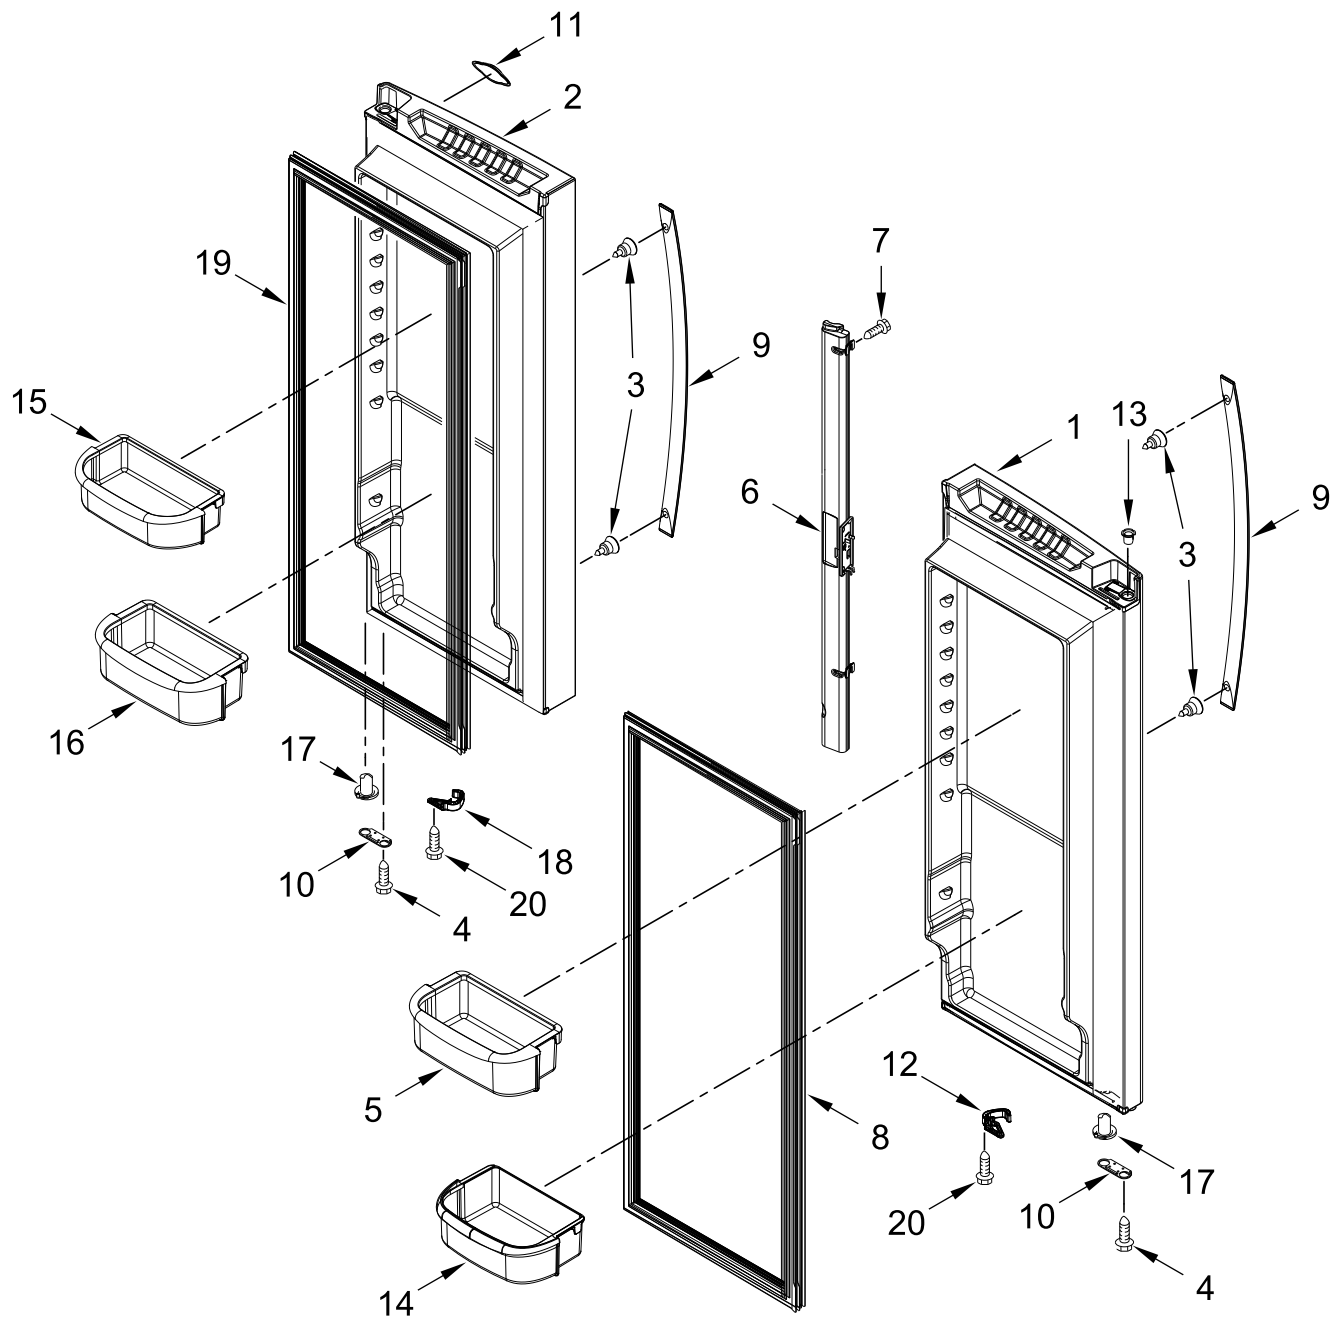

REFRIGERATOR DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Door, Refrigerator	8		Gasket, Door	14	12918704	Bucket, Gallon (Clear)
		Left Hand			Left Hand	15	W10289497	Bucket, Gallon
	W11622643	White		W10830287	White	16	W10371194	Bucket, Medium
2		Door, Refrigerator	9		Handle, Door	17		Closure, Door
		Right Hand		W11101973	White		12028505W	White
	13107885W	White	10		Stop, Door	18		Latch, Door Closer
3	W11328753	Screw		12968202W	White			Right Hand
4	12990504	Screw	11	W10884773	Badge		W10833738	White
5	W10351081	Bucket, Small	12		Latch, Door Closer	19		Gasket, Door
6		Mullion, Door			Left Hand			Right Hand
	12722803W	White		W10833740	White		W10830189	White
7	12990204	Screw	13	12996601	Clip, Bushing	20	12990518	Screw


FREEZER DOOR PARTS

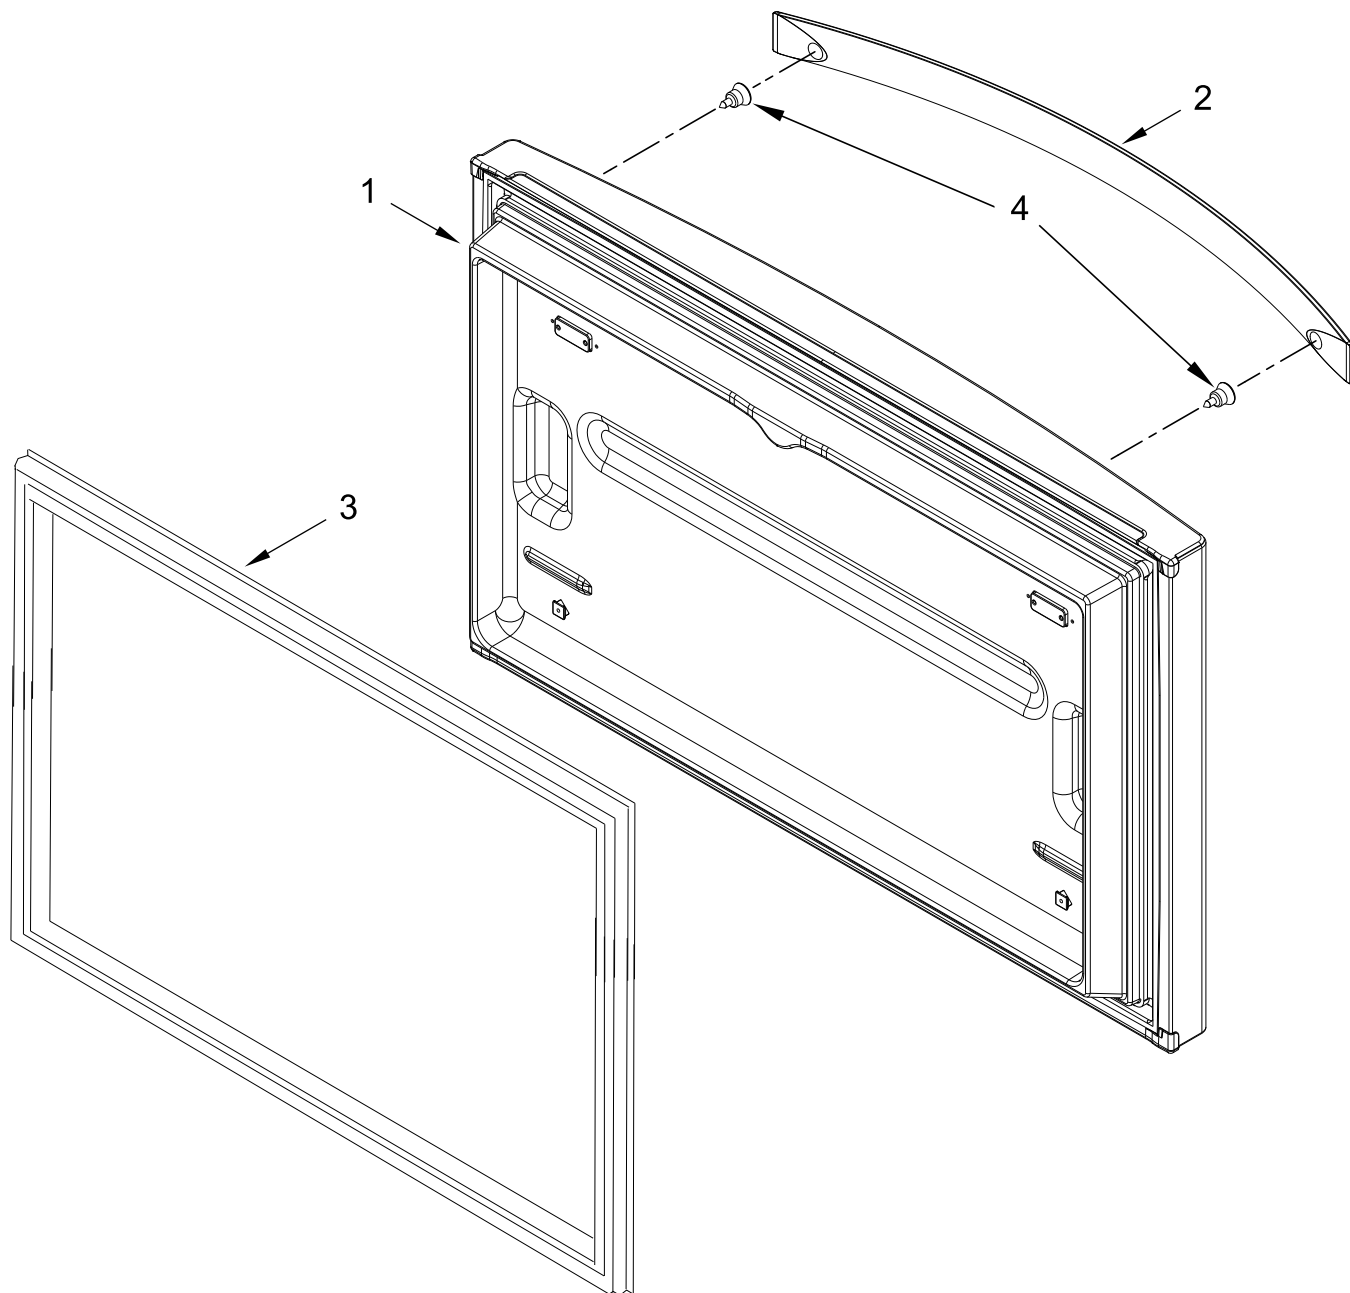

FREEZER DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	12977869W	Door, Freezer White	2	W11101982	Handle, Door White	3	W10443315	Gasket, Door White
						4	W11328753	Screw


UNIT PARTS

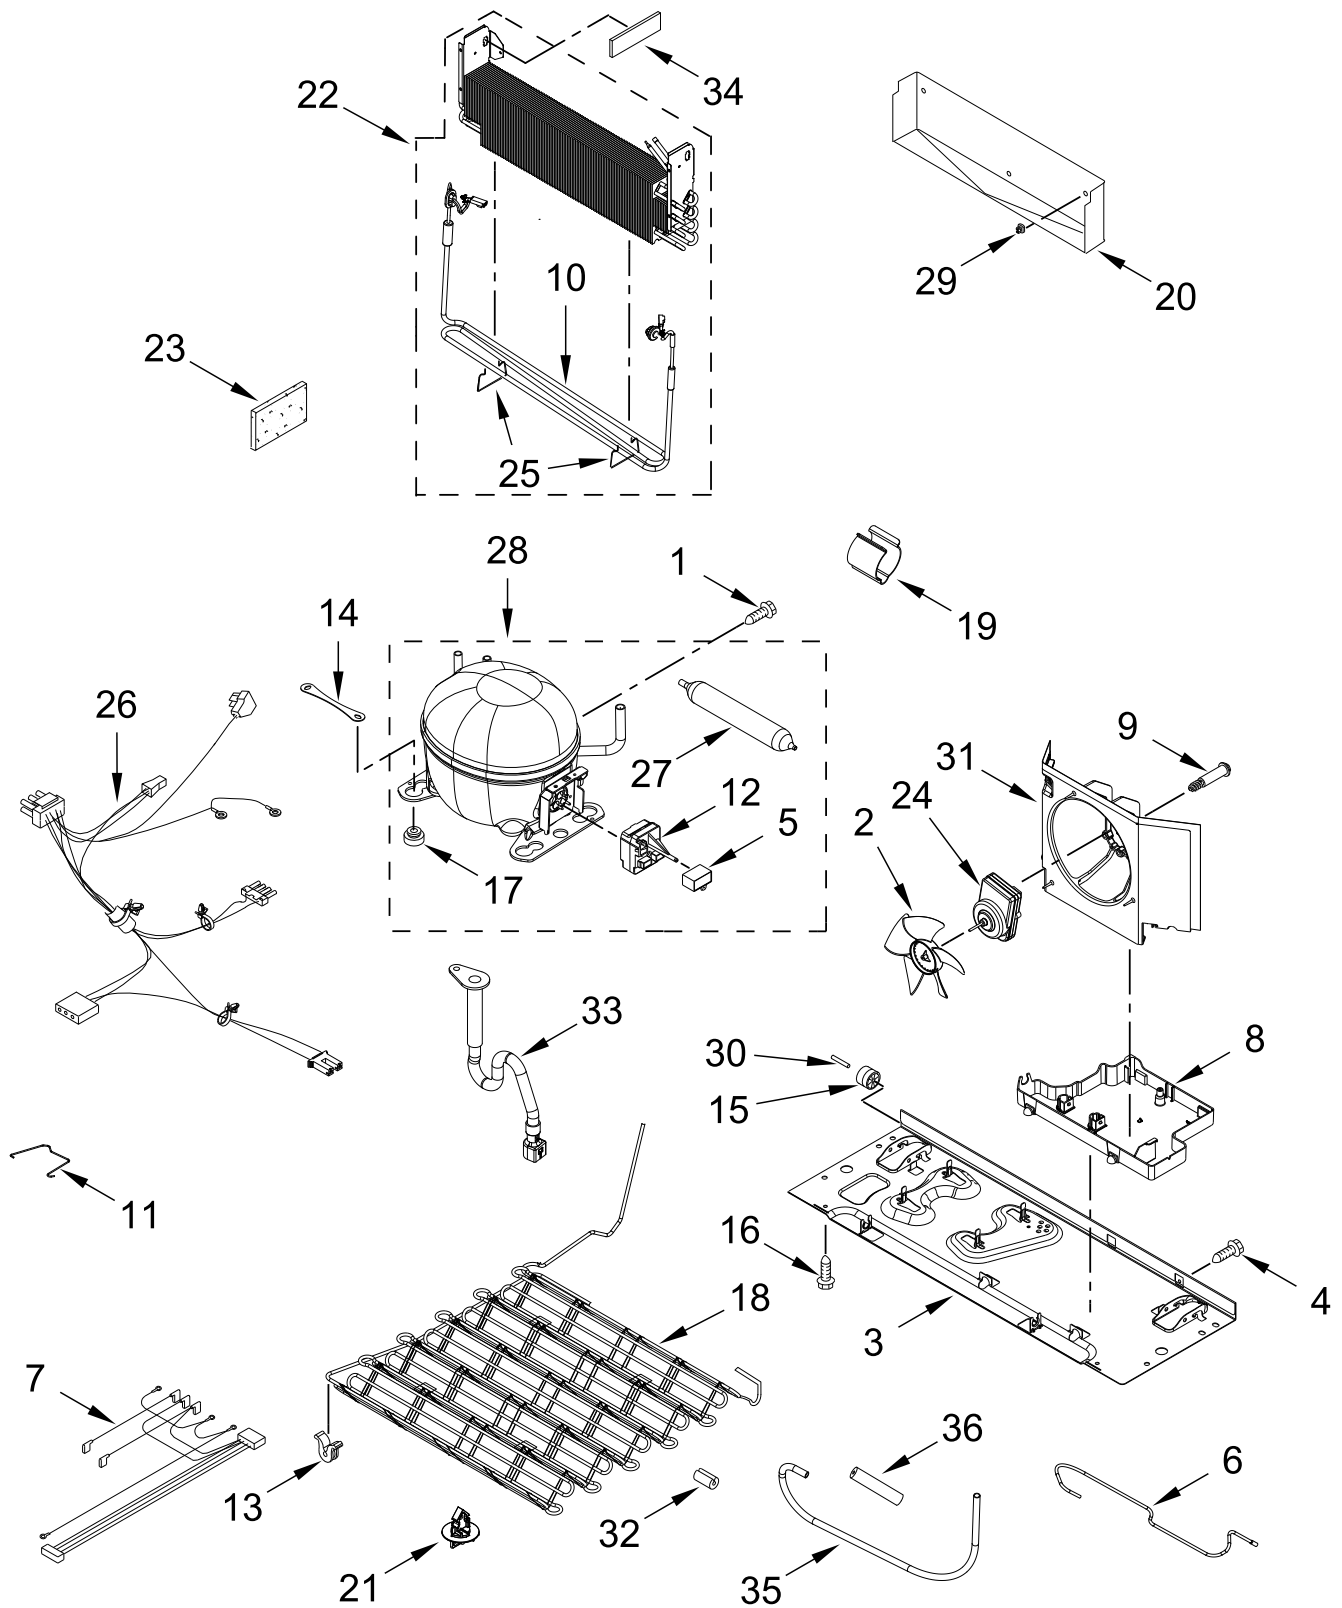

UNIT PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	12992301	Screw	20	W11337772	Tray, Drip	28	W11332031	Compressor
2	12825803	Blade, Fan	21	W10815863	Clip, Condenser			(Also Order the Following Lokring Parts)
3	W11604797	Basepan	22	W11515436	Assembly, Evaporator and Heater			
4	12990511	Screw			(Also Order the Following Lokring Parts)		W11504416	8.5/6 NR MS 00
5	W10350564	Capacitor						(Suction Tube to Compressor)
6	W11566600	Tube, Discharge		W11504423	8/2 NR AL 00		W11504431	7/5 NR MS 00
7	W11305540	Harness, Evaporator Heater			(Capillary Tube to Evaporator)			(Discharge Tube to Compressor)
8	W10655367	Pan, Drain		W11504415	8.5/8 NR MS 00		W11506621	6 NK MS 00
9	W10622701	Screw			(Suction Line to Evaporator)			(Charging Tube to Compressor)
10	W11287564	Heater, Defrost	23	2169104	Insulation, Sound Deadening		W11506635	Tube, Charging (1/4 in w/ Schrader Valve)
11	W11379613	Strap, Bale	24	W11505534	Motor, Condenser Fan	29	10623002	Clip, Evaporator
12	W11359985	Device, Start	25	W11380964	Clip, Heater	30	12477202	Axle, Roller
13	W10137529	Grommet, Condenser	26	W11654036	Harness, Unit (Includes Power Cord)	31	W11463236	Shroud, Condenser Fan
14	W10236396	Strap, Compressor	27	W11353156	Drier	32	2319835	Grommet, Condenser
15	12477102	Roller			(Also Order the Following Lokring Parts)	33	W10622099	Extension, Drain Tube
16	12992101	Screw		W11504445	5/4 NR MS 00	34	W11244122	Gasket, Foam
17	10835903	Grommet			(Heat Loop to Drier)	35	W11566588	Tube, Suction
18	W11353138	Condenser		W11504447	5/1.8 NR MS 00	36	W10303521	Sleeve
		(Also Order the Following Lokring Parts)			(Capillary Tube to Drier)			REFRIGERANT CHARGE
	W11506623	5 NK MS 00						44 grams (R600a)
		(Discharge Tube to Condenser)						
	W11504432	6/5 NR MS 00						
		(Heat Loop to Condenser)						
19	W10281329	Clip, Drier						

SHELF PARTS

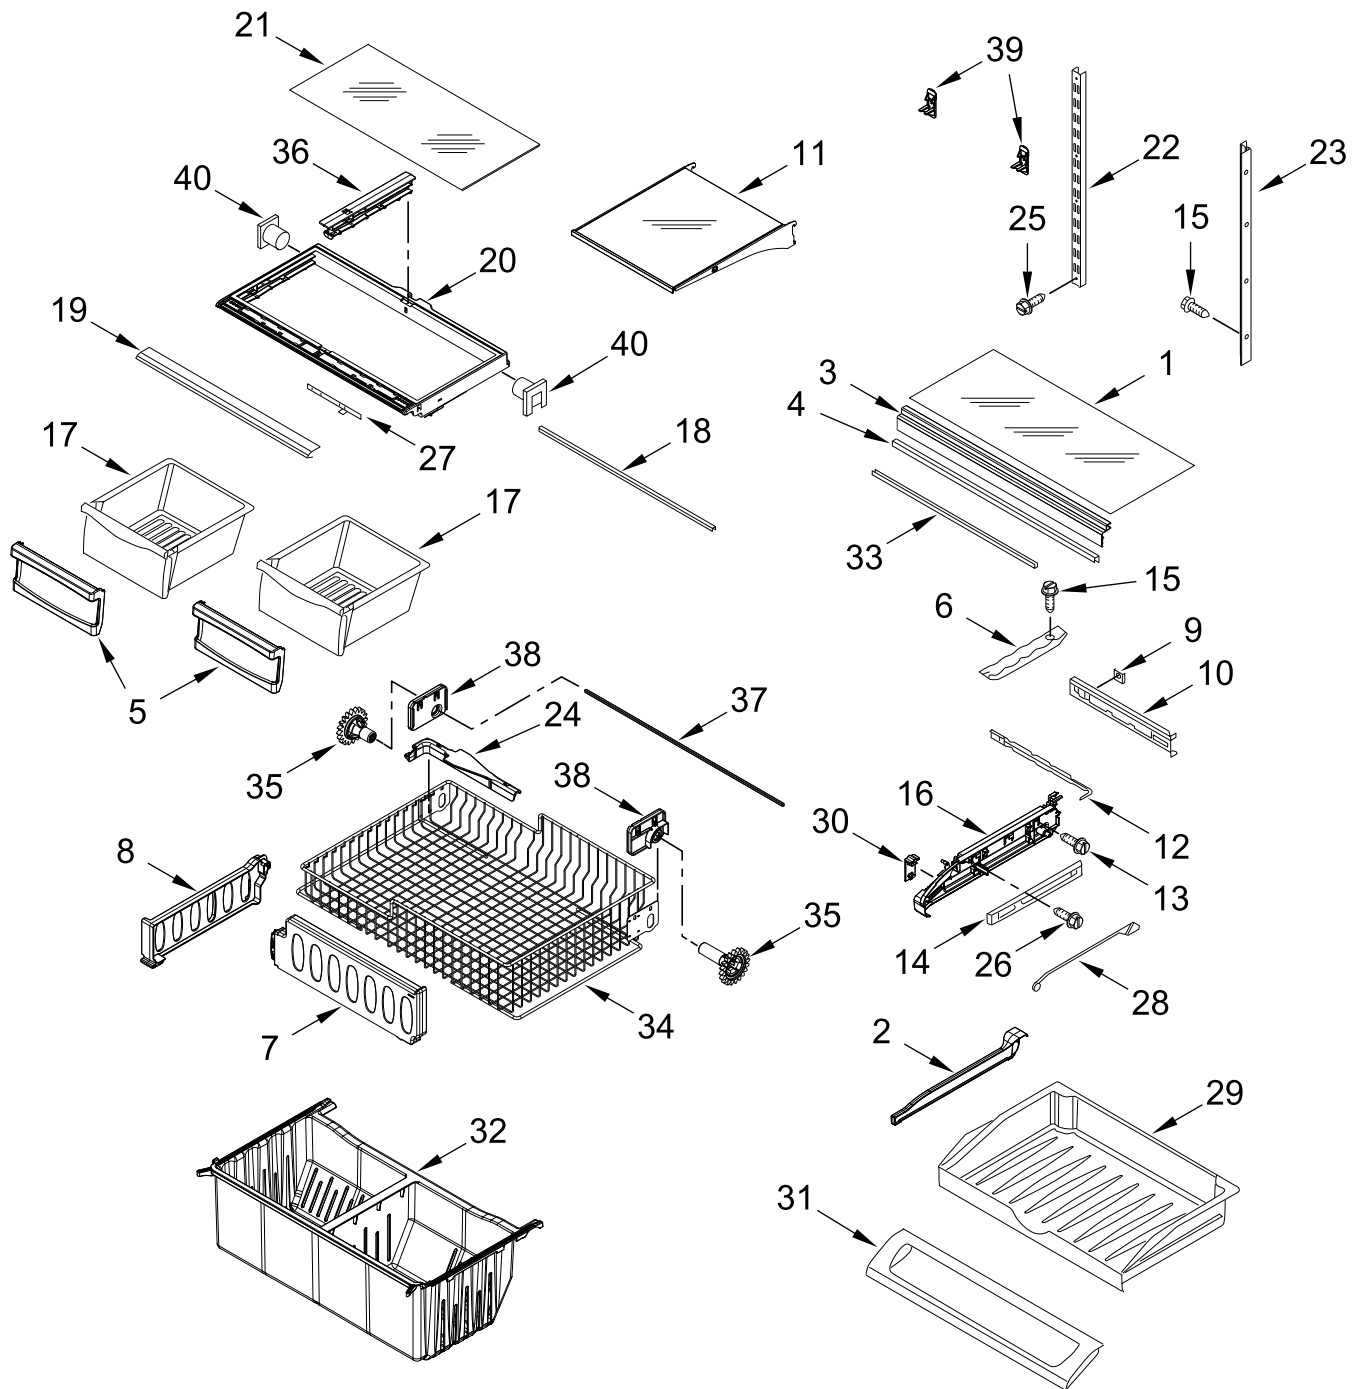

SHELF PARTS

Illus.
No.

Part No.

Description

1	12204820	Glass, Pantry
2	13048601SP	Divider, Pantry Drawer
3	13048801	Trim, Pantry Glass
4	W10528936	Support, Glass
5	12802302SP	Front, Crisper
6	12531901	Track, Deli Drawer
7	W10311695	Divider, Basket (Upper)
8	W10241046	Divider, Basket (Upper)
9	12656902	Gasket, Pantry
10	13048301	Housing, Control
11	W10743546	Assembly, Shelf
12	13048401	Slide, Temperature
13	12990512	Screw
14	W10235370	Glide, Pantry
15	12990513	Screw

Illus.
No.

Part No.

Description

16		Endcap, Pantry
	W11186157	Left Hand
	W11185285	Right Hand
17	12530505SP	Pan, Crisper
18	12227303WD	Brace, Crisper Cover
19	W10231343	Trim, Crisper
20	W10671241	Frame, Crisper
21	12204822	Glass, Crisper
22	W10273463	Ladder, Center
23	W10251969	Ladder, Side
24	W10149389N	Lift, Bail Arm
25	W10215666	Screw
26	12990504	Screw
27	12530805SP	Slide, Humidity Control
28	13048201	Bar, Control
29	W11427807	Drawer, Pantry
30	12655204	Knob, Temperature Control

Illus.
No.

Part No.

Description

31	12656823	Lid, Pantry
32	W11028627	Bin, Lower
33	W10783763	Brace, Crisper Frame
34	W11115252	Basket, Freezer (Upper)
35		Gear, Spur
	W10474716	Left Hand
	W10474715	Right Hand
36	W10671238	Rail, Center Crisper
37	W10802339	Shaft, Rack
38		Mount, Gear
	W10348259	Left Hand
	W10348260	Right Hand
39	12531802	Hook, Ladder
40		Support, Crisper
	12531001	Left Hand
	12531002	Right Hand

OPTIONAL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		TOUCH-UP PAINT
	72017	White
	511873	White Porcelain (2 oz.)
		PAINT, PRESSURIZED SPRAY (12 oz.)
	350930	White
	350942	White Primer
		Important: The spray paint is not to be used where the paint may make contact with the door gaskets.
		PAINT, BULK (1 QT.)
	799344	White (Uncut)
		MISCELLANEOUS
	212643	Sealer, Gum (4 Feet)
	479502	Tape, Vinyl (3/4 x 108")
	876370	Insulation (2 Pieces, 3" x 24" x 48")
	876305	Insulation Kit (14 Pieces, 3" x 24" x 48")
	978941	Insulation, Fiberglass (63 1/2" x 35 1/2" x 2 5/8")
	876029	Kit, Foam Slab (30" x 32 1/2" x 1 1/2")
	505587	Sealer, Mastic (1 Qt)
	503695	Cork, Sealer
	542638	Grease, Silicone (1/2 Oz.)
	542639	Cement, Alumilastic (1 1/4 Oz.)
	833938	Kit, Terminal Connector
	8003RP	Kit, Water Inlet
		TORX SCREW WRENCH
	1117510	Torx Key