




GAS RANGE

MODELS:

WFG525S0JS6 (Stainless)


COOKTOP PARTS

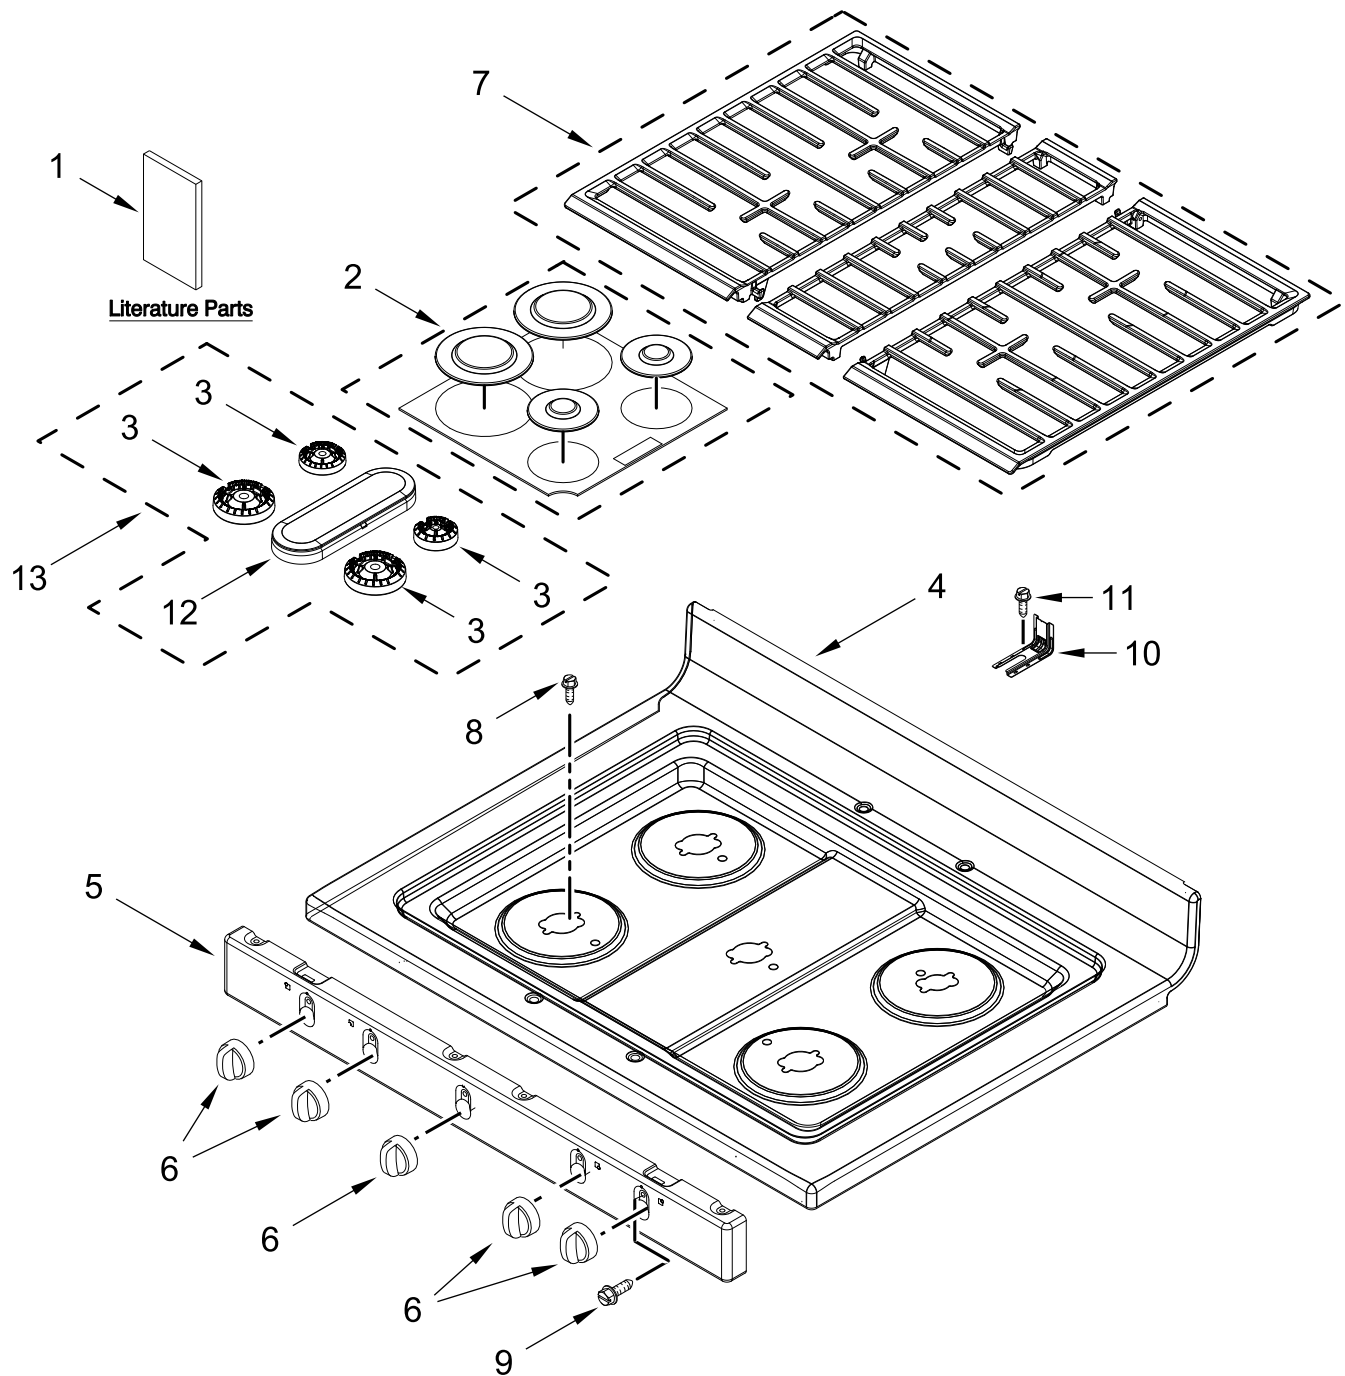

COOKTOP PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	4		Cooktop	13	W11367107	Burner Kit
	W11428051	Quick Start Guide		W11331126	Black			FOLLOWING PARTS NOT ILLUSTRATED
	W11426600	Owner's Manual	5		Panel, Manifold		W11457167	Harness, Main
	W11508882	Wiring Diagram		W11050776	Stainless		W11450461	Harness, Bake and Broil
2		Burner Cap Kit	6		Knob, Control			
	W11395131	Black (Set of 4)		W11510456	Stainless		3196520	Clip, Wire
3	W11352018	Spreader, Flame (Left Front and Right Front)	7		Grate Kit		W10334923	Clip, Gas Wiring
				W11090908	Black (Set of 3)		313438	Clip, Harness
	W11352020	Spreader, Flame (Right Rear)	8	W10673618	Screw		3196896	Clip, Wire
			9	3196557	Screw		3196173	Screw
	W11352021	Spreader, Flame (Left Rear)	10	W11379945	Bracket, Anti-Tip			(Grounding)
			11	7101P485-60	Screw, Anti-Tip Kit			
			12	W11357363	Oval Burner Assembly			


CONTROL PANEL PARTS

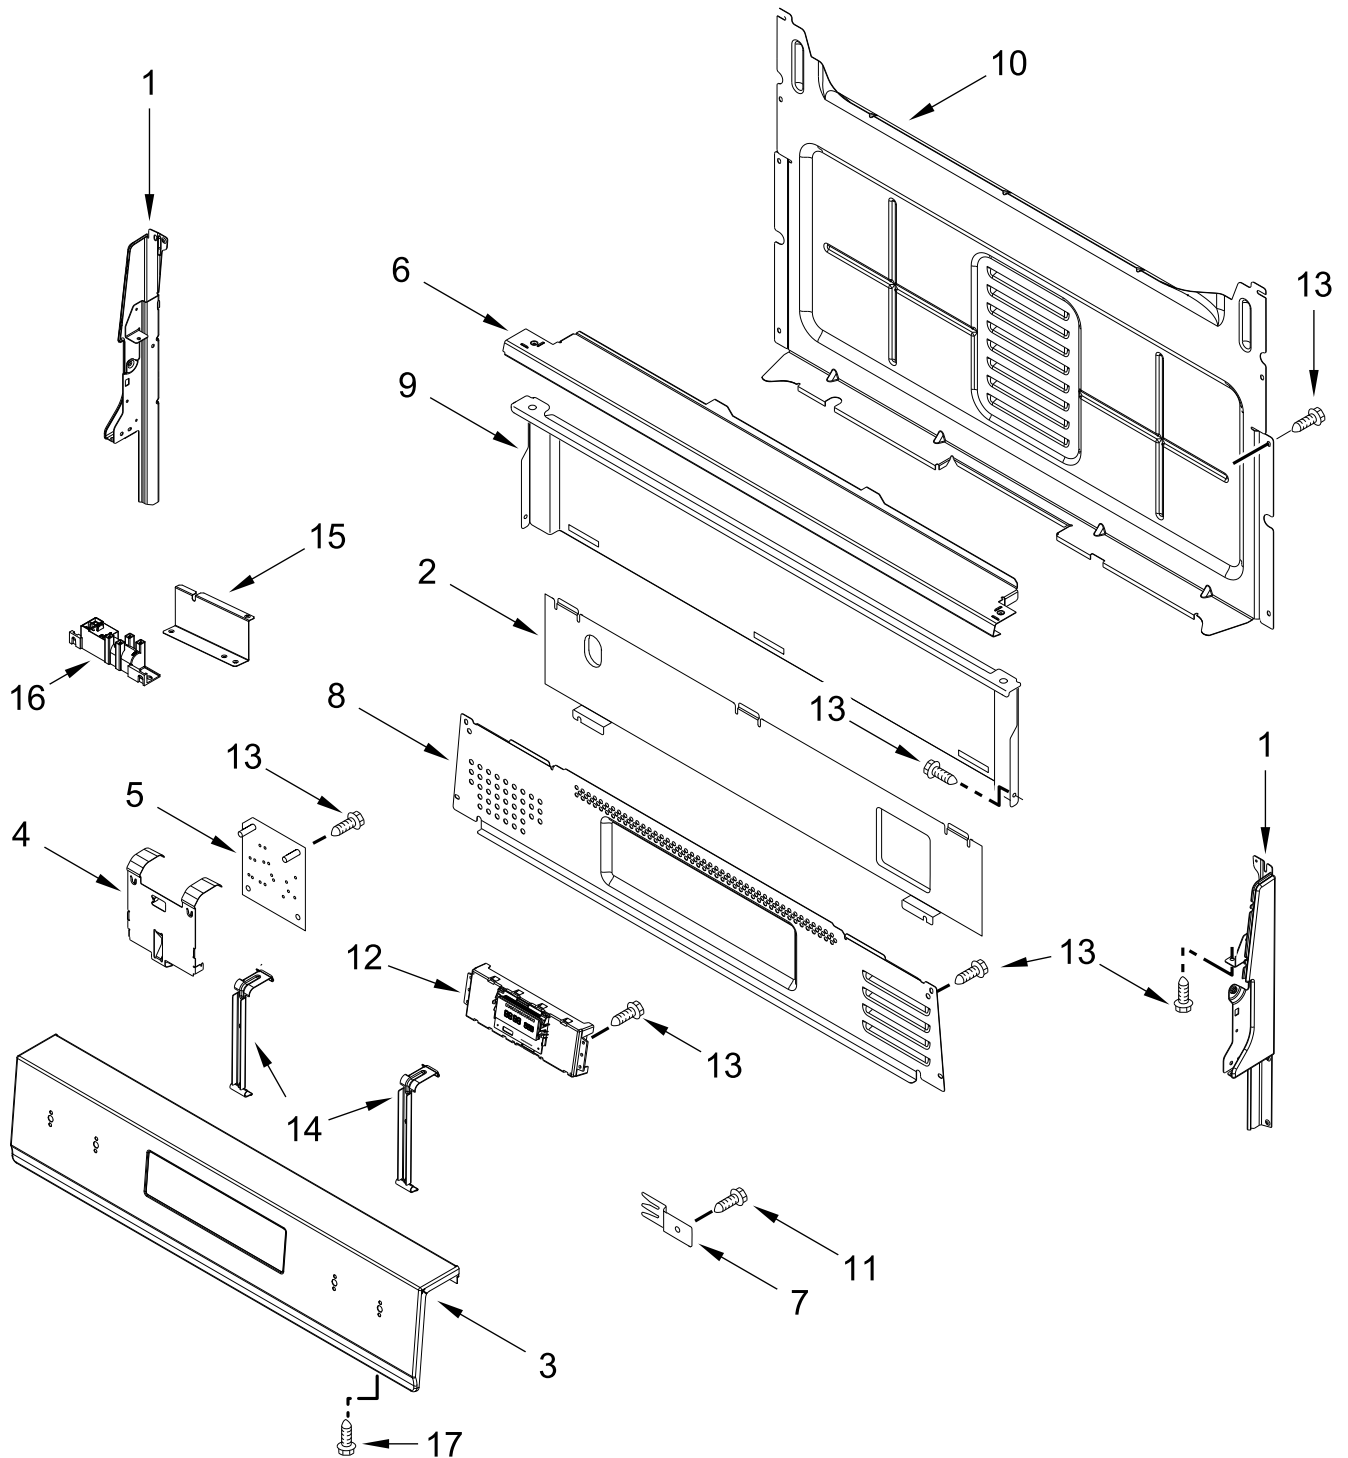

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Endcap	7	8523412	Bracket, Rear Cooktop	15	W10797001	Bracket, Ignitor
	W11130372	Black (Left)	8	W10198745	Cover, Upper	16	W11350452	Spark Module
	W11130379	Black (Right)	9	W10192841	Shield, Heat	17	3196165	Screw
2	8053505	Shield, Heat	10	W10184370	Cover, Back			
3		Panel, Control	11	3196169	Screw			
	W10835288	Stainless	12		Control, Electronic (LCX)			
4	W10762981	Bracket, Mounting		W11520699	Black			
5	W10920631	Module, Spark DSI	13	3196178	Screw			
6	W10516123	Bracket, Console Mounting	14	W10695491	Bracket, Control			


MANIFOLD PARTS

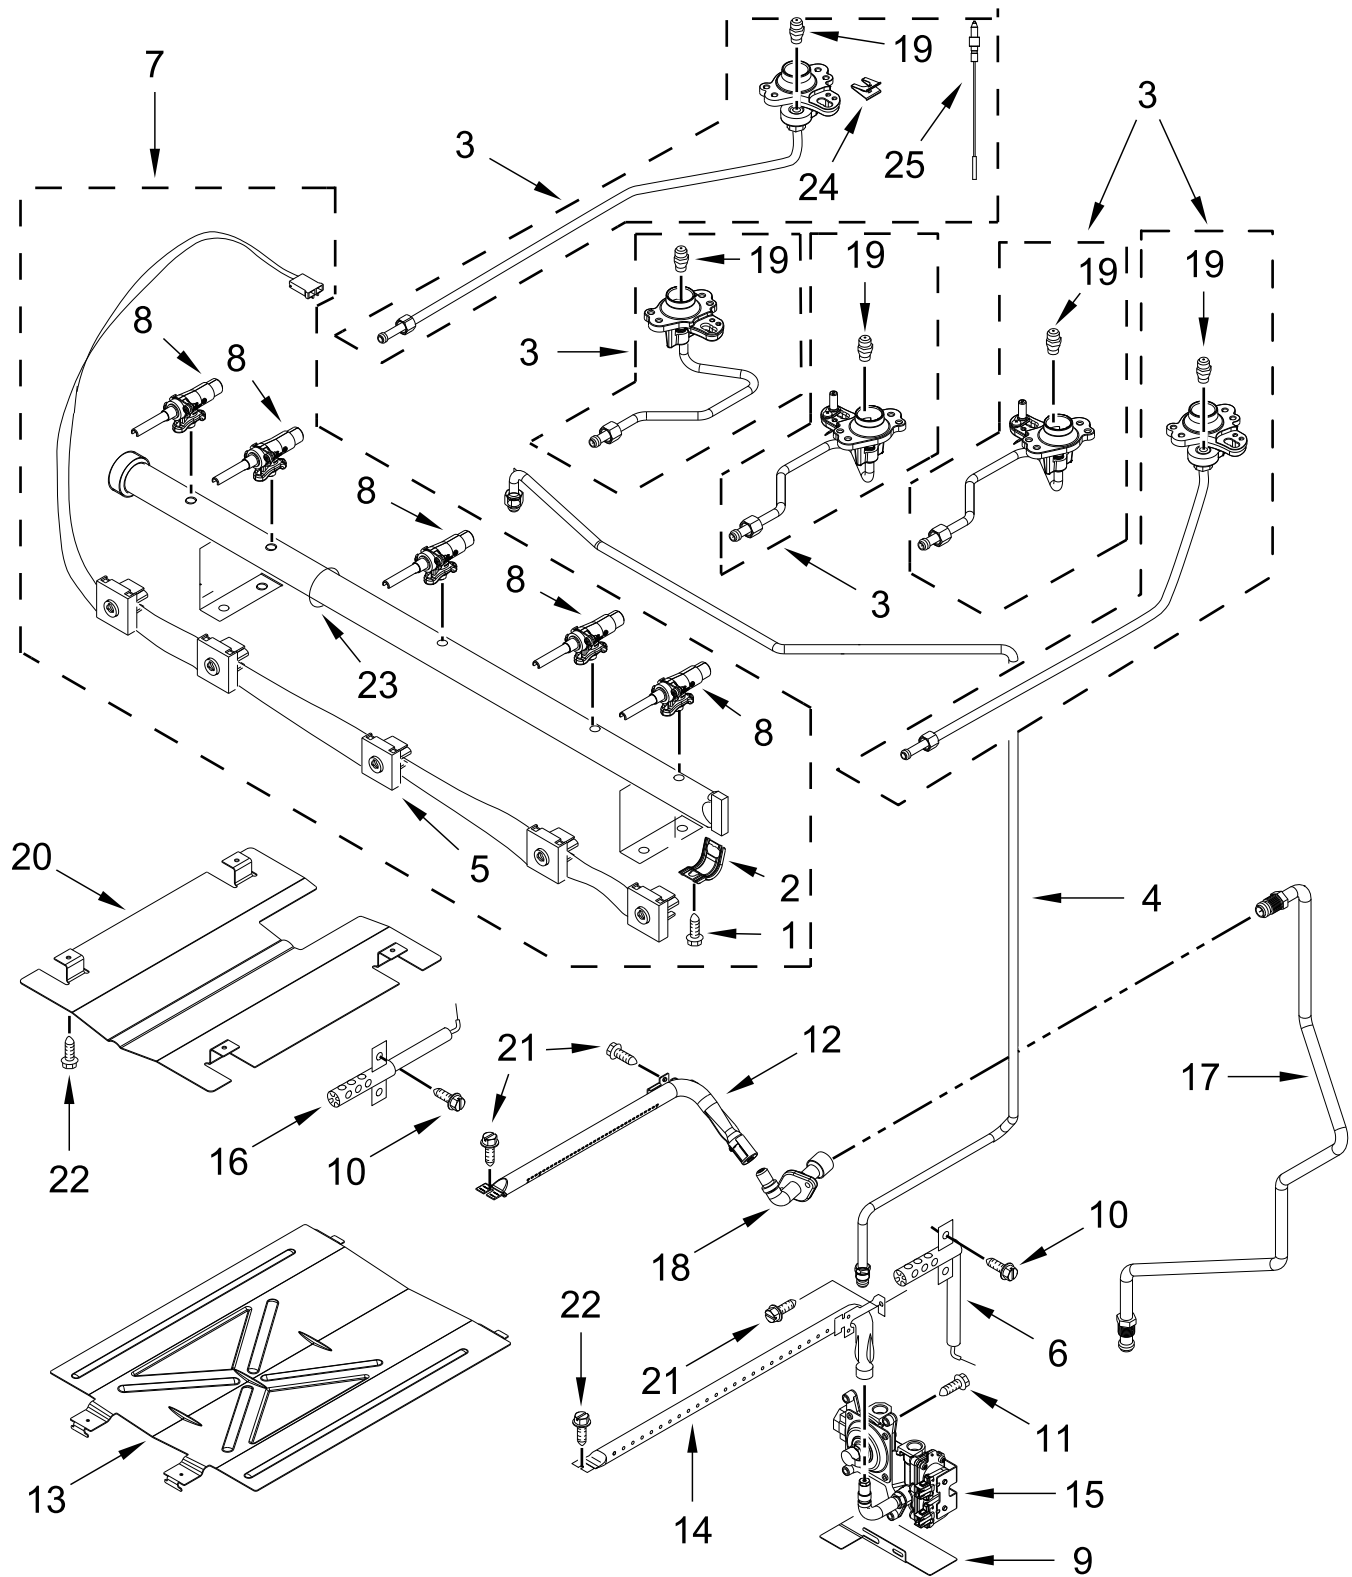

MANIFOLD PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11577792	Screw, Valve	9	W10224921	Bracket, Aegis	25	W11428831	Electrode
2	W10949105	Bracket, Saddle Valve	10	3196385	Screw			(Left Front, Left Rear, Center, Right Front)
3	W11459257	Orifice Holder Assembly (15K)	11	3400016	Screw			
		(Left Front)	12	8054078	Burner, Broiler	W11428858		Electrode
W11459258		Orifice Holder Assembly (9.5K)	13	W10184491	Spreader, Flame (Oven)			(Right Front, Right Rear)
		(Left Rear)	14	9758078	Burner, Bake			FOLLOWING PARTS NOT ILLUSTRATED
W11459260		Orifice Holder Assembly (15K)	15	W11370883	Regulator	W11489399		LP 5 Orifice Conversion Kit
		(Right Front)	16	W10333842	Electrode, Broil	W10566537		LP Bake and Broil Kit
W11459259		Orifice Holder Assembly (5K)	17	W10420040	Tube, Broiler Supply	W10400495		Orifice, LP Bake
		(Right Rear)	18	W11435700	Fitting, Broiler	W10465080		Orifice, LP Broil
W11459261		Orifice Holder Assembly (8K)	19	W11485872	Orifice (15K)			
		(Center)		W11485873	Orifice (9.5K)			
4	W10215439	Tubing (Manifold to Regulator)		W11485871	Orifice (5K)			
5	W11537754	Harness, Igniter (Includes Switches)		W11485874	Orifice (8K)			
6	W11450459	Electrode, Bake			(Center)			
7	W11510000	Manifold Assembly	20	W10137062	Spreader, Flame (Broiler)			
8	W11509685	Valve, Gas	21	3196265	Screw			
		(Left Front and Right Front)	22	W10362924	Screw			
W11509686		Valve, Gas	23	W10182767	Tie, Manifold Wire			
		(Left Rear and Center)	24	W10827923	Electrode, Spring			
W11509687		Valve, Gas						
		(Right Rear)						


CHASSIS PARTS

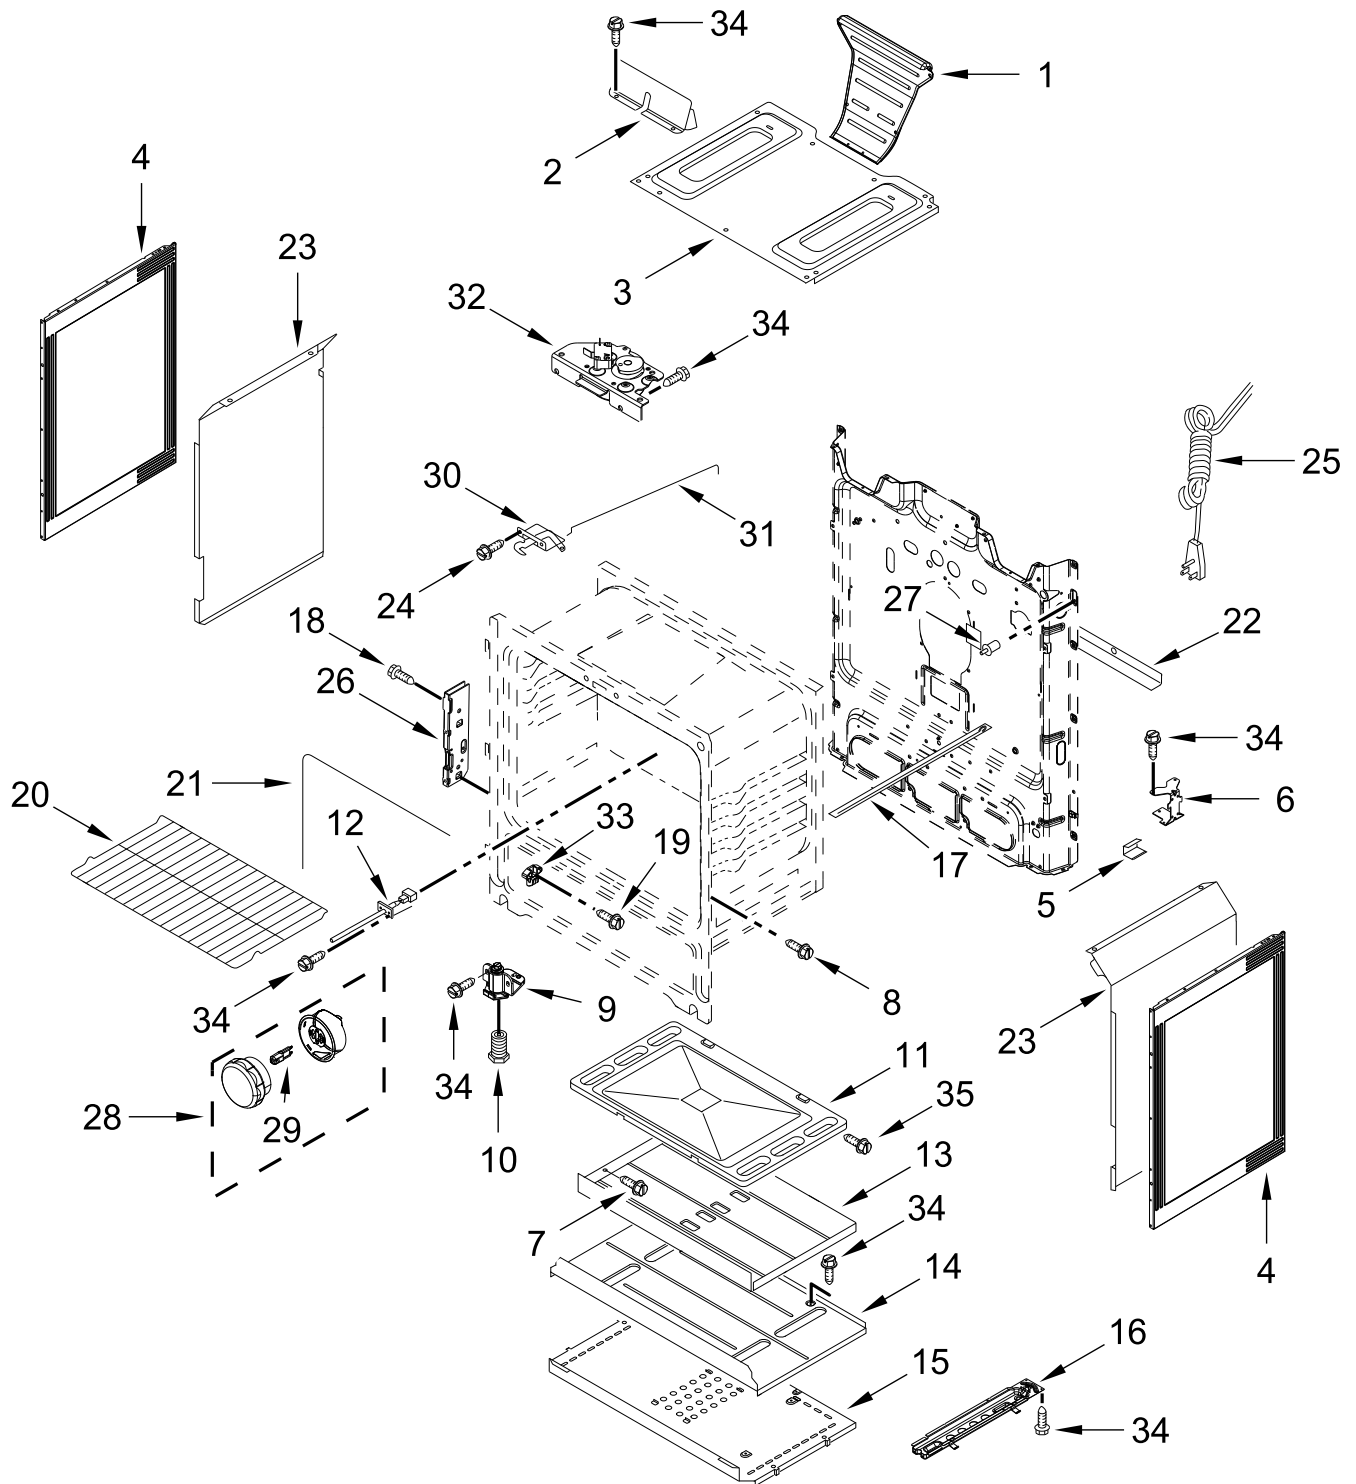

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11457094	Box, Flue	16	W10390008	Base Rail Assembly (Left)	28	W11634772	Light Assembly
2	8272747	Shield, Flue				29	W10571723	Bulb, Halogen 40 Watts
3	W11379351	Box-Burner, Gas Sealed		W10390007	Base Rail Assembly (Right)	30	9761013	Front Door Latch Assembly
4		Panel, Side	17	9757239	Rod, Door Switch	31	W10078370	Rod, Push Latch
	W10162245	Black	18	W10031780	Screw	32	W10107820	Rear Door Latch Assembly
5	W10137382	Clip, Panel	19	3400080	Screw	33	W10674705	Glide, Drawer Front
6	8523249	Bracket, Manifold	20	W11173792	Rack, Oven	34	3196178	Screw
7	W10362924	Screw	21	W11491751	Seal, Door	35	W10379120	Screw
8	3196560	Screw	22	W10435470	Brace, Main Back			FOLLOWING PARTS NOT ILLUSTRATED
9	W10341186	Front Foot Assembly	23	W11379353	Retainer, Insulation (Left)			
10	W10058460	Foot, Leveling		W11379943	Retainer, Insulation (Right)		8524099	Insulation, Wrap
11	3195097	Bottom, Oven	24	3196560	Screw		W10180437	Insulation, Back
12	W10586204	Sensor	25	W10910642	Cord, Power			
13	8053967	Baffle, Burner Oven	26	W10289077	Receiver, Hinge			
14	8053969	Shield, Heat	27	W11511828	Switch, Door			
15	8053968	Shield, Lower						


DOOR PARTS

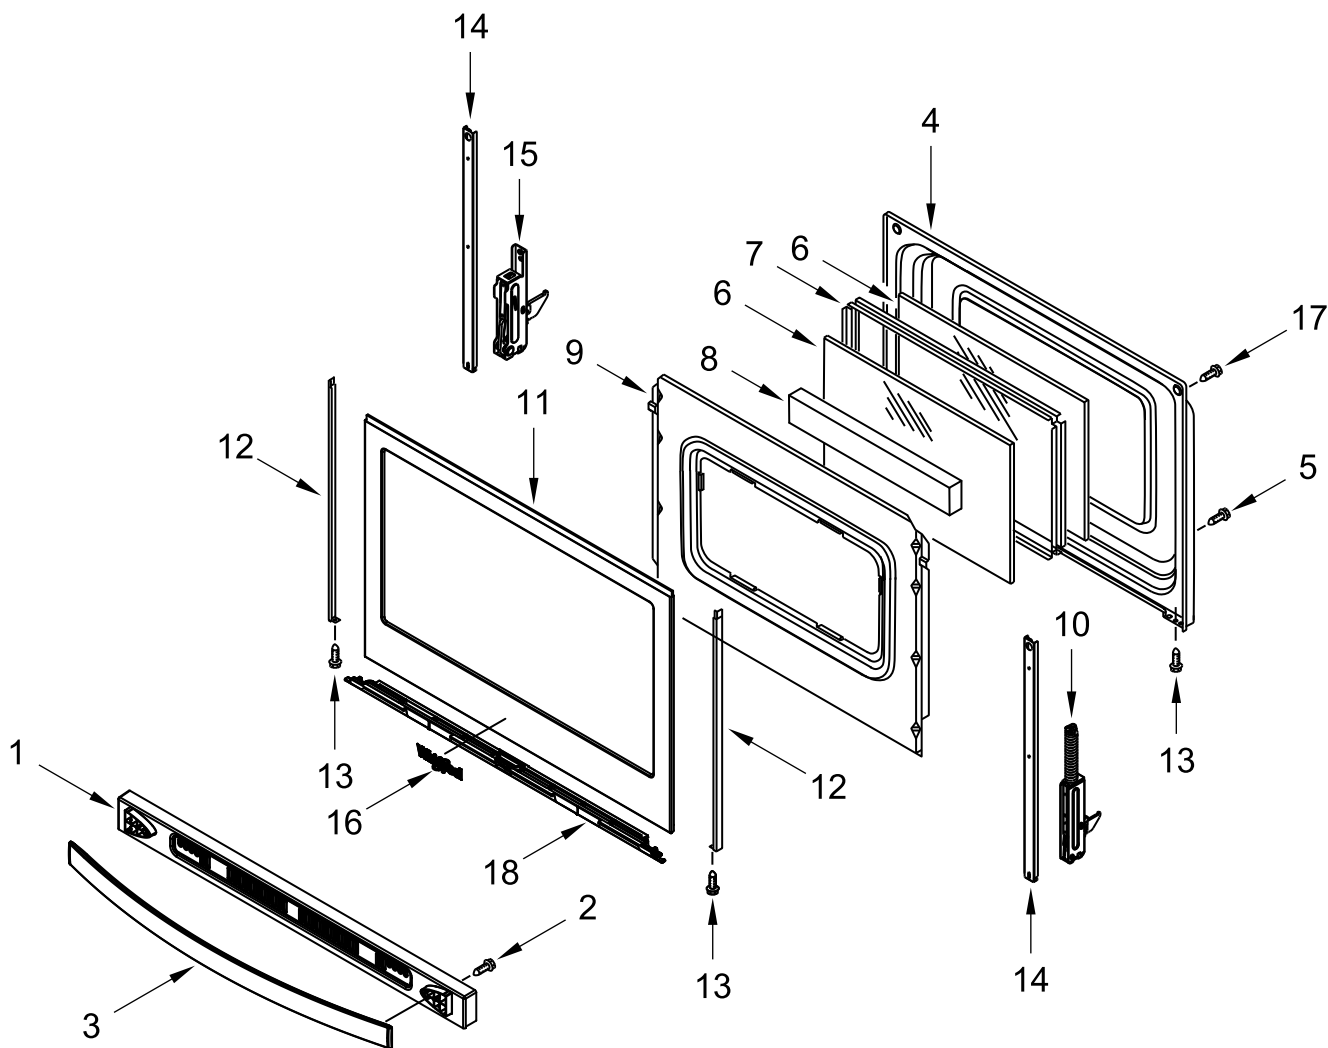

DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Trim, Top (Includes Standoff)	10	W10299224	Hinge, Active (With Spring)	18		Trim, Lower Door
	W11242950	Stainless	11		Glass, Outer Door		W11444043	Black
2	W10480830	Screw		W10884159	Black			
3		Handle, Door	12		Trim, Door			
	W11242950	Stainless		W10746436	Black (Left)			
4	9761344	Liner, Door		W10746435	Black (Right)			
5	W10031790	Screw	13	W10327235	Screw			
6	W11044424	Glass, Inner	14	W11379944	Strap, Door			
7	W10316950	Frame, Glass	15	W10299227	Hinge, Door (Passive)			
8	W10278991	Insulation, Door Strip	16	W10884775	Badge			
9	W11380222	Retainer, Insulation	17	W10200660	Screw			

DRAWER PARTS

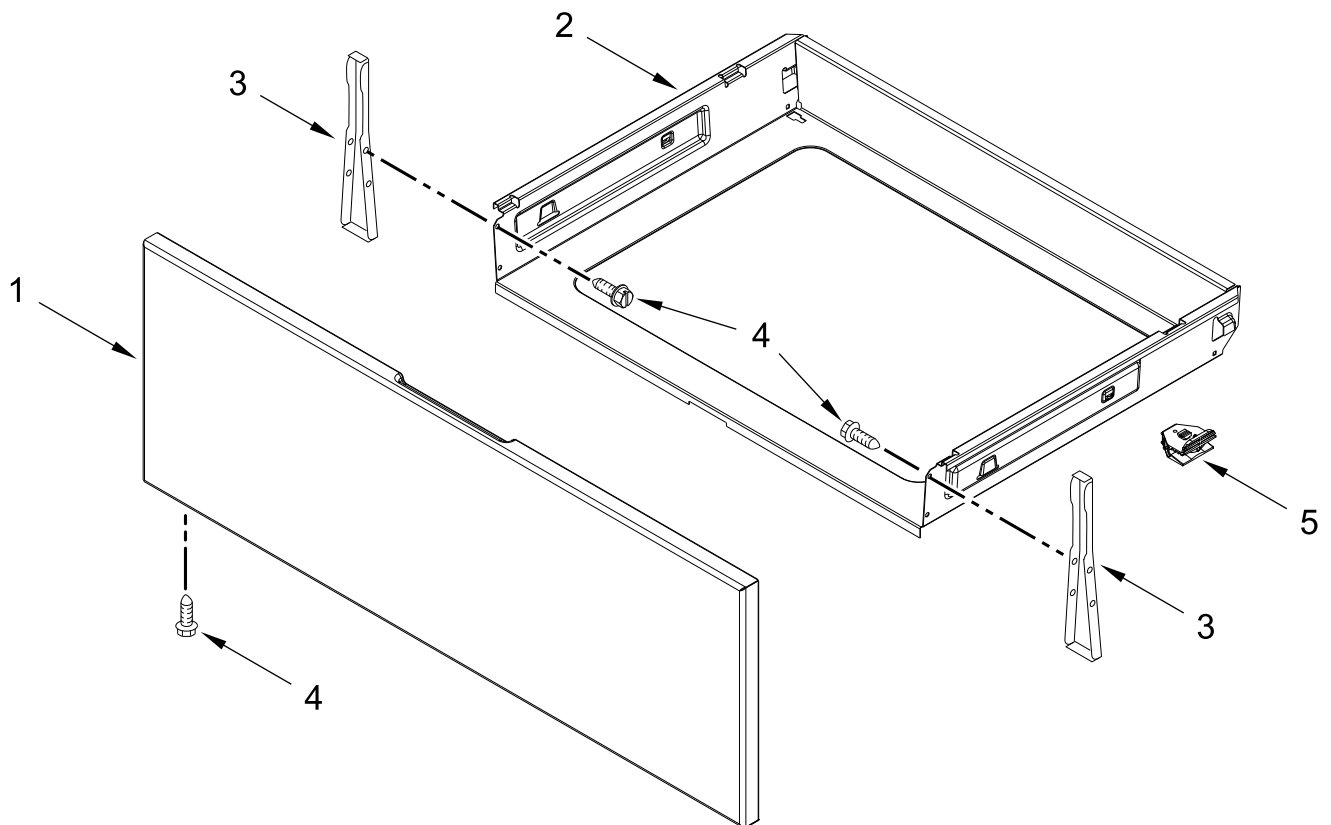

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Panel, Drawer Front	2	W10688022	Drawer, Storage	4	3196169	Screw
	W11190207	Stainless	3	W10462909	Bracket, Mounting	5	W10674708	Glide, Drawer Rear

OPTIONAL PARTS (NOT INCLUDED)

REFINISHING MATERIAL

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

INSULATION

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2 x 24 x 120 in)
	240132	Insulation (2-1/2 x 22 x 120 in)

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	4392899	Biscuit and Bisque
	72017	White
	511873	White Porcelain (2 oz.)

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	285006	Black
	350930	White

PAINT, BULK (1 QT.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

ACCESSORY PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	W10355016	Cleaner, Stainless Steel
	4396096RB	Griddle
	4396923	Broiler Pan and Grid
	W10123240	Rack, Broiler Pan and Roasting