




DRYER/WASHER LAUNDRY SYSTEM

MODELS:

WET4024HW0 (White)


DRYER CONTROL PANEL PARTS

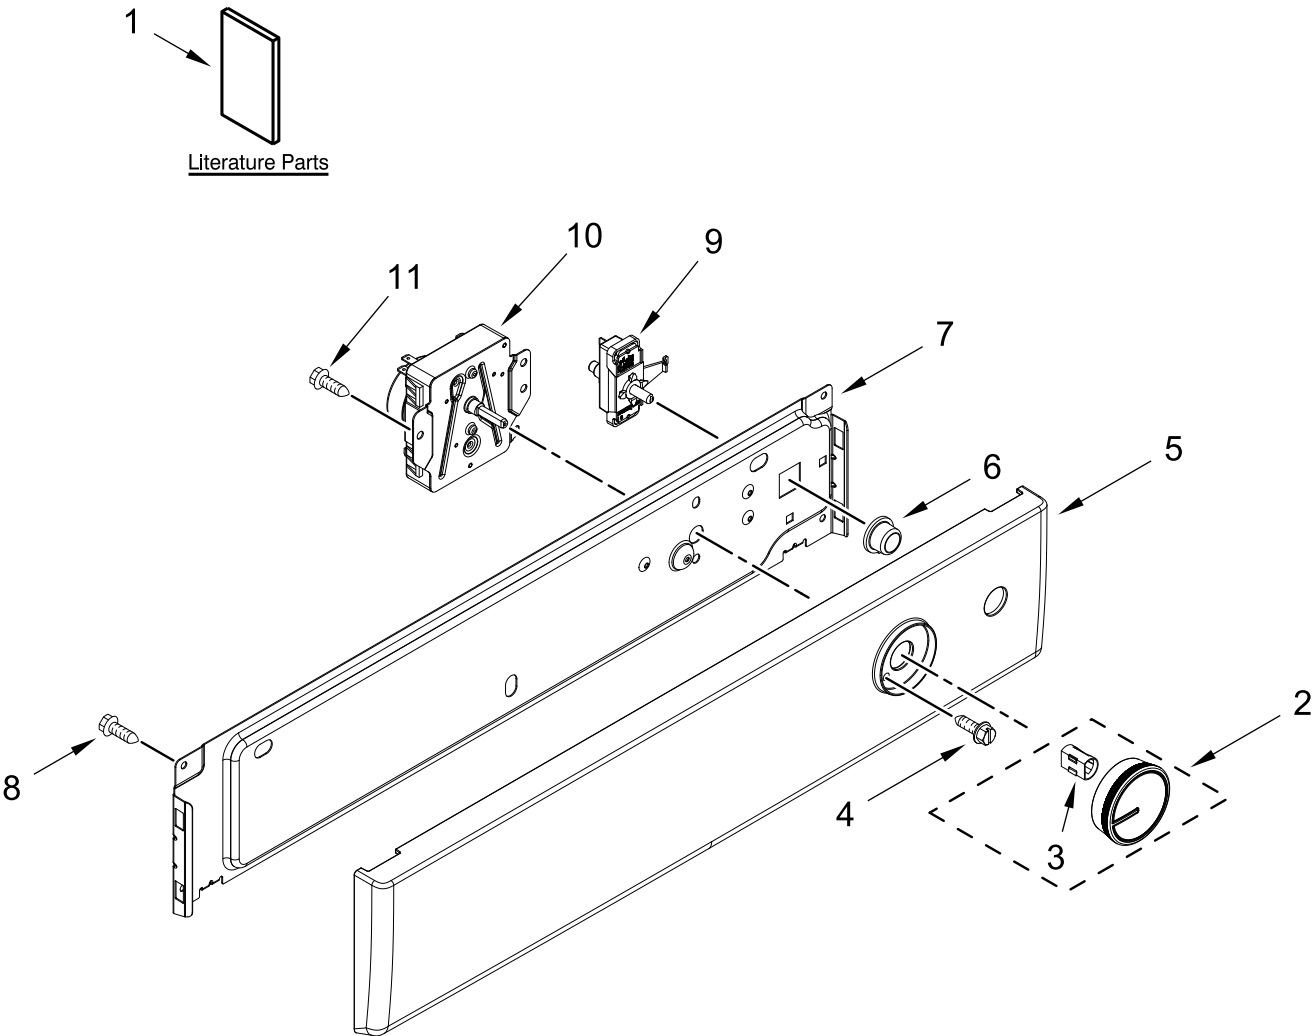

DRYER CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	2		Assembly, Timer Knob	7	W11088944	Bracket, Console
	W11028718	Installation Instructions		W10576634	White/Metallic	8	343641	Screw
	W11107884	Use and Care Guide	3	688805	Clip, Spring	9	3977456	Switch, Push-To-Start
	W11097397	Wiring Diagram	4	W10141518	Screw	10	W10642934	Timer Assembly
	W11129496	Energy Guide	5	W11034585	Fascia, Console	11	90767	Screw
			6	W11093211	Button, Push To Start			


DRYER FRONT PANEL AND DOOR PARTS

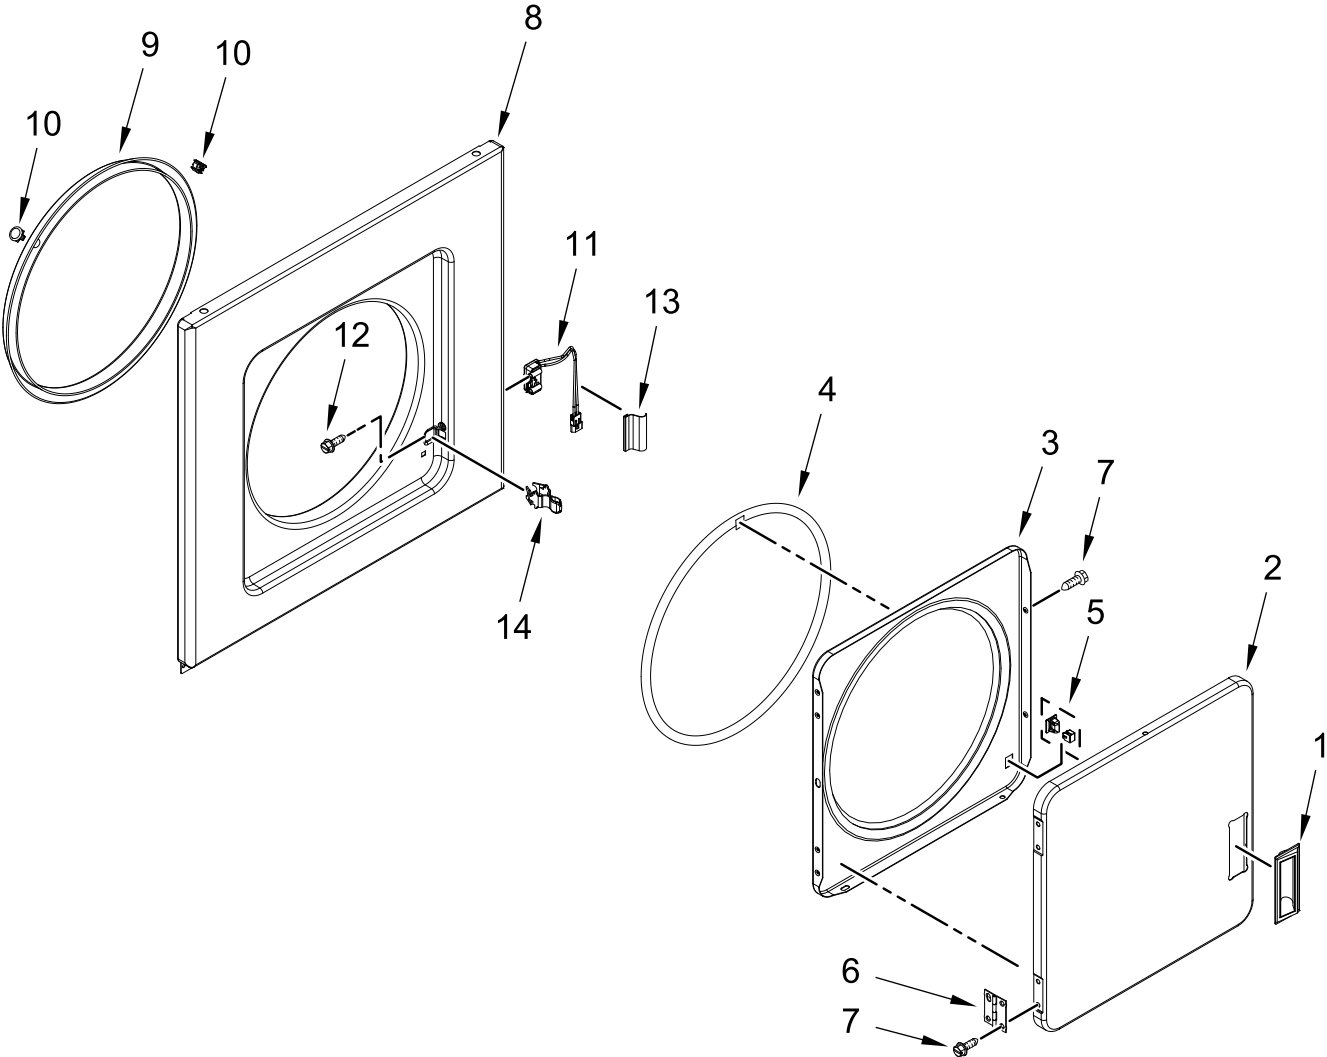

DRYER FRONT PANEL AND DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	686711	Handle, Door	6	348023	Hinge and Pin Assembly	10	685203	Clip, Felt Pad
2		Door, Outer				11	3406108	Switch, Door
	348205	White	7	342055	Screw	12	697773	Screw
3	695656	Door, Rear	8	692619	Panel, Front	13	686770	Protector Support
4	W10823581	Seal, Door	9	8066123	Seal and Bearing Assembly	14	696144	Strike, Door
5	3389441	Assembly, Door Catch						


DRYER CABINET AND MOTOR PARTS

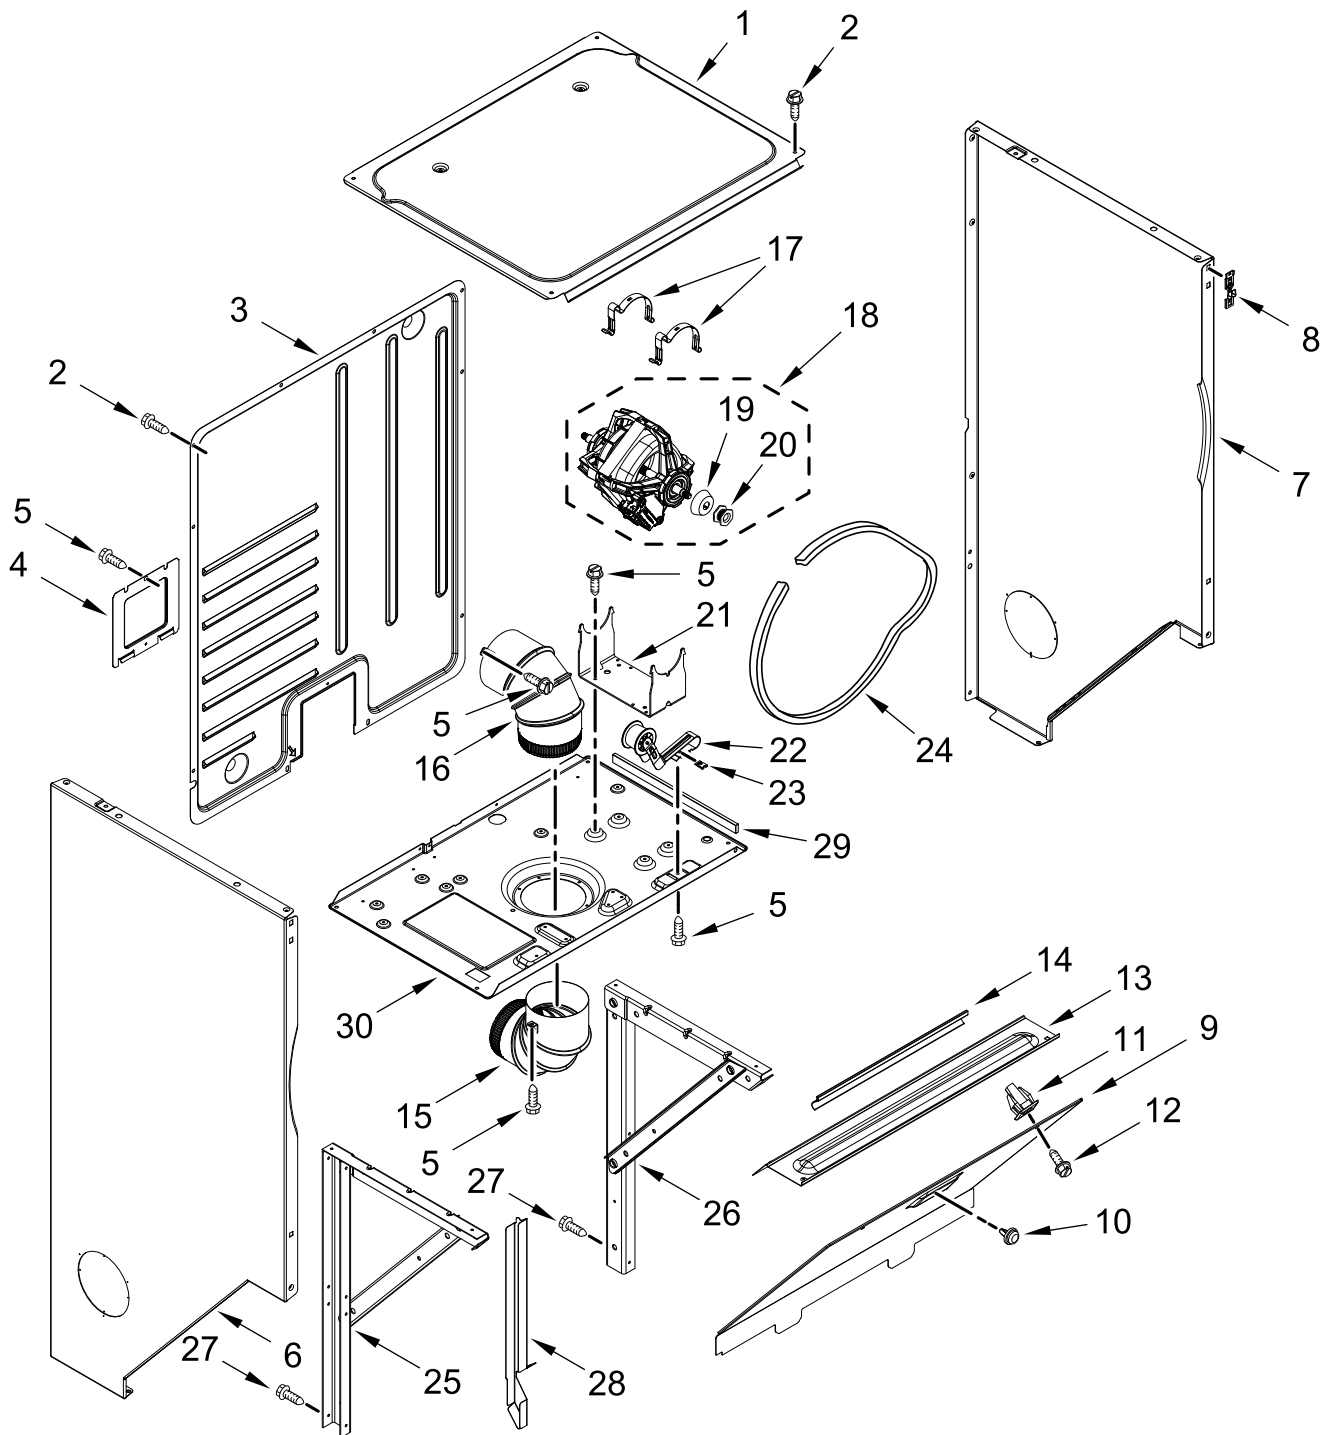

DRYER CABINET AND MOTOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	692641	Top, Dryer	12	693304	Screw	24	8066064	Belt, Drive
2	343641	Screw	13	W11089868	Panel, Closure	25	W11050012	Support, Dryer (Left Hand)
3	W11134947	Panel, Rear	14	686770	Protector Support	26	W11050013	Support, Dryer (Right Hand)
4	3394228	Cover, Terminal Block	15	3399603	Elbow, Lower	27	3400000	Screw
5	3390631	Screw	16	3399602	Elbow, Upper	28	W11049216	Bracket, Rear Harness Cover
6	3402293	Panel, Side (Left Hand)	17	W10121316	Clamp, Motor Mount	29	W10560609	Pad
7	3402287	Panel, Side (Right Hand)	18	W10396037	Motor, Main Drive (60 Hz)	30	3399632	Base, Dryer
8	W10775448	Clip, Front Panel	19	3393657	Restrainer, Belt			
9	W11205493	Panel, Transition	20	8066051	Pulley, Motor			
10	8572266	Bumper, Door	21	696541	Base, Motor			
11	692400	Screw Grommet	22	691366	Idler Assembly			
			23	692771	Nut, Idler Bracket To Base			


DRYER BULKHEAD PARTS

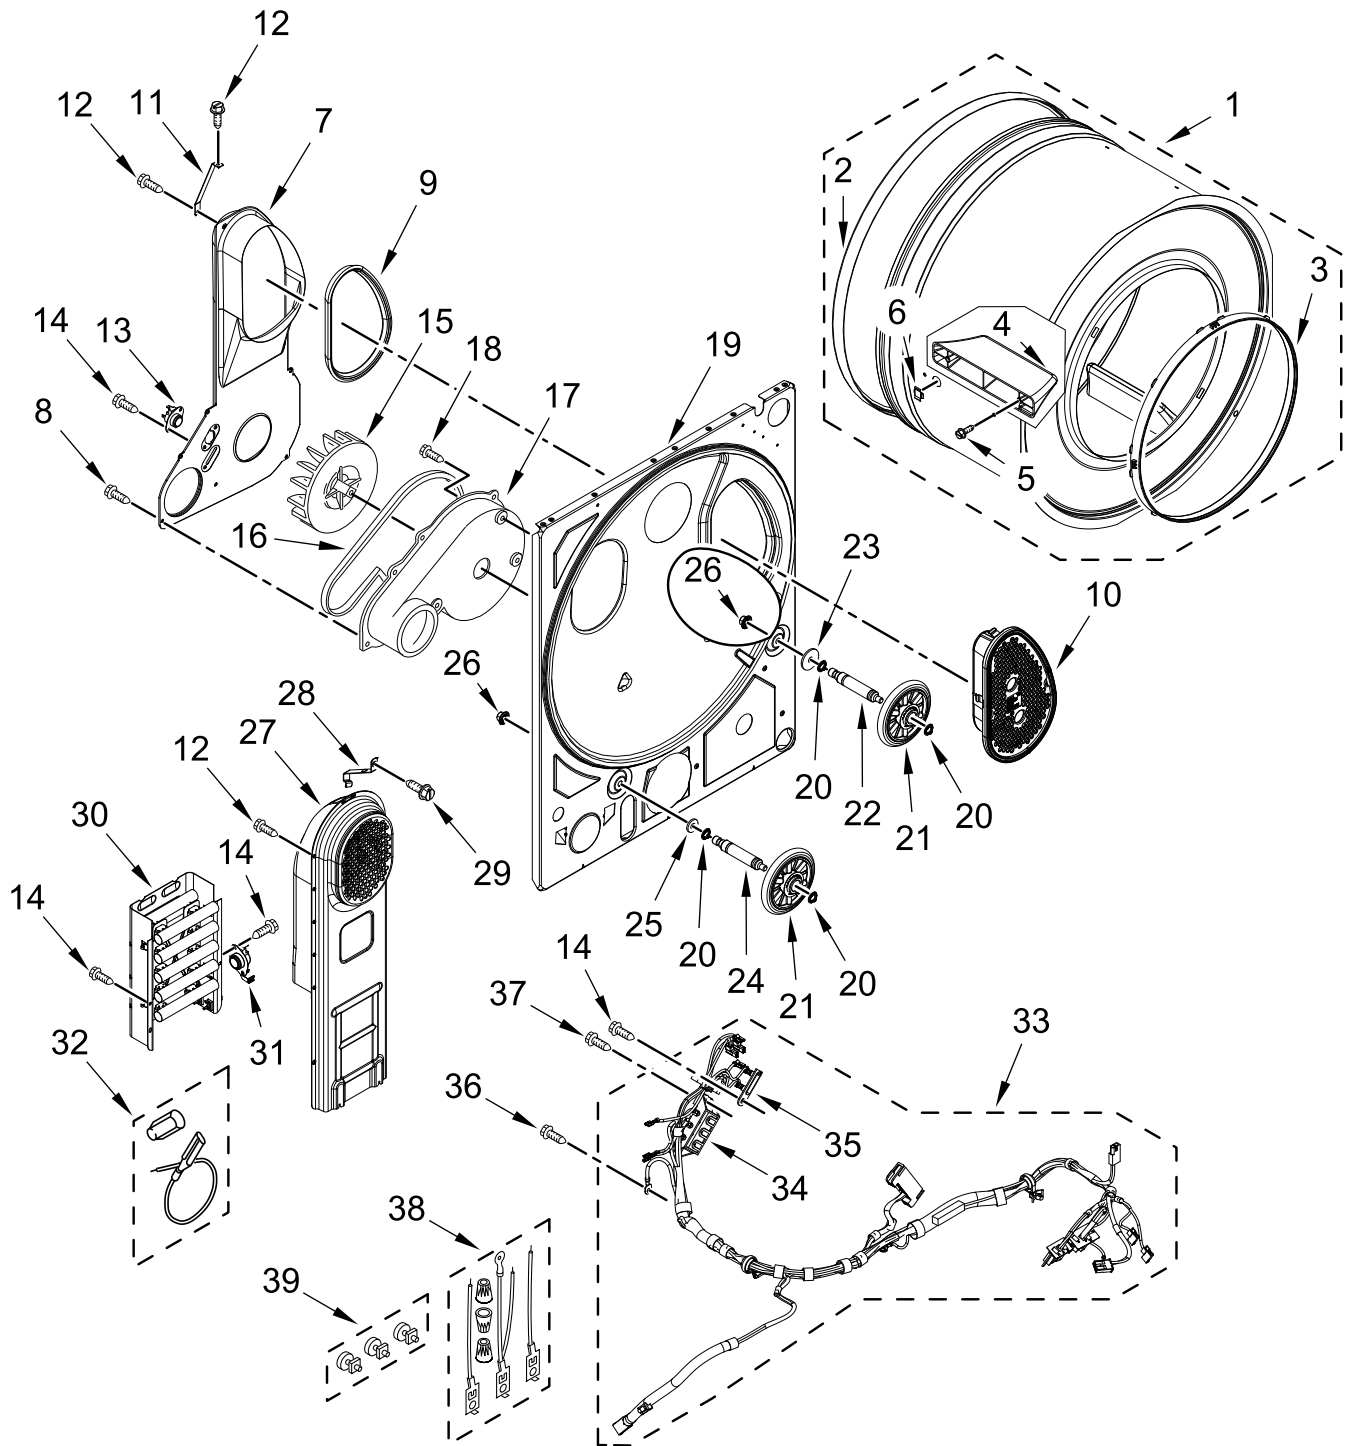

DRYER BULKHEAD PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	695943	Drum Assembly Complete	16	8066094	Seal, Fan Scroll	32	279457	Terminal Wire Kit (For Heater Element Wiring Harness Repair)
2	345648	Seal, Drum Rear	17	696418	Fan Scroll			
3	3394508	Ring, Bearing	18	3390631	Screw	33	W11090772	Harness, Main Dryer Wiring
4	685207	Baffle, Drum	19	695931	Bulkhead			
5	W10219342	Screw	20	W10512946	Washer, Tri Ring	34	3397659	Block, Terminal
6	8066086	Plug, Drum Hole	21	3397590	Roller, Support	35	3392519	Fuse, Thermal (91C)
7	696547	Air Duct and Bracket Assembly	22	W10359269	Shaft, Drum Roller - Right Hand Thread	36	W10773242	Screw
8	343641	Screw	23	3388703	Washer	37	3393008	Screw
9	339956	Seal	24	W10359270	Shaft, Drum Roller - Left Hand Thread	38	279318	Terminal, Brass and Tinned (Includes Terminal Block Screw Kit)
10	8531966	Cover, Lint Screen Outlet	25	348197	Washer			
11	3395396	Clip, Air Duct To Bulkhead	26	W10298789	Nut, Hex	39	279393	Screw Kit, Terminal Block
12	3390663	Screw	27	3401380	Box, Heater			
13	3398128	Thermostat, Internal Bias	28	3398161	Clip, Heater Box			
14	90767	Screw	29	489463	Screw			
15	696426	Wheel, Blower	30	3403586	Element, Heater			
			31	3404154	Thermostat, High Limit (200~/160F)			


WASHER TOP AND CONTROL PARTS

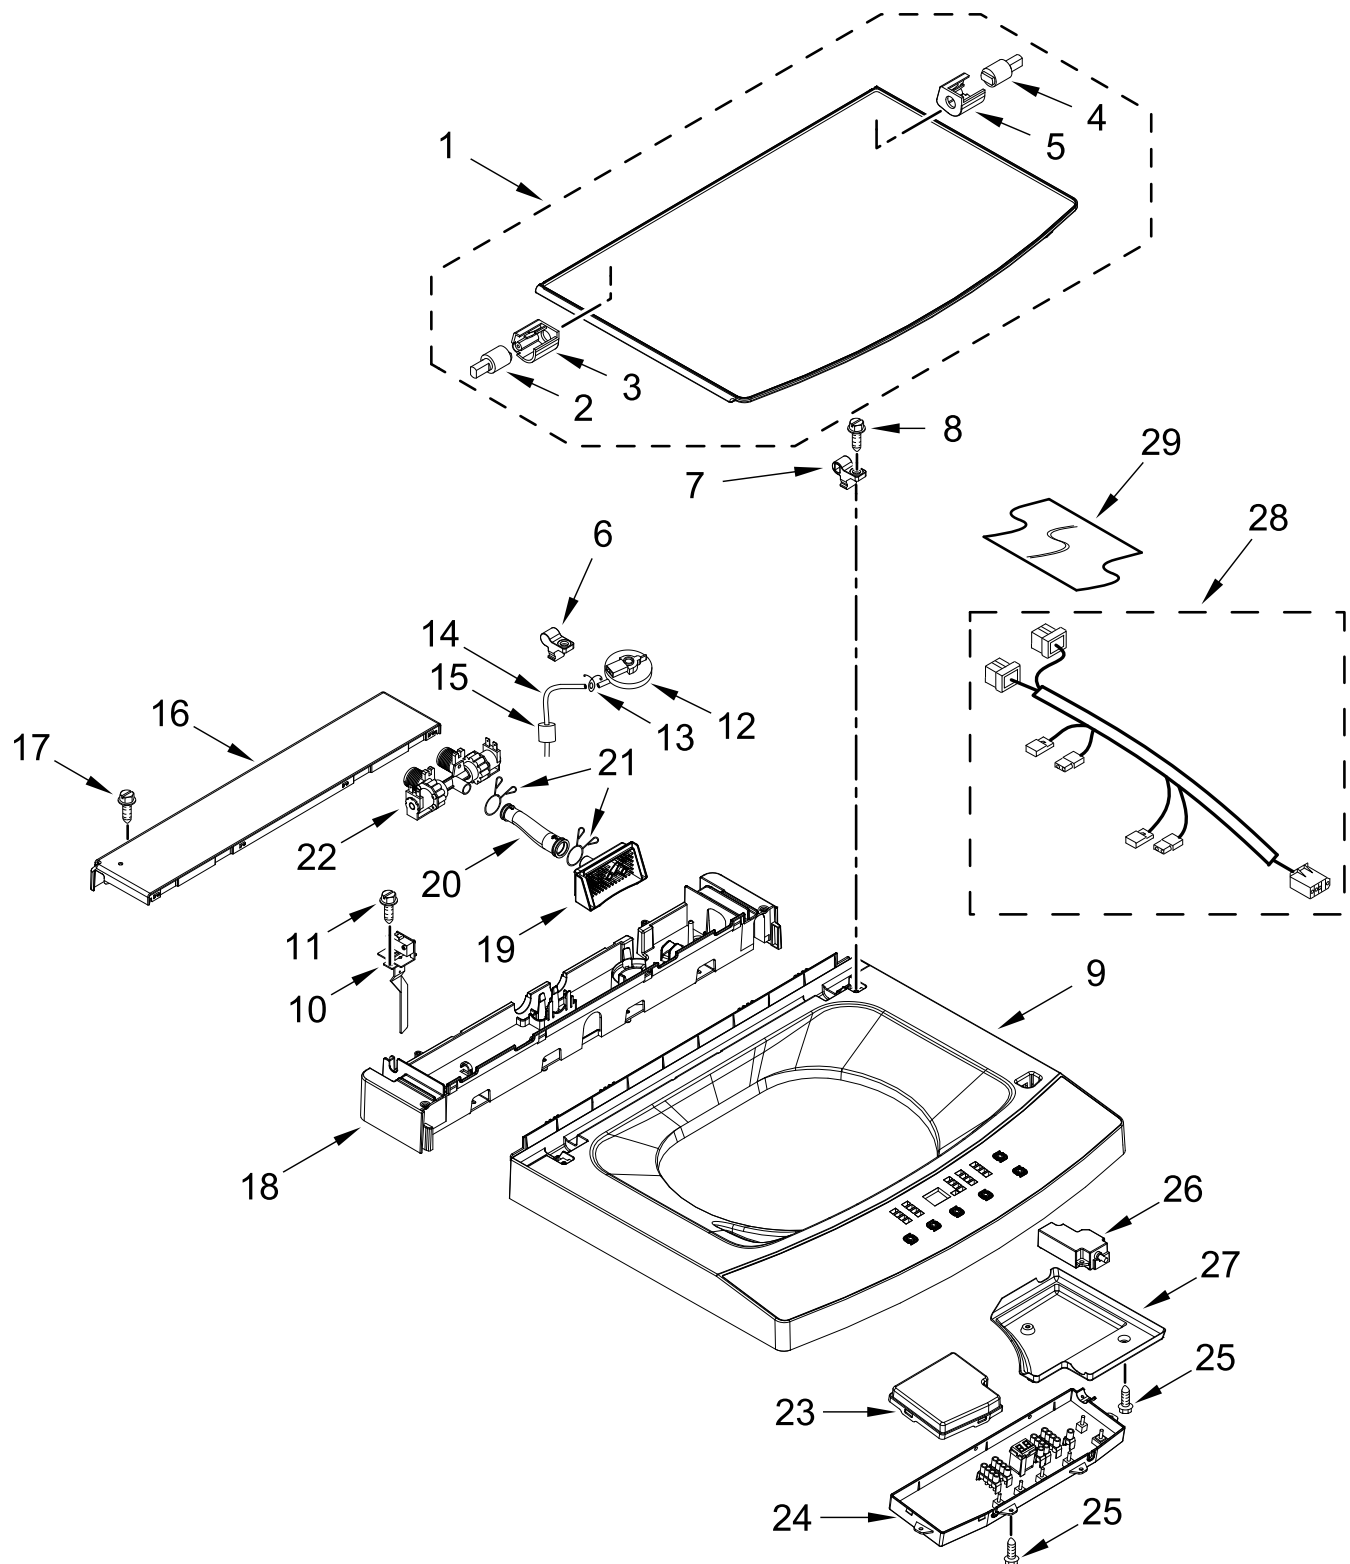

WASHER TOP AND CONTROL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11156397	Lid	13	W10883610	Clamp, Hose	25	W10869504	Screw
2	W11174363	Damper (Left)	14	W10882407	Hose, Pressure Switch	26	W10869789	Latch, Lid Lock
3	W11174364	Cover, Damper (Left)	15	W10882410	Sleeve, Hose	27	W11174395	Cover, Control (Lower)
4	W11174368	Damper (Right)	16	W11174342	Cover, Water Inlet	28	W11174382	Main Harness
5	W11174365	Cover, Damper (Right)	17	W10869502	Screw	29	W11182556	Cloth, Harness Protector
6	W11174370	Rotary Shaft (Left)	18	W11184194	Housing, Water Inlet			
7	W11174371	Rotary Shaft (Right)	19	W11174384	Fill, Water Inlet			
8	W11174373	Screw	20	W11174387	Hose, Water Inlet			
9	W11219589	Top, Control Console	21	W11174391	Clamp			
10	W10869495	Switch, Off Balance	22	W10869511	Valve, Water Inlet			
11	W10869499	Screw	23	W11174392	Cover, Control (Upper)			
12	W10869500	Switch, Pressure	24	W11176140	Machine Control Unit			


WASHER CABINET PARTS

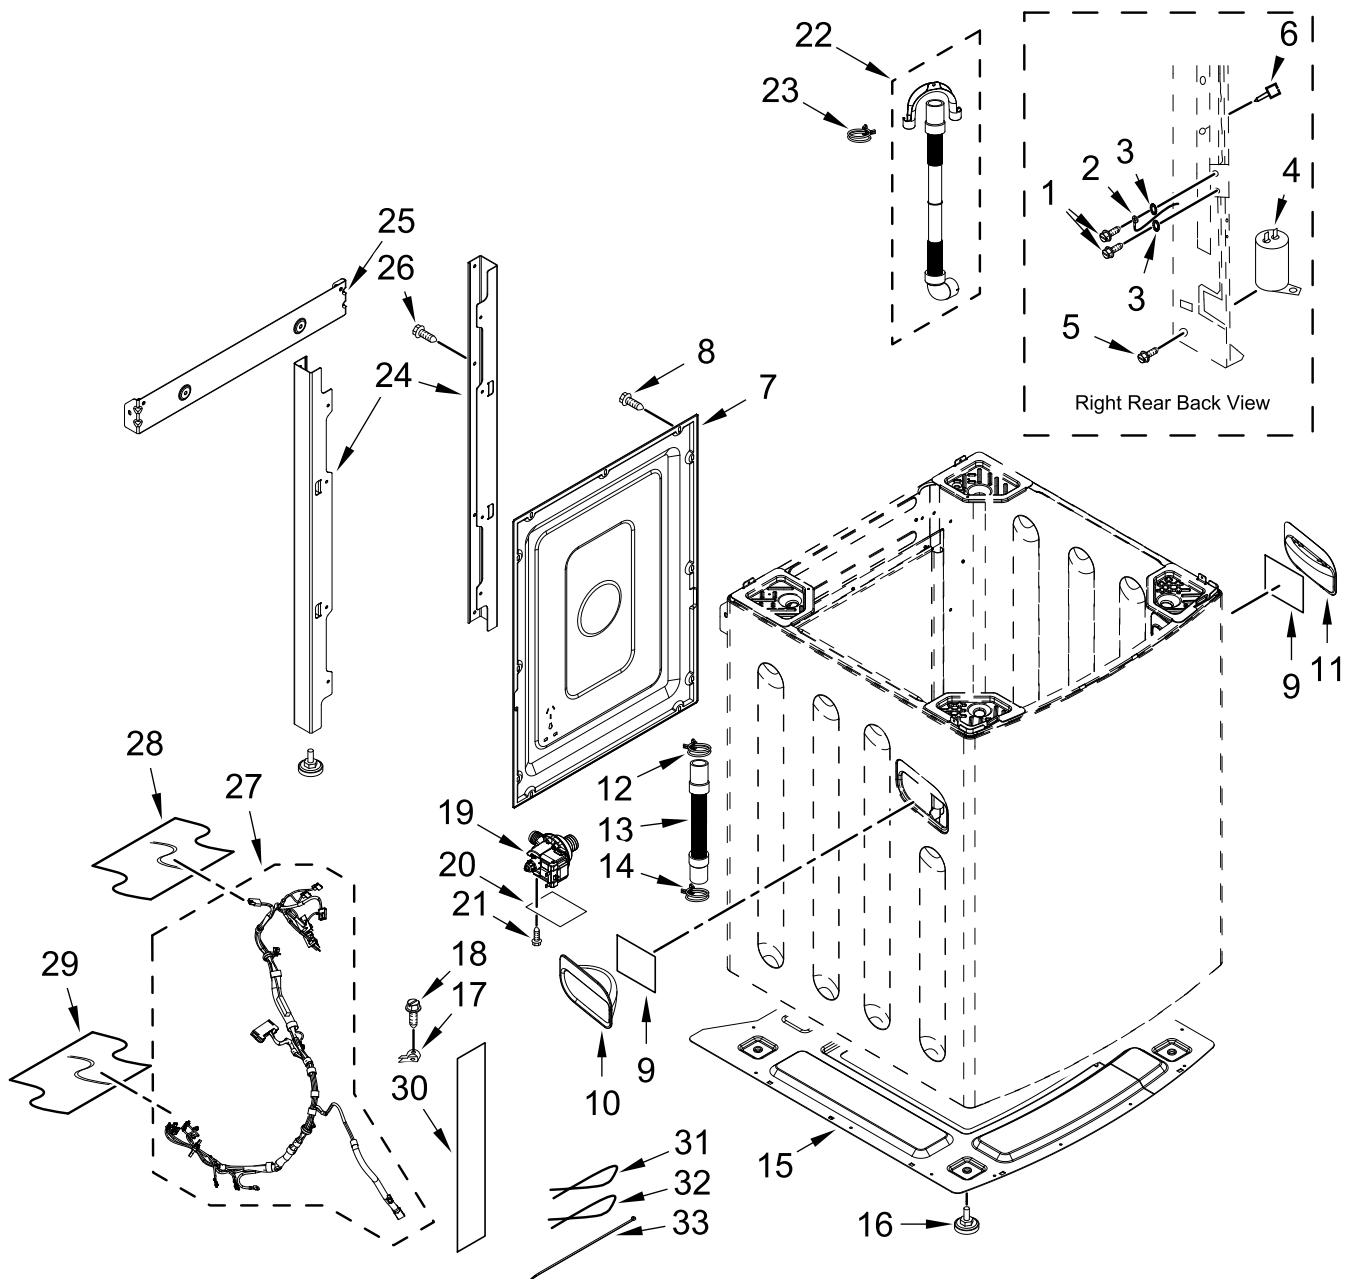

WASHER CABINET PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11176555	Screw	15	W11174488	Base, Washer	27	W11174407	Harness, Main Washer Wiring
2	W11178915	Wire, Ground	16	W11176431	Feet, Leveling	28	W11178922	Cloth, Harness Protector (Cabinet Connections Upper)
3	4159493	Lockwasher	17	W10883737	Clamp, Wire	29	W11178923	Cloth, Harness Protector (Motor Connections Lower)
4	W11176560	Capacitor	18	W10869499	Screw	30	W10883704	Sound Absorber (Cabinet)
5	W10882000	Screw	19	W10882103	Pump, Drain	31	W11178919	Twist Tie, Harness
6	W10883617	Retainer, Harness	20	W11174489	Pad, Drain Pump	32	W11178920	Twist Tie, Harness
7	W11178927	Panel, Rear	21	W10883733	Screw	33	W10883819	Cable Tie
8	W10869512	Screw	22	W11178924	Hose, Drain (Complete)			
9	W11174487	Foil, Insulation	23	W10883711	Clamp, Hose			
10	W11174485	Handle (Left)	24	W11204553	Bracket, Vertical Support			
11	W11174486	Handle (Right)	25	W11174490	Bracket, Cross Support			
12	W10883714	Clamp, Hose	26	W11174491	Screw			
13	W10882096	Hose (Tub to Pump)						
14	W10883610	Clamp, Hose						

WASHER BASKET AND GEAR PARTS

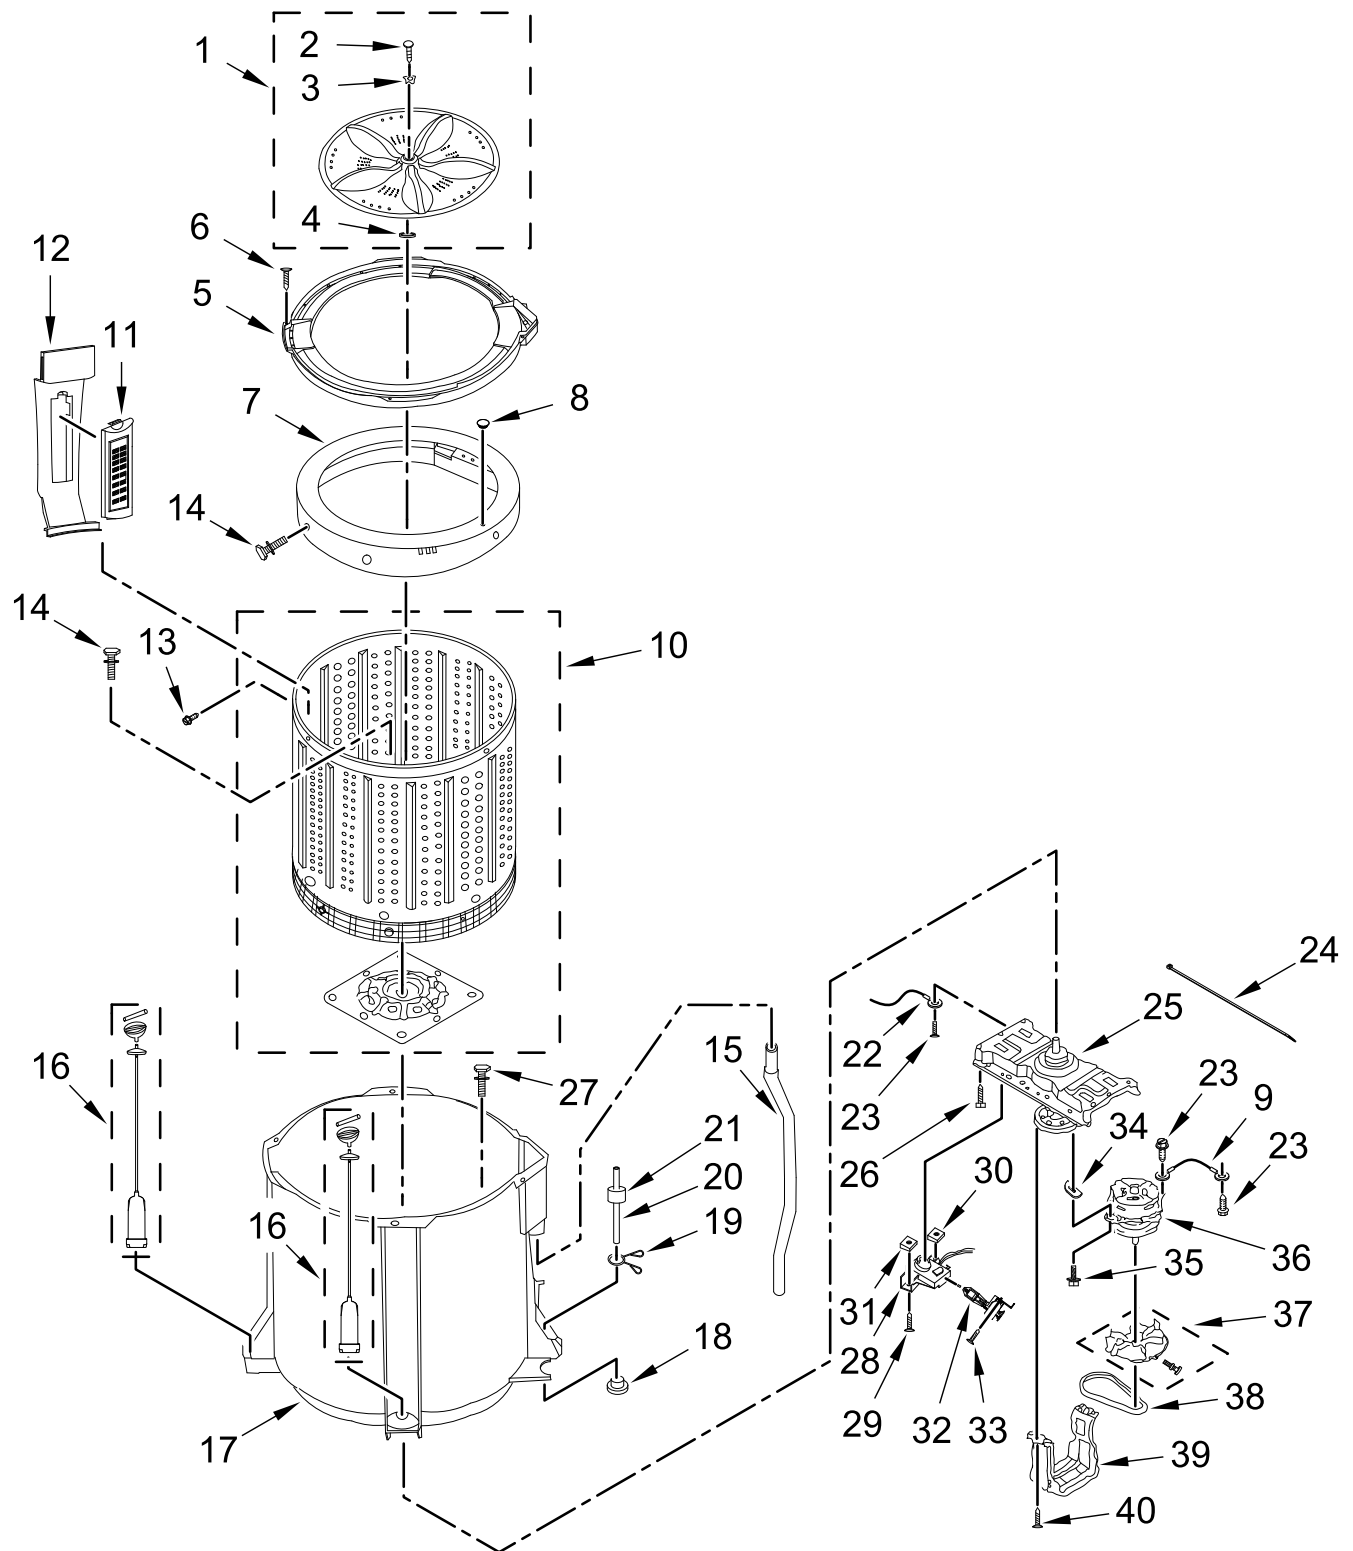

WASHER BASKET AND GEAR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10882346	Impeller (Complete)	16	W11174583	Suspension Damper Assembly (Includes 3 Standard, 1 Motor Side)	28	W11187717	Actuator, Shift
2	W10882362	Screw, Impeller				29	W10883805	Screw
3	W10882370	Washer, Lock				30	W11178899	Nut, Square (Left)
4	W10882372	Washer, Impeller	17	W10882132	Tub	31	W11178900	Nut, Square (Right)
5	W10882109	Tub Ring	18	W11178808	Cap, Outer Tub Air Hose	32	W10883809	Bracket, Actuator
6	W10869499	Screw				33	W10882000	Screw
7	W11187713	Tub, Adapter	19	W10883610	Clamp, Hose	34	W10883812	Spacer (Motor)
8	W11187715	Plug, Hole	20	W10882407	Hose, Pressure Switch	35	W10883817	Screw
9	W11178918	Wire, Ground (Motor)	21	W10882410	Sleeve, Hose	36	W11178896	Motor, Drive
10	W11178811	Basket Assembly	22	W11178915	Wire, Ground	37	W10882138	Pulley, Motor
11	W11178825	Filter, Lint	23	W11176555	Screw	38	W10882141	Belt, Drive
12	W11178822	Retainer, Lint Filter	24	W10883819	Cable Tie	39	W10882148	Bracket, Motor Support
13	W10869502	Screw	25	W10883783	Gearcase			
14	W11178813	Screw	26	W10883787	Screw	40	W10883826	Screw
15	W11209824	Hose, Overflow	27	W10883753	Screw			

OPTIONAL PARTS (NOT INCLUDED)

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
-----------------------------	-----------------	--------------------

	72017	White
--	-------	-------

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
-----------------------------	-----------------	--------------------

	350938	Gray Primer
	350930	White

PAINT, BULK (1 QT.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
-----------------------------	-----------------	--------------------

	799344	White (Uncut)
--	--------	---------------

WATER SYSTEM PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
-----------------------------	-----------------	--------------------

	DRNEXT4	Drain Hose Extension Kit
	285834	Siphon Break Kit
	3363920	Adapter, Standpipe 2" Diameter to 1" Diameter

COUPLING

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
-----------------------------	-----------------	--------------------

	384496	Coupling, Hose Extension Kit
--	--------	------------------------------

ACCESSORY PARTS|THE FOLLOWING POWER CORD CAN BE ORDERED. IMPORTANT: CHECK LOCAL WIRING CODE REQUIREMENTS TO SEE IF ONE OF THESE MEETS YOUR NEEDS.

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
-----------------------------	-----------------	--------------------

	PT220L	4', 30 Amp, 3 Wire, Dryer Cord
	PT400L	4', 30 Amp, 4 Wire, Dryer Cord
	PT500L	6', 30 Amp, 3 Wire, Dryer Cord
	PT600L	6', 30 Amp, 4 Wire, Dryer Cord

ACCESSORY PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
-----------------------------	-----------------	--------------------

	8212526	Washer, Drip Tray
	8212546RP	Inlet Hoses, 4 Ft. (Two Black Hoses W/ Straight Ends and 4 Rubber Washers)
	8212641RP	Inlet Hoses, 5 Ft. (Two Black Hoses W/ Straight Ends and 4 Rubber Washers)
	8212545RP	Inlet Hoses, 5 Ft. (One Red Hose and One Blue Hose W/ Straight Ends and 4 Rubber Washers)
	8212487	Inlet Hoses, 5 Ft. (Two Braided Hoses W/Straight Ends and 4 Rubber Washers)
	8212637RP	Inlet Hoses, 6 Ft. (Two Black Hoses W/ One Straight End and One 90 Degree End and 4 Rubber Washers)
	8212638RP	Inlet Hoses, 6 Ft (Two Braided Hoses W/ One Straight End and One 90 Degree End and 4 Rubber Washers)
	8212656RP	Inlet Hoses, 10 Ft. (Two Black Hoses W/ Straight Ends and 4 Rubber Washers)
	285448A	Hose Washers (Package of 4)
	285452A	Hose Screen (Package of 2)
	W10135699	Affresh Odor Remover